

# SNAPPER®

## REAR ENGINE RIDER

### SERIES 15

#### MODELS

250815B

250815BE


280915BE

300915BE

301215BE


331415BVE

331415KVE

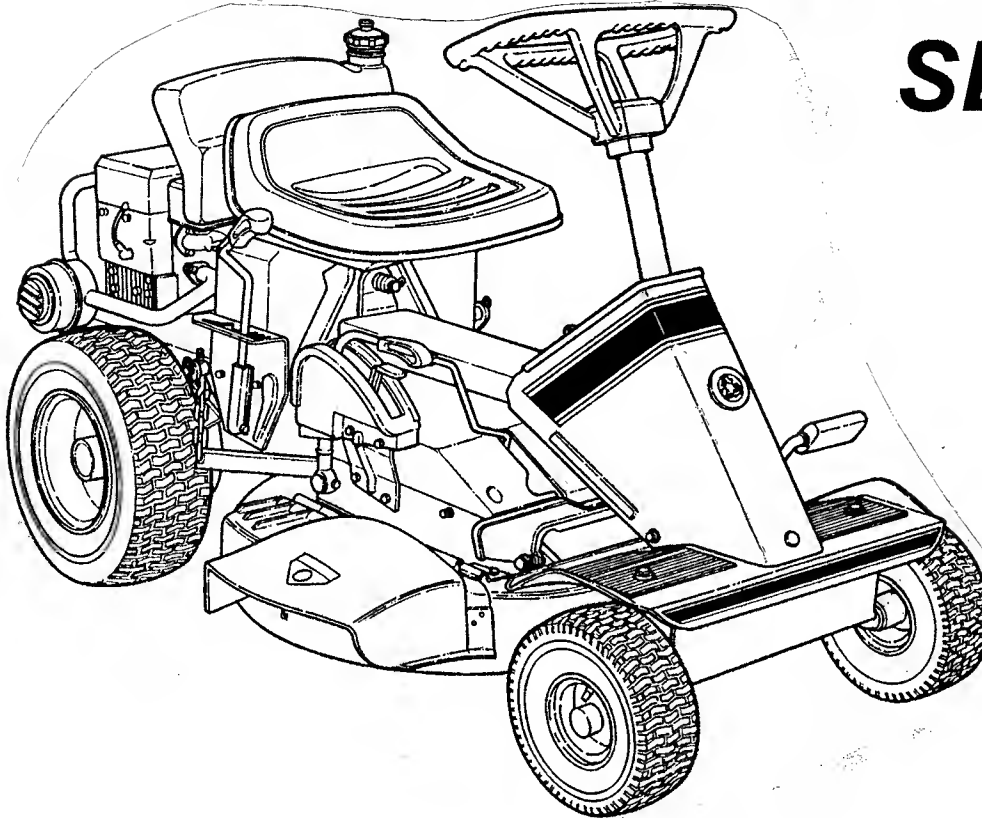


#### CONTENTS

DESCRIPTION	PAGE(S)
WHEELS, TIRES .....	2-3
FRONT END, STEERING .....	4-5
MAIN CASE (Solid Seat Mount) .....	6-7
MAIN CASE (Hinged Seat Mount) .....	8-9
DIFFERENTIAL .....	10-11
CHAIN CASE ASSEMBLY .....	12-13
SMOOTH CLUTCH ASSEMBLY .....	14-15
CUTTING DECKS, DEFLECTORS .....	16-17
RAILS, LIFT ARMS, CAM LIFT .....	18-19
BLADE STOP PEDALS .....	20
BELTS, BRAKES, INTERLOCK (25" Models) .....	21
BELTS, BRAKES, INTERLOCK (28", 30", 33" Models) .....	22
SPINDLE ASSEMBLY .....	23
DRIVE DISC ASSEMBLY .....	24
FUEL TANK, OPERATORS SEAT .....	25
ENGINE & EXHAUST MUFFLER .....	26
THROTTLE CONTROLS .....	27
ELECTRICAL SYSTEMS .....	28-37
ACCESSORIES & ATTACHMENTS .....	38
DECALS .....	39-41
WIRING SCHEMATICS .....	42-45

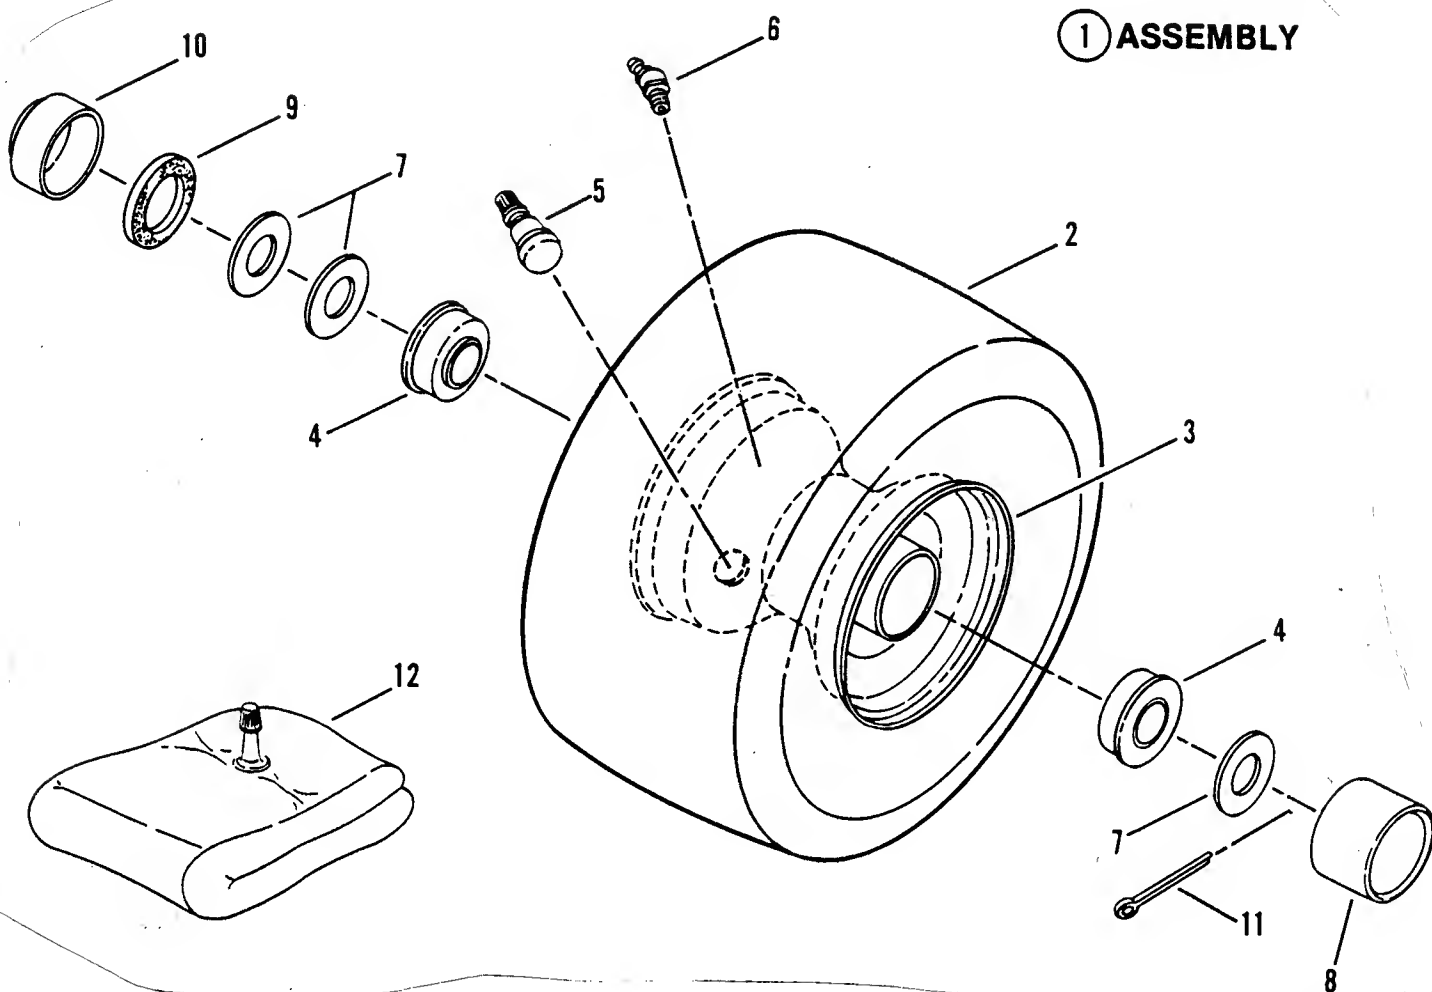


ITEM	PART NO.	DESCRIPTION
1	5-2268	ASSEMBLY, Front Tire & Rim (Complete) (Includes Items 2, 3, 4, 6, 12)
-	5-2267	ASSEMBLY, Front Tire & Rim (Includes Items 2 Thru 6)
-	5-3304	FRONT WHEEL 11.00x4.00 (Includes items 2,3,5)
2	2-3828	TIRE, 4.10/3.50 x 4
2A	2-7933	TIRE 11:00 4:00x4
3	1-7146	RIM (For 4.10/3.50 x 4 Tire)
4	1-1807	BEARING, Ball
5	1-2234	VALVE, Air (Snap-in)
6	1-4669	FITTING Lube
7	1-0935	WASHER
8	1-1022	CAP, Hub
9	1-1032	SEAL, Felt
10	3-1038	CAP, Dust
11	9-0364	PIN, 5/32 x 1" Cotter Hair
12	1-0821	TUBE, Inner (For 4.10/3.50 x 4 Tire)

## ① ASSEMBLY

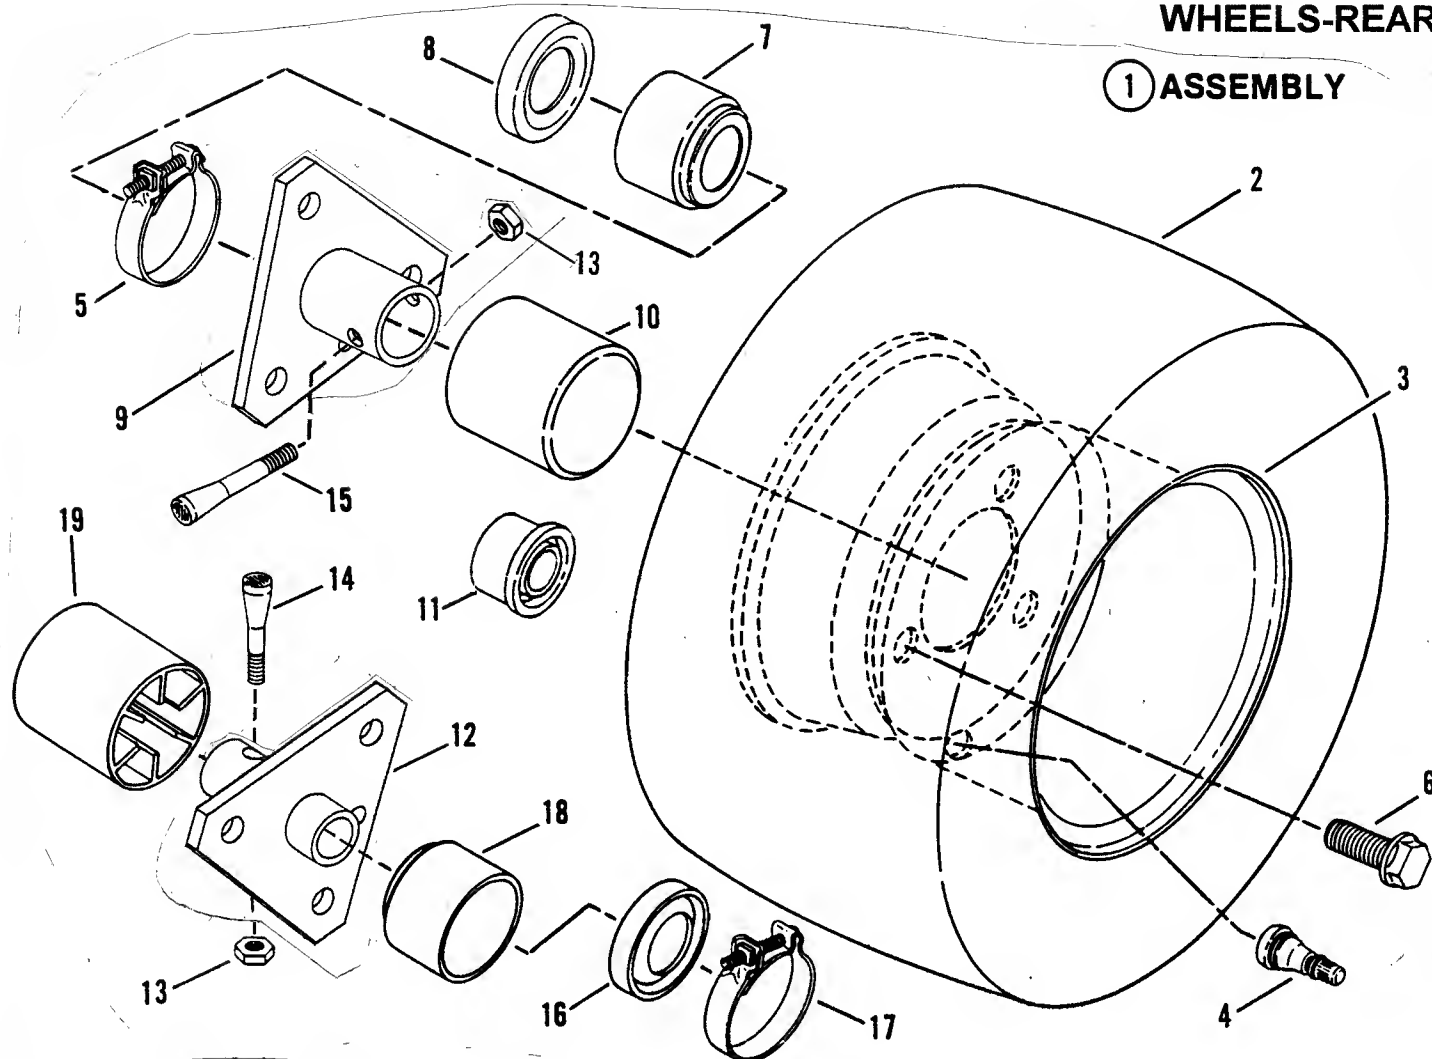


ITEM	PART NO.	DESCRIPTION
1	5-2269	ASSEMBLY, Rear Tire & Rim (Includes Items 2A, 3A, 4) (25" Models)
-	5-2270	ASSEMBLY, Rear Tire & Rim (Includes Items 2B, 3B, 4) (28" & 30" Mods.)
-	5-2671	ASSEMBLY, Rear Tire & Rim (Includes Items 2C, 3C, 4) (33" Models)
2A	2-3889	TIRE, Std., 16-4.80 x 8 (25" Models)
2B	1-5968	TIRE, Wide, 16-6.50 x 8 (28" & 30" Models)
2C	2-2584	TIRE, Ext Wide, 16-7.50 x 8 (33" Models)
3A	1-2162	RIM, Std., (For 16-4.80 x 8 Tire) (25" Models)
3B	1-2163	RIM, Wide, (For 16-6.50 x 8 Tire) (28" & 30" Models)
3C	1-7145	RIM, Ext Wide, (For 16/7.50 x 8 Tire) (33" Models)
4	1-2234	VALVE, Air (Snap-in)
5	1-1037	CLAMP, Right Hand (8, 9 & 10 HP)
-	1-4542	CLAMP, Right Hand (12, 13, 14 HP)
6	9-1502	BOLT, 1/2-20 x 3/4" Lug (6)
7	3-1732	BOOT, Right Hand (8, 9 & 10 HP)
7A	1-4541	BOOT, Right Hand (12, 13, 14 HP)
8	1-1817	SEAL, Oil
9	4-0433	HUB, Rear Wheel (Right Hand)
10	2-3895	CAP, Hub
11	1-0967	CAP, Seal (Left Hand) (8 & 10 HP)
12	4-0434	HUB, Rear Wheel
13	1-1201	NUT, 5/16-24 Hex Center Lock
14	1-1035	BOLT, 5/16-24 x 1-5/8" Tapered (Left Hand)
15	1-1013	BOLT, 5/16-24 x 2" Tapered (Right Hand)
16	1-4662	SEAL, Oil (Left Hand)
17	1-2332	CLAMP, (Left Hand) (12, 13, 14 HP)
18	1-4658	BOOT, (Left Hand) (12, 13, 14 HP)
19	2-3522	CAP, Hub (Left Hand)

# FRONT END STEERING

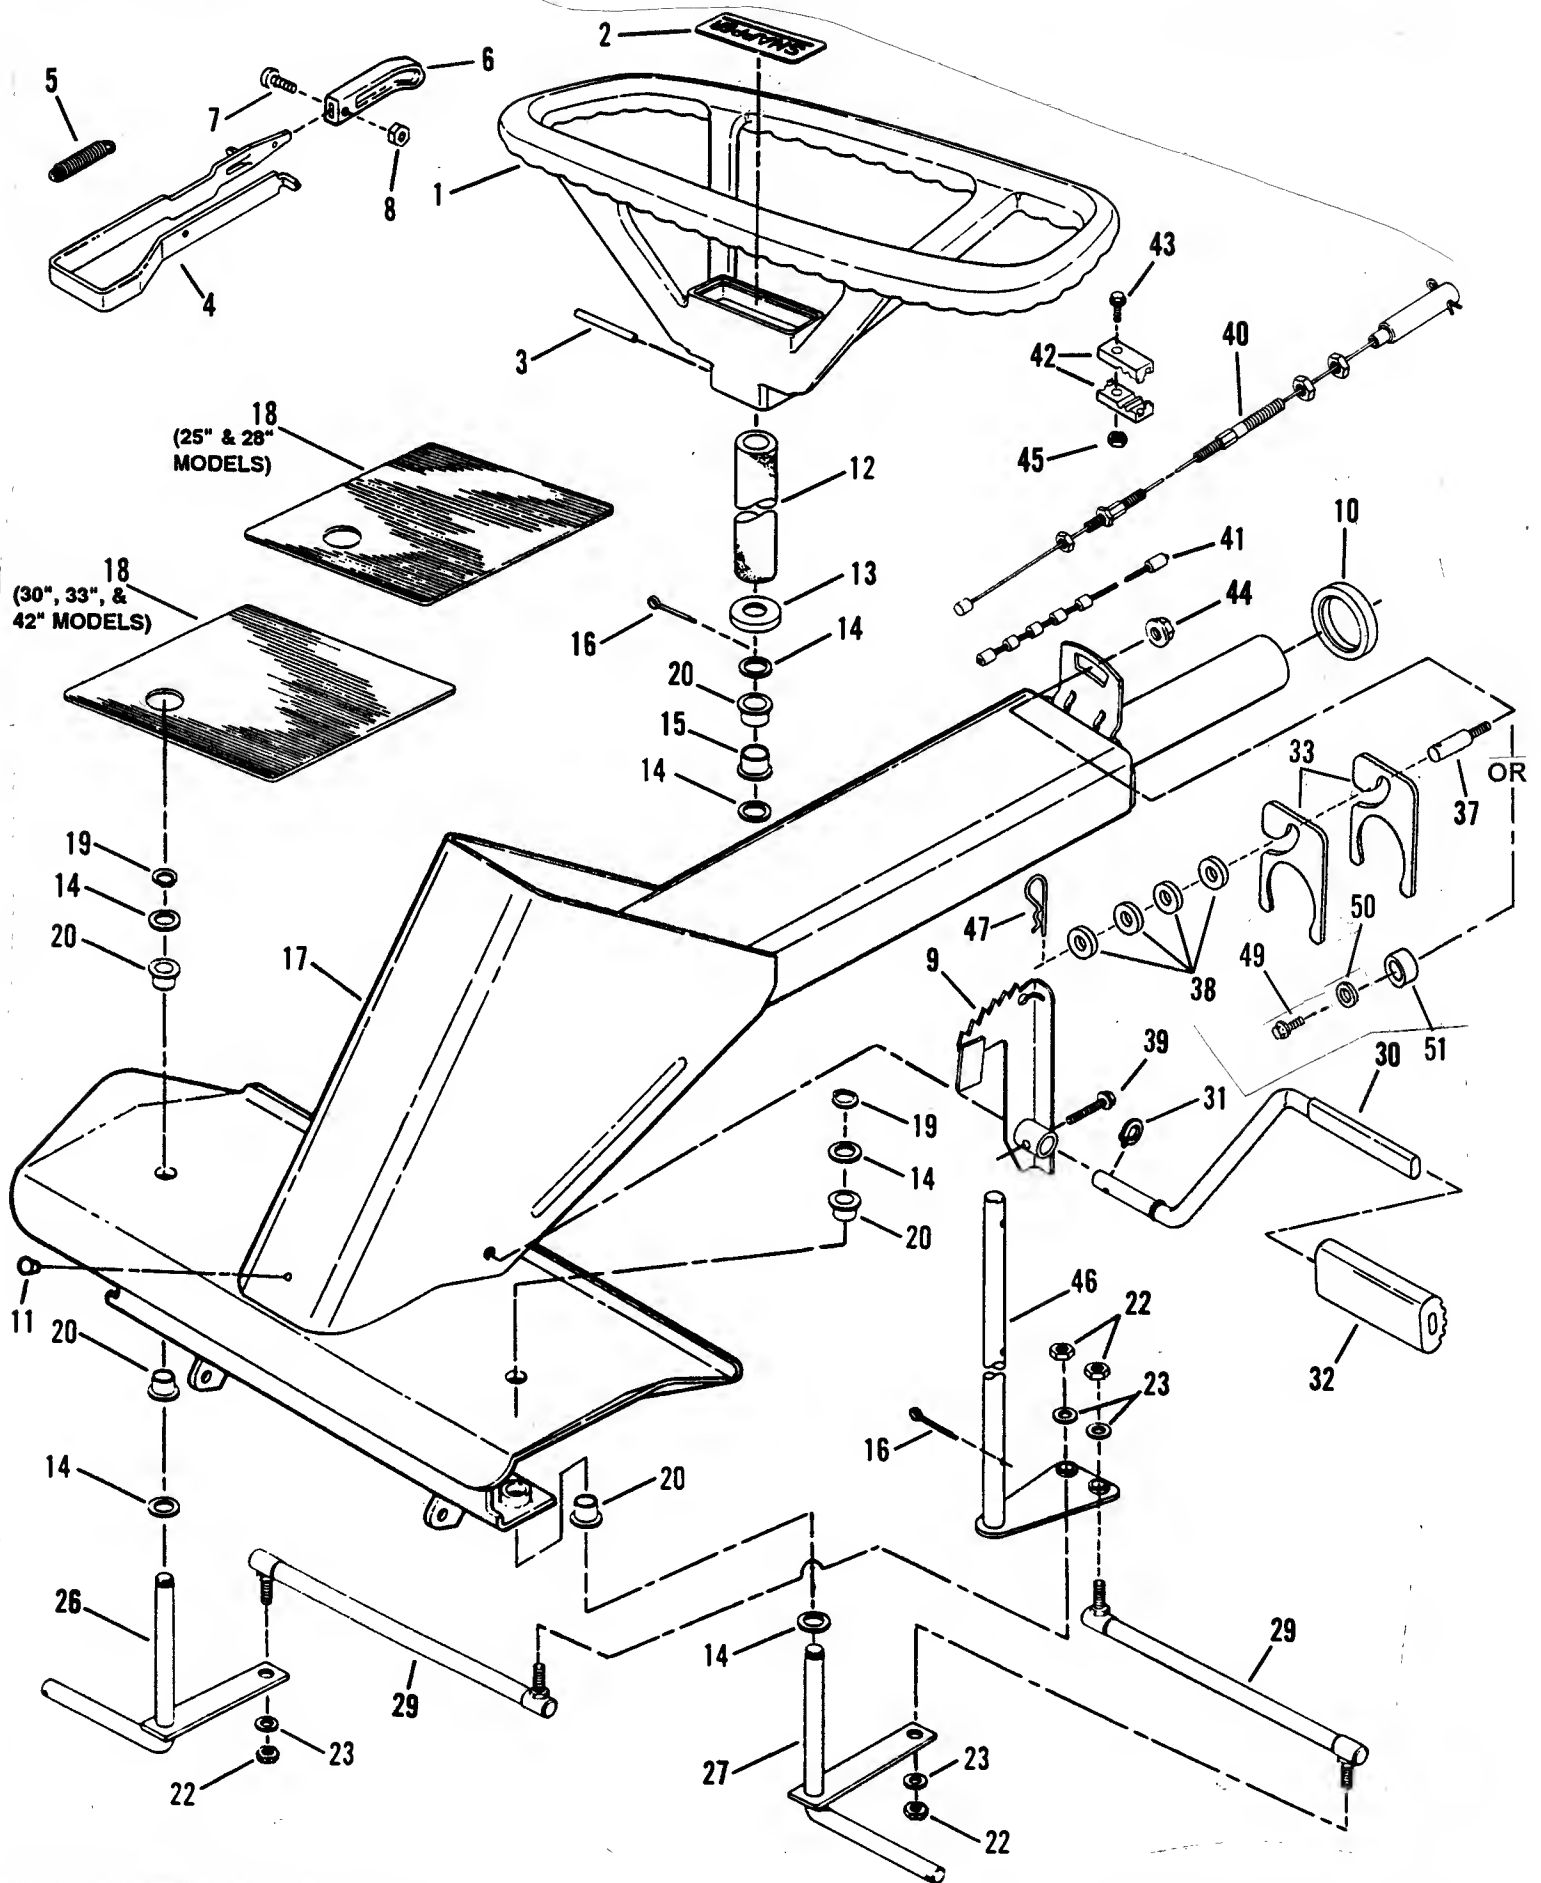


# FRONT END STEERING

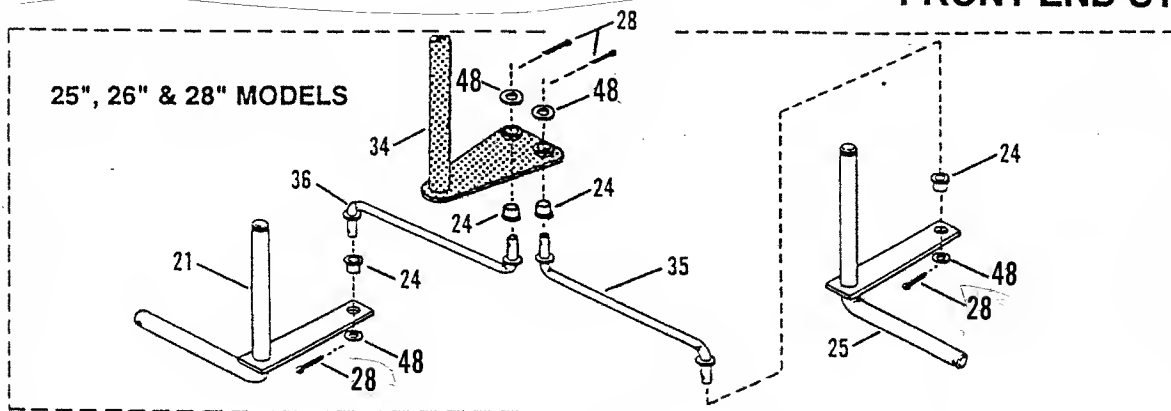


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	5-1941	ASSEMBLY, Steering Wheel (Includes Item 2)	26A	4-1683	PIN, Wide King (Right Side), 11.0 Tires
2	2-3781	DECAL, Snapper	27	4-1685	PIN, Wide King (Left Side)
3	1-3862	PIN, 1/4 x 1-1/2" Roll	27A	4-1684	PIN, Wide King (Left Side), 11.0 Tires
4	3-3882	BRACKET, Clutch/Brake	28	9-1516	PIN, 5/32 x 1" Cotter (2)
5	2-3666	SPRING	29	2-4935	TIE-ROD (2) (30" & 33" Models)
6	2-3655	KNOB	30	2-4735	PEDAL, Clutch/Brake
7	9-1017	SCREW, #8-32 x 3/8" Cross Recess	31	1-0739	RING, Retaining
8	9-1018	NUT, #8-32 Hex	32	1-2661	PAD, Clutch/Brake Pedal
9	4-1476	ARM, Clutch/Brake	33	2-8395	SPACER, Pivot
10	2-2372	SPACER, Main Tube	34	4-1381	SHAFT, Steering (Narrow Front End)
11	1-6704	PLUG	35	2-4915	TIE-ROD, Left Side (25" & 28" Models)
12	2-3667	COVER, Steering Shaft (Foam)	36	2-4916	TIE-ROD, Right Side (25" & 28" Models)
13	2-3671	COVER	37	2-8332	STUD, 3/8-24 x 5/8" Shoulder
14	1-0935	WASHER, 3/4 Flat	38	2-2881	SPACER (2)
15	1-9166	BUSHING, 3/4" Steering Shaft	39	9-1151	SCREW, 5/16-18 x 1-1/4" Self-Tapping
16	9-1515	PIN, 3/16 x 1-1/2" Cotter (2)	40	2-2344	CABLE, Brake
17	4-1393	FRAME, Front (25" & 28" Models)	41	2-9913	CABLE, Clutch
--	4-1622	FRAME, Front (30" & 33" Models)	42	3-4174	UNION, Cable
18	2-3660	PAD, Foot (Right Side) (25" & 28" Models) (Shown)	43	9-1495	BOLT, 1/4-20 x 3/4" Hex Flange Lock
--	2-3663	PAD, Foot (Right Side) (30" & 33" Models) (Shown)	44	7-6979	NUT, 3/8-16 Hex Nylock
--	2-3659	PAD, Foot (Left Side) (Not Shown) (25" & 28" Models)	45	9-0372	NUT, 1/4-20 Hex Center Lock
--	2-3662	PAD, Foot (Left Side) (Not Shown) (30" & 33" Models)	46	4-1553	SHAFT, Steering (Wide Front End)
19	1-0746	RING, Retaining (2)	47	1-2867	PIN, 1/8 x 2-9/16" Hair
20	1-0986	BEARING (5)	48	9-1514	WASHER, 3/8 Flat
21	4-1688	PIN, Narrow King (Right Side)	49	9-1198	SCREW, 3/8-16x5/8 Self Tapping
22	9-1297	NUT, 5/16-24 Hex (4)	50	9-0517	WASHER, 3/8 Flat
23	9-1315	WASHER, 5/16 Split Lock (4)	51	2-8774	SPACER, .39x.625x.19
24	1-3321	BUSHING (4)			
25	4-1687	PIN, Narrow King (Left Side)			
26	4-1686	PIN, Wide King (Right Side)			

# MAIN CASE (Solid Seat Mount)

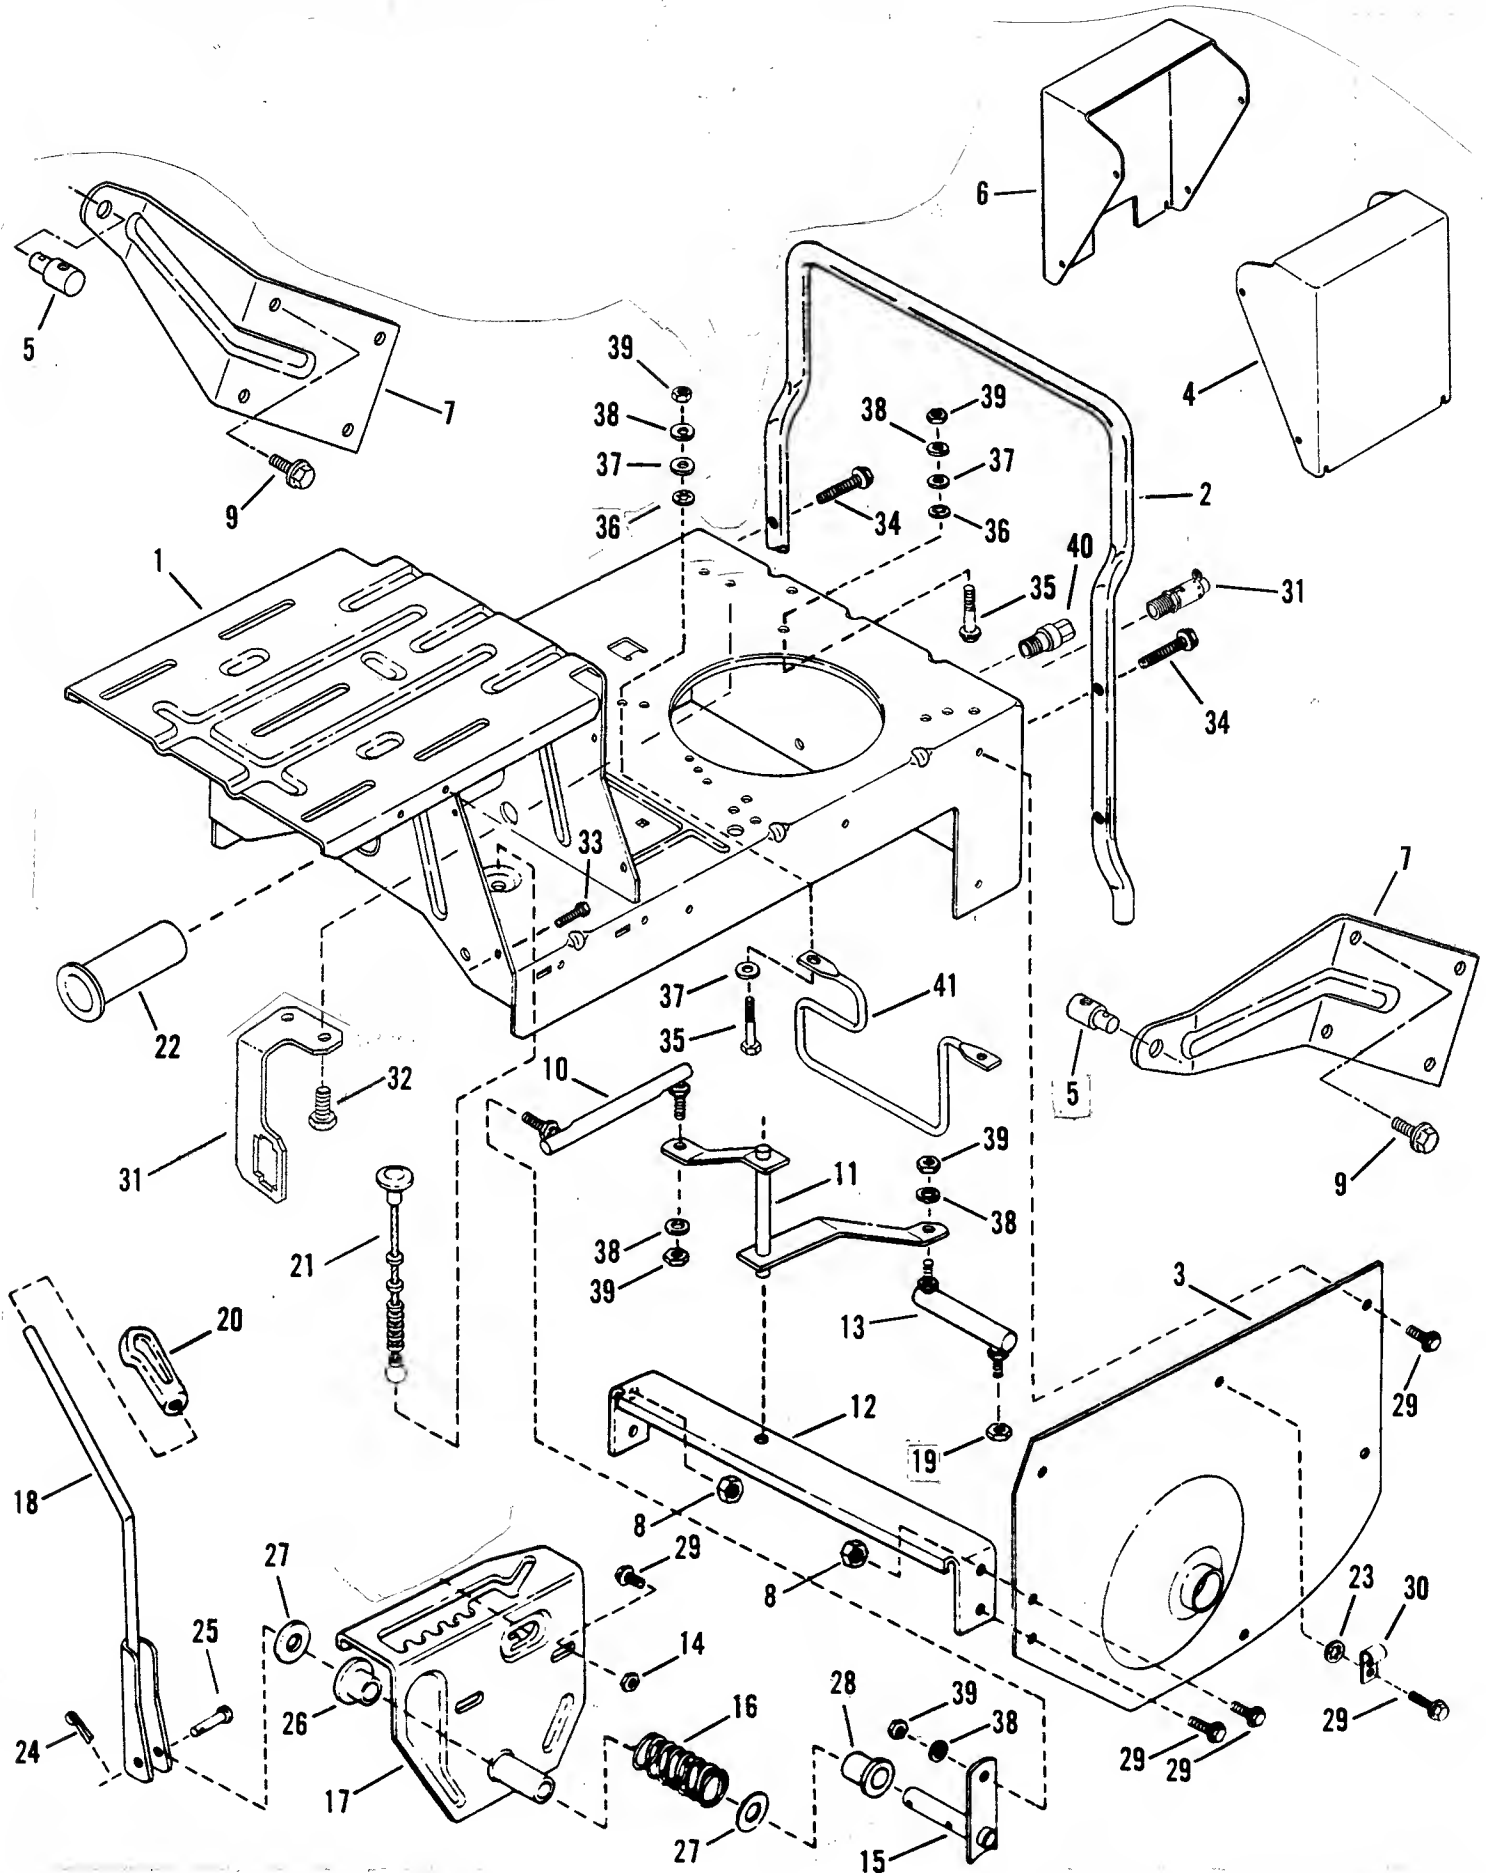

ITEM	PART NO.	DESCRIPTION
1	4-1714	CASE, Main (Standard)
2	3-6367	BUMPER, Rear
3	3-7285	FENDER, Left Hand (See page 12 for related parts)
4	2-8990	COVER, Battery
5	2-8200	SWIVEL (2)
6	2-8989	COVER, Switch
7	3-4299	WING, Rear (Models 28", 30" & 33" Only)
8	9-0585	NUT, 5/16-18 Hex Flange Lock (2)
9	9-0793	SCREW, 5/16-18 x 3/4" Self-Tapping (4)
10	2-3676	LINK, Shift (Long)
11	4-1384	ARM, Shift
12	3-3799	BRACE, Cross
13	1-1018	LINK, Shift (Short)
14	9-0196	NUT, 5/16-18 Hex (2)
15	4-0598	ARM, Shift Handle
16	1-0754	SPRING, Shift Handle
17	4-1232	DETENT, Shift
18	4-0599	HANDLE, Shift
19	1-0969	NUT, Flange Lock 5/16-24
20	2-3656	KNOB, Shift Handle
21	2-7429	CABLE, Deck Support (25" Models Only)
22	2-2509	BUSHING, Pilot
23	9-0391	WASHER, 5/16 Internal Tooth Lock
24	9-0037	PIN, 3/32 x 3/4" Cotter Hair
25	2-3914	PIN, 1/4 x 1-3/4" Tapered Clevis
26	1-9245	BUSHING, Nylon
27	3-1036	WASHER, Thrust (2)
28	1-9246	BUSHING, Nylon (2)
29	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (14)
30	1-2652	CLIP, Wire
31	3-4724	BRACKET, Switch
32	9-0981	SCREW, Self Tapping, 10-32x1/4
33	9-1272	FASTENER, 1/4x3/4 Ratchet (6)
34	9-1506	SCREW, 5/16-18 x 1-1/2" Self-Tapping (4)
35	9-1513	SCREW, 5/16-24 x 1-3/4" Hex Head Cap (4)
36	1-1791	RETAINER, 5/16 Bolt (4)
37	9-1296	WASHER, 5/16" Flat (4)
38	9-1315	WASHER, 5/16" Split Lock (8)
39	9-1297	NUT, 5/16-24 Hex (8)
40	2-2486	DRAIN, Oil (Short)
41	1-7653	GUIDE, Belt (25" Models)
--	2-8596	GUIDE, Belt (28" Models)
--	2-8651	GUIDE, Belt (30" & 33" Briggs)

# MAIN CASE (Hinged Seat Mount)

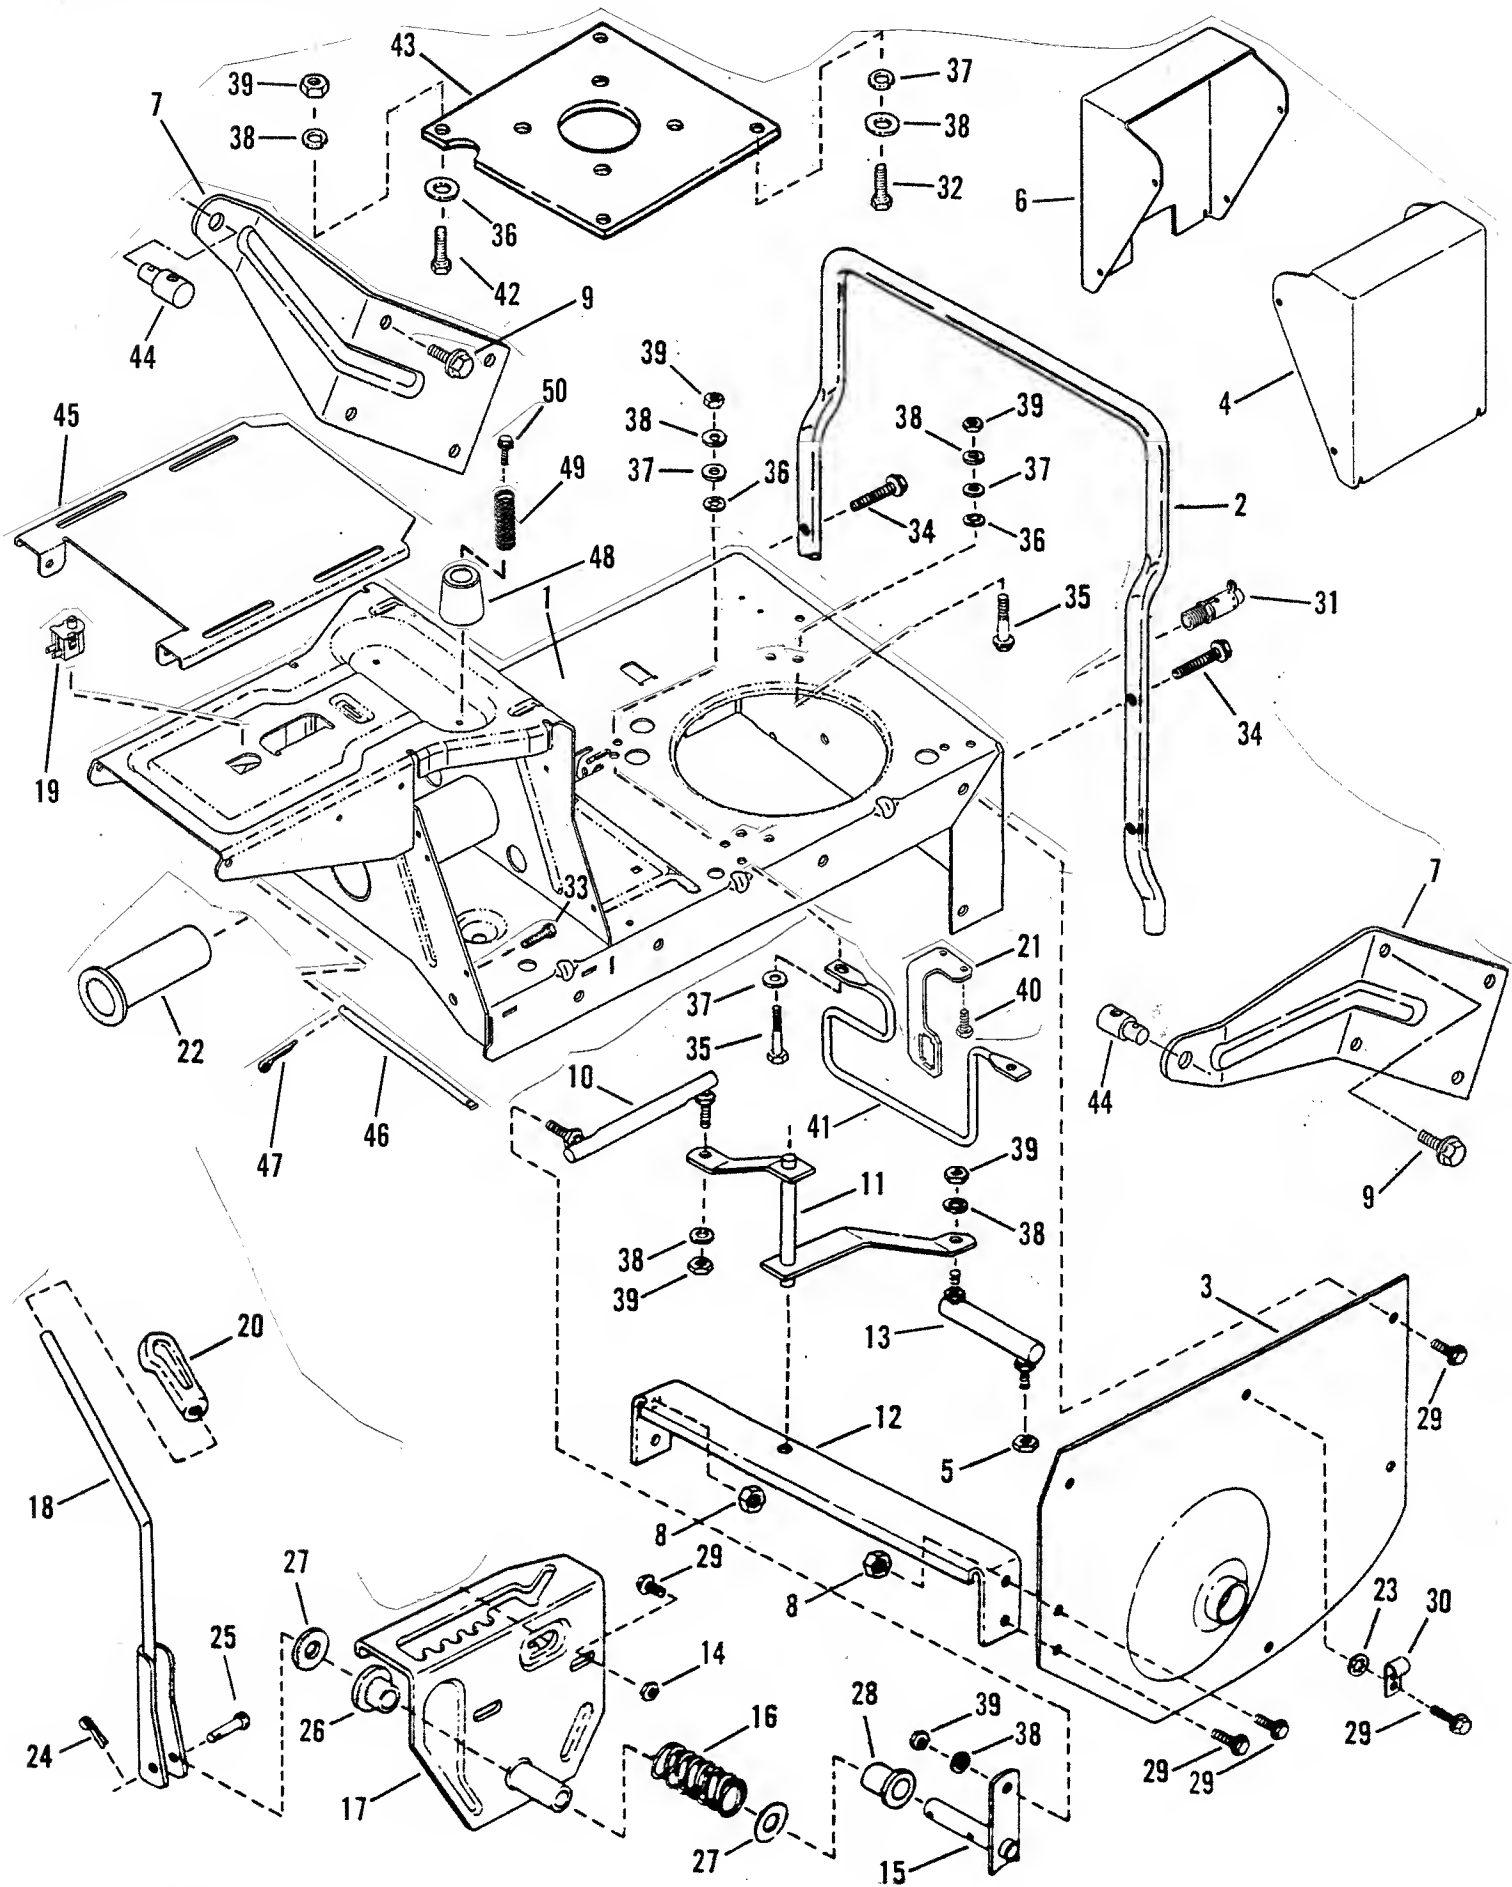




## MAIN CASE (Hinged Seat Mount)

ITEM	PART NO.	DESCRIPTION
1	4-1715	CASE, Main, Units 3314K
-	4-1700	CASE, Main, Units 3012 & 3314 (Briggs)
2	3-6367	BUMPER, Rear
3	3-7285	FENDER, Left Hand (See page 12 for related parts)
4	2-8990	COVER, Battery
5	1-0969	NUT, 5/16-24 Hex Flange Lock
6	2-8989	COVER, Switch
7	3-4299	WING, Rear (Models 28", 30" & 33" Only)
8	9-0585	NUT, 5/16-18 Hex Flange Lock (2)
9	9-0793	SCREW, 5/16-18 x 3/4" Self-Tapping (4)
10	2-3676	LINK, Shift (Long)
11	4-1384	ARM, Shift
12	3-3799	BRACE, Cross
13	1-1018	LINK, Shift (Short)
14	9-0196	NUT, 5/16-18 Hex (2)
15	4-0598	ARM, Shift Handle
16	1-0754	SPRING, Shift Handle
17	4-1232	DETENT, Shift
18	4-0599	HANDLE, Shift
19	2-3354	SWITCH, Seat
20	2-3656	KNOB, Shift Handle
21	3-4724	BRACKET, Switch
22	2-2509	BUSHING, Pilot
23	9-0391	WASHER, 5/16 Internal Tooth Lock
24	9-0037	PIN, 3/32 x 3/4" Cotter
25	2-3914	PIN, 1/4 x 1-3/4" Tapered Clevis
26	1-9245	BUSHING, Nylon
27	3-1036	WASHER, Thrust (2)
28	1-9246	BUSHING, Nylon (2)
29	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (14)
30	1-2652	CLIP, Wire
31	2-7972	DRAIN, Oil (1/4 Turn)
32	7-7692	SCREW
33	9-1272	FASTENER, 1/4 x 3/4 Ratchet (6)
34	9-1506	SCREW, 5/16-18 x 1-1/2" Self-Tapping (4)
35	9-1513	SCREW, 5/16-24 x 1-3/4" Hex Head Cap (4)
36	1-1791	RETAINER, 5/16 Bolt (4)
37	9-1296	WASHER, 5/16" Flat (4)
38	9-1315	WASHER, 5/16" Split Lock (8)
39	9-1297	NUT, 5/16-24 Hex (8)
40	9-1080	SCREW, Self Tap, #10x1/4 (2)
41	2-8651	GUIDE, Belt (12 & 14 Briggs)
--	2-8876	GUIDE, Belt (33" Kohler)
42	9-0238	SCREW, 5/16-24x1" Hex Head Cap (4)
43	3-4093	PLATE, Engine*
44	2-8200	SWIVEL (2)
45	3-4664	PLATE, Seat
46	2-8656	PIN, Hinge
47	9-0360	PIN, 1/16 x 3/4" Cotter
48	2-8540	CUSHION
49	2-8657	SPRING, Seat O.P.C.
50	9-0539	SCREW, Self Tapping 1/4-20x1/2

\* NOTE: Item 43 is used on the 14 HP Kohler engines only.


# DIFFERENTIAL, R.H. FENDER

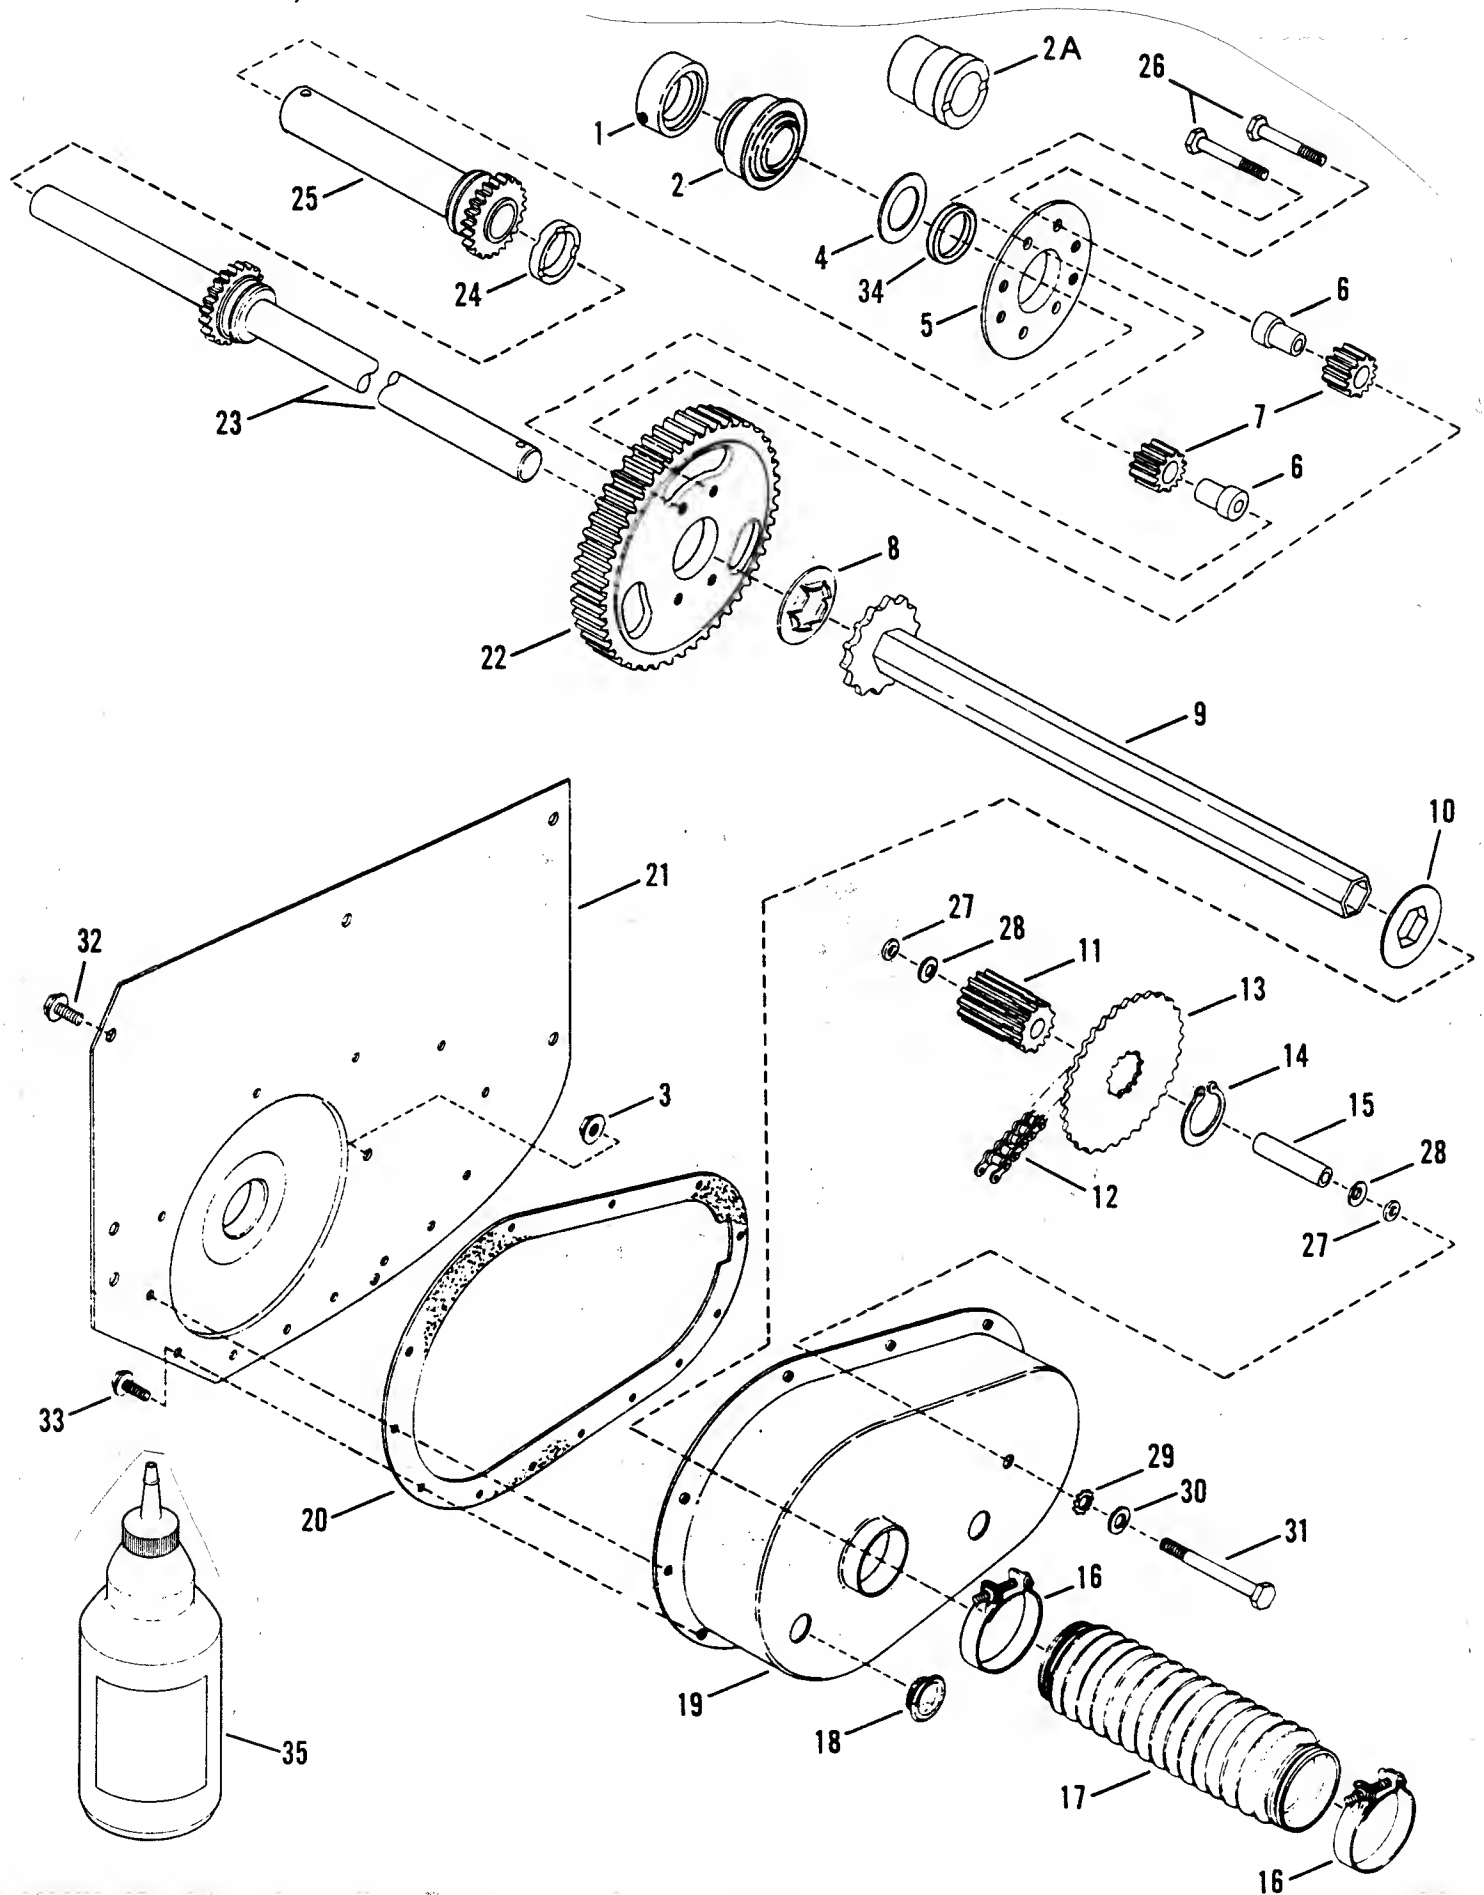

ITEM	PART NO.	DESCRIPTION
1	1-4401	COLLAR, Lock (Includes #9-0201 Set Screw)
2	1-8822	BALL BEARING, Axle (R. H. Fender) (10, 12, 13 & 14 HP Models)
2A	1-2296	BEARING, Axle (R. H. Fender) (8, 9 & 10 HP Models)
3	1-0969	NUT, 5/16-24 Hex Flange Lock
4	3-1079	WASHER, Thrust
5	3-8067	PLATE, Differential
6	2-2115	SPACER, Pinion (4)
7	2-1127	GEARS, Differential Pinion
8	1-1072	WASHER, Thrust
9	5-1584	ASSEMBLY, Drive Hex Tube
10	1-0988	WASHER, Hex Insert
11	1-0964	GEAR, 11 Teeth-10 Pitch
12	1-0941	CHAIN, 46 Pitch (#35)
13	2-1129	SPROCKET
14	1-0965	RING, Retaining
15	2-1128	SPACER
16	1-1037	CLAMP, Boot (2)
17	1-7083	BOOT, Oil Seal
18	1-1024	PLUG, Oil Fill & Check
19	3-7279	CASE, Transmission
20	2-8762	GASKET, Transmission Case
21	3-7957	FENDER, Right Hand (Commercial Models)
--	3-7280	FENDER, Right Hand (Standard Models)
22	2-1158	GEAR, 63 Teeth-10 Pitch
23	4-7763	AXLE, Long (Includes Gear) (Use Only With Short Axle #5-7398)
24	1-1026	SPACER
25	5-7398	AXLE, Short (Includes Gear) (Use Only With Long Axle #4-7763)
26	1-2333	SCREW, 5/16-24 x 1-5/8" Hex Cap Special Lock (4)
27	1-1156	O-RING, 5/16 (2)
28	1-1782	WASHER, Belleville (2)
29	9-0395	WASHER, 5/16 External Tooth Lock
30	9-0188	WASHER, 5/16 Flat
31	1-1042	BOLT, 5/16-24 x 2-5/8" Idler
32	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping (11)
33	9-0362	SCREW, 1/4-20 x 5/8" Self-Tapping (13)
34	3-2107	SPACER, Short Axle
35	1-6541	GREASE, Transmission (24 oz. Req.)
--	6-0411	KIT, Differential (Includes items 2A & 3-7280 Fender)
--	6-0662	KIT, Differential (Includes items 2 & 3-7957 Fender)

# CHAIN CASE, L.H. FENDER

## ① ASSEMBLY


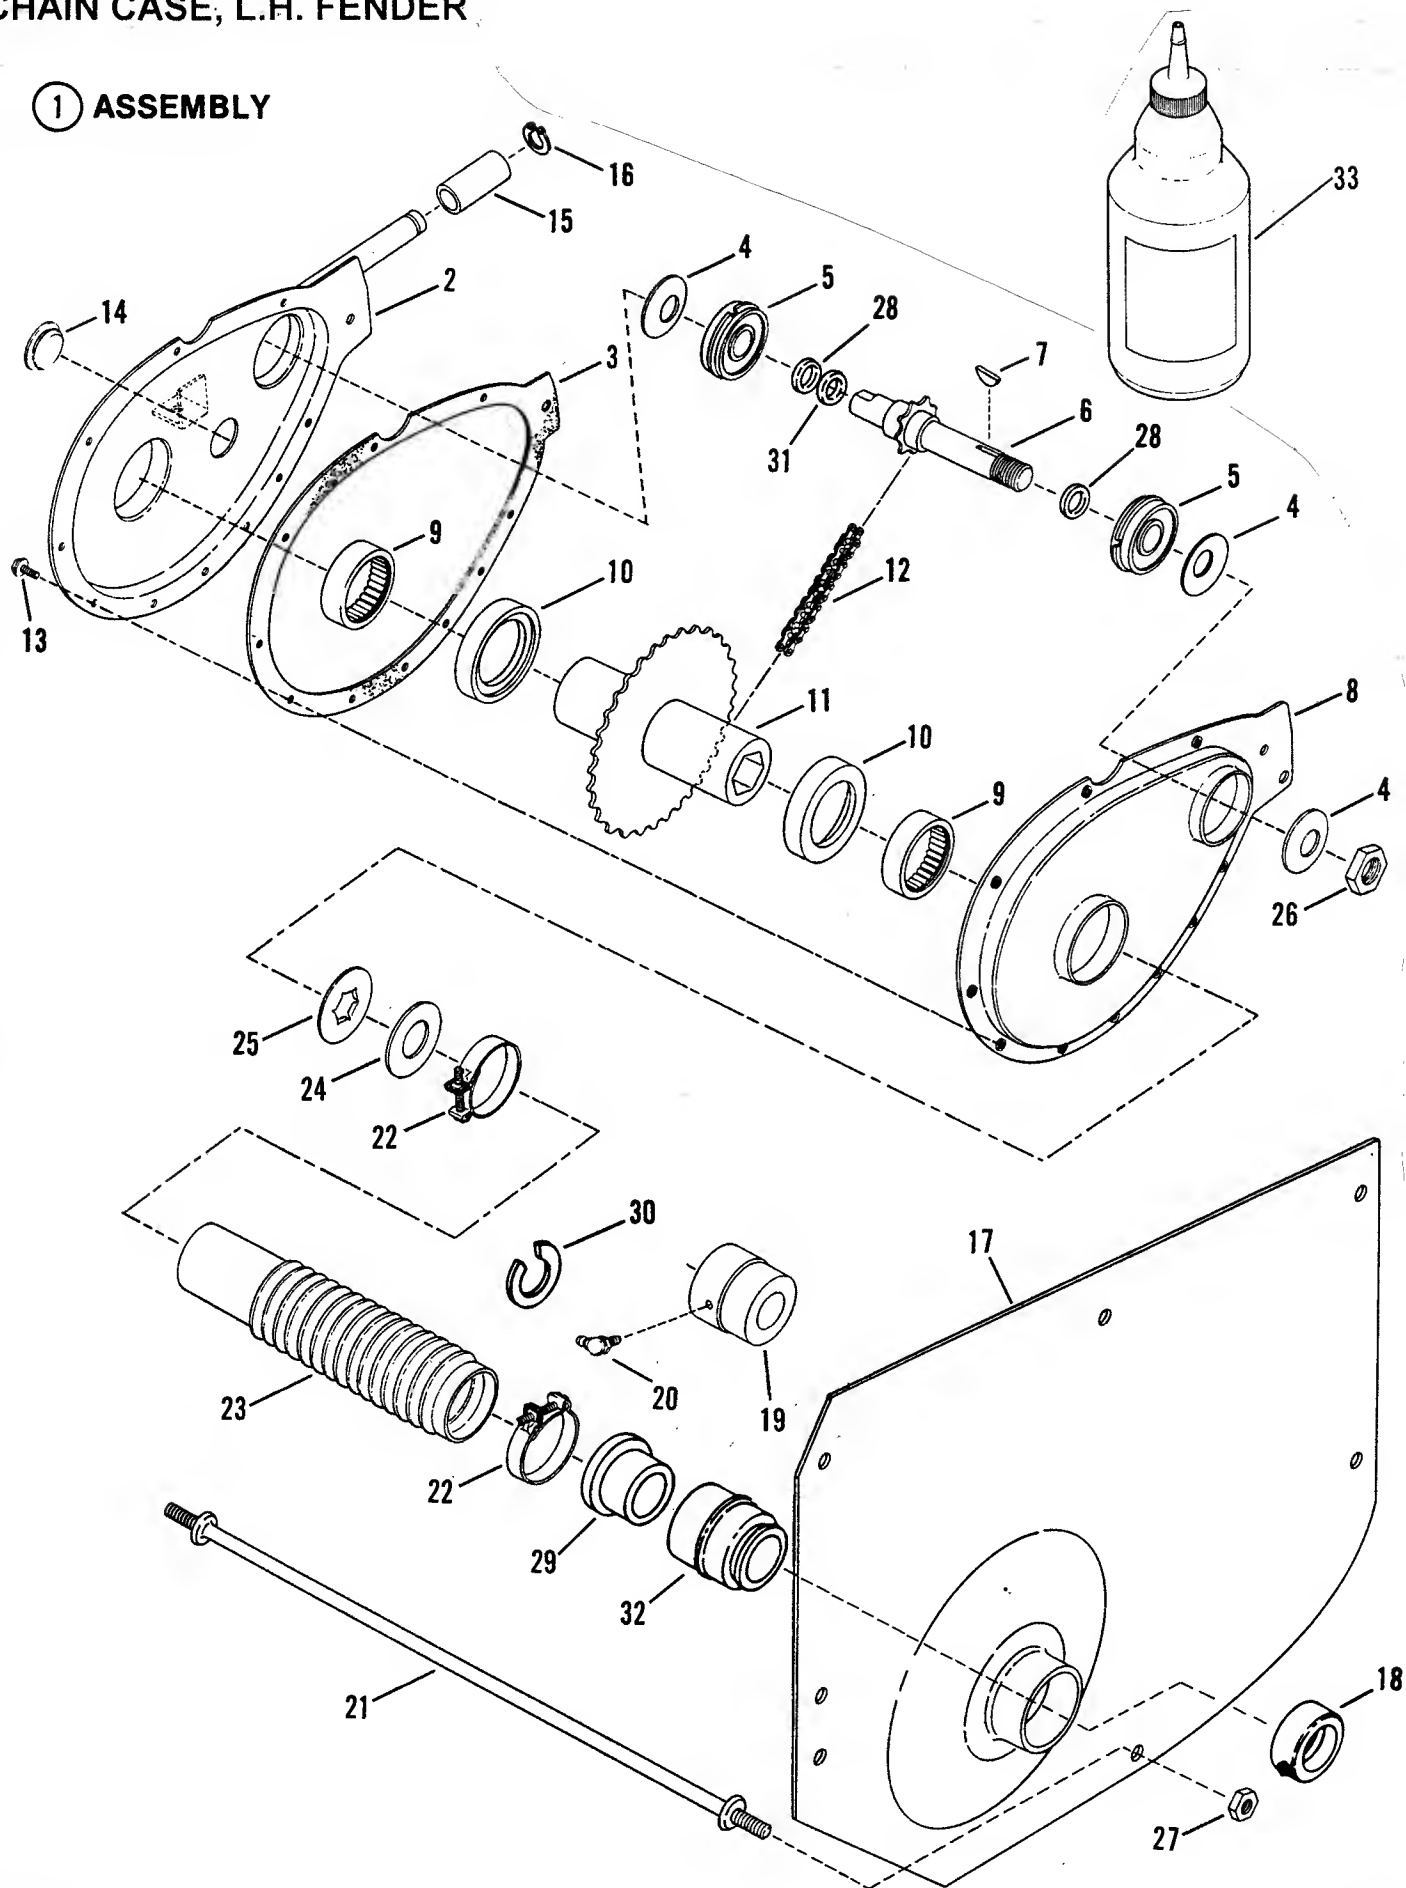


ITEM	PART NO.	DESCRIPTION
1	5-2683	ASSEMBLY, Chain Case (Includes Items 2 Thru 13,15,16,31 Thru 35)
2	4-1136	CASE, Sprocket
3	2-8761	GASKET, Case Cover
4	1-1121	WASHER, Belleville (2)
5	1-0756	BEARING, Ball (2)
6	1-8963	SPROCKET & SHAFT
7	1-0614	KEY, 1/8 x 5/8" Woodruff
8	3-9778	COVER, Chain Case
9	1-0942	BEARING, Needle (2)
10	1-1086	WASHER, Nylon Thrust (2)
11	4-0355	HUB & SPROCKET
12	1-0941	CHAIN
13	9-0307	SCREW, #10-24 x 5/8" Self-Tapping (10)
14	1-1024	PLUG, Oil Fill & Check
15	2-2785	ROLLER
16	1-0776	RING, Retaining
17	3-7285	FENDER, Left Hand (8, 10, 12 HP Models)
--	3-7958	FENDER, Left Hand (12.5, 14, 16 HP Models)
18	1-4625	COLLAR, Lock (Includes #9-0776 Set Screw-1/4-20 x 1/4")
19	5-0918	BEARING, Left Hand Fender (Includes Item 20) (8, 10, 12 HP Models)
20	1-3324	FITTING, Lube
21	1-1070	ROD, Cross-Tie
22	1-1037	CLAMP, Boot (2)
23	1-7084	BOOT, Oil Seal
24	1-1071	WASHER, Thrust Nylon
25	1-1072	WASHER, Thrust
26	9-1505	NUT, 5/8-18 Hex Lock
27	1-0969	NUT, 5/16-24 Hex Flange Lock
28	1-9260	O-RING (2)
29	2-3447	SPACER
30	1-2271	WASHER, Shim (As Required)
31	2-7981	WASHER, Shim (6)
32	1-4624	BEARING, Left Hand Fender (12.5, 14, 16 HP Models)
--	5-1451	ASSEMBLY, Left Hand Fender (Includes 3-7958 Fender & 1-4624 Bearing) (12.5, 14, 16 HP Models)
33	6-1017	GREASE

NOTE: See Pages 14 & 15 For Illustration Of Brake Lever Assembly And Related Parts.


# SMOOTH CLUTCH ASSEMBLY

## ① ASSEMBLY

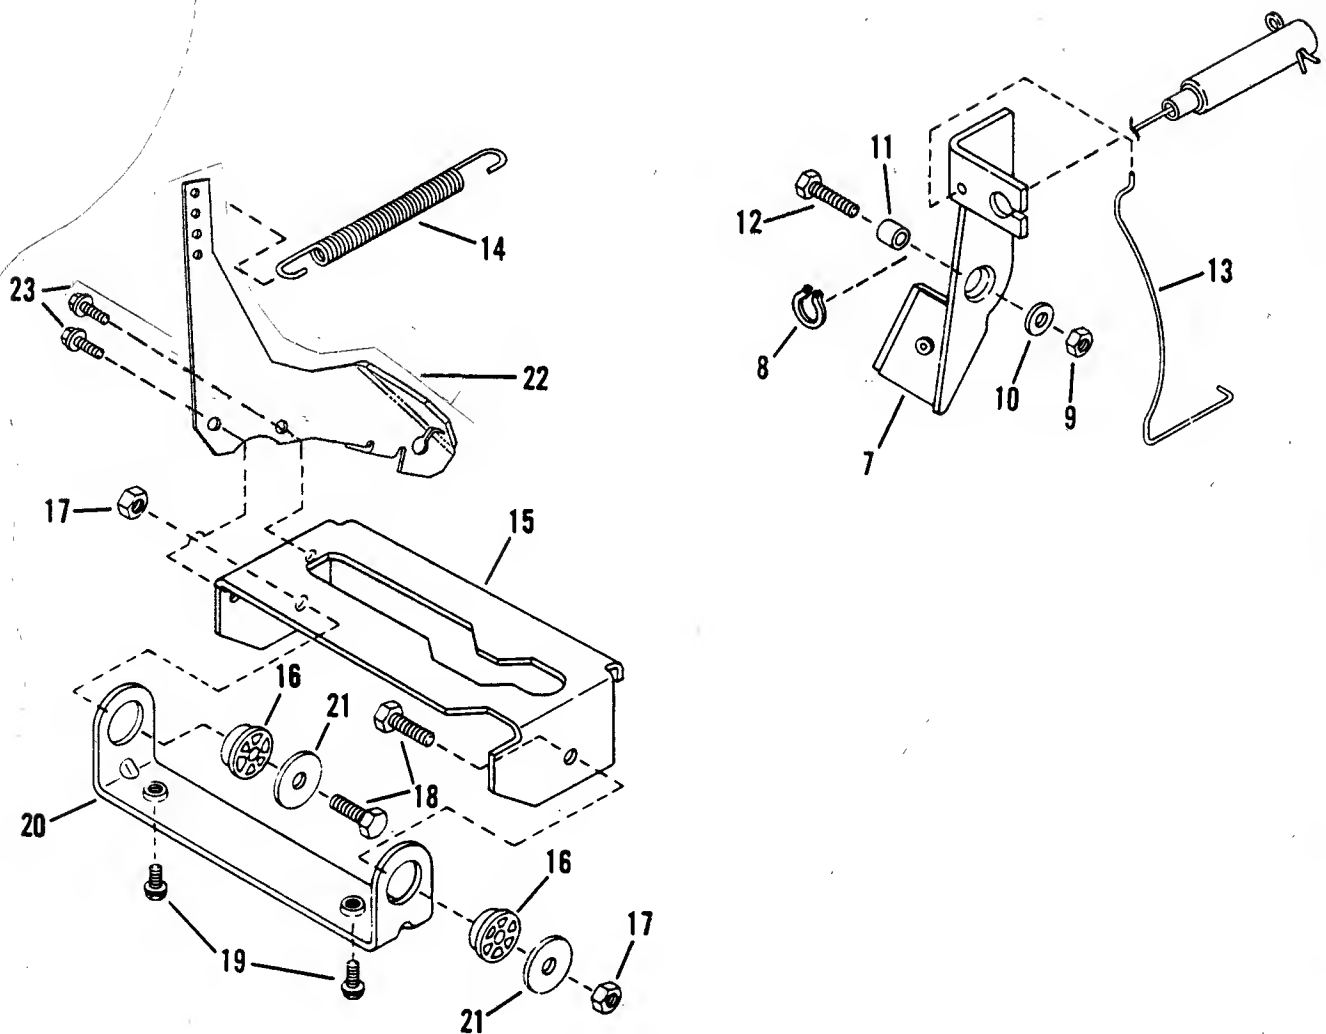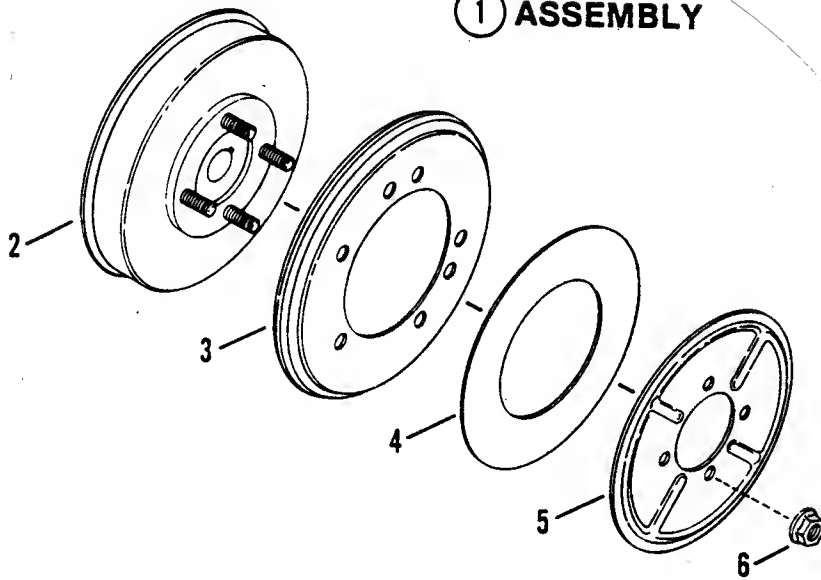

ITEM	PART NO.	DESCRIPTION
1	5-3114	ASSEMBLY, Smooth Clutch (Includes Items 2 Thru 6)
2	5-7338	HUB, Driven Disc
3	5-3103	DISC, Driven
4	1-4523	WASHER, Thrust
5	3-2331	PLATE
6	9-0585	NUT, 5/16-18 Hex Flange Lock (4)
7	5-2497	ASSEMBLY, Brake Lever (Includes Brake Lining & Rivet)
8	1-2313	RING, Retaining
9	9-0303	NUT, 1/4-28 Hex Top Lock
10	9-1294	WASHER, 1/4 Flat
11	1-0916	SPACER
12	9-1504	SCREW, 1/4-28 x 1" Hex Head Cap
13	2-2371	SPRING, Brake Return
14	1-2264	SPRING, Clutch Brake
15	3-3292	LIFT, Yoke
16	1-1048	BEARING, Yoke (2)
17	1-1201	NUT, 5/16-24 Hex Center Lock (2)
18	9-0238	SCREW, 5/16-24 x 1" Hex Head Cap (2)
19	9-1198	SCREW, 3/8-16 x 5/8" Self-Tapping
20	3-3291	COLLAR, Yoke
21	1-1763	WASHER, 5/16 Flat (2)
22	3-4725	ARM, Yoke
23	9-1084	SCREW, 1/4-20 x 3/8" Self-Tapping (2)

# CUTTING DECKS, DEFLECTORS

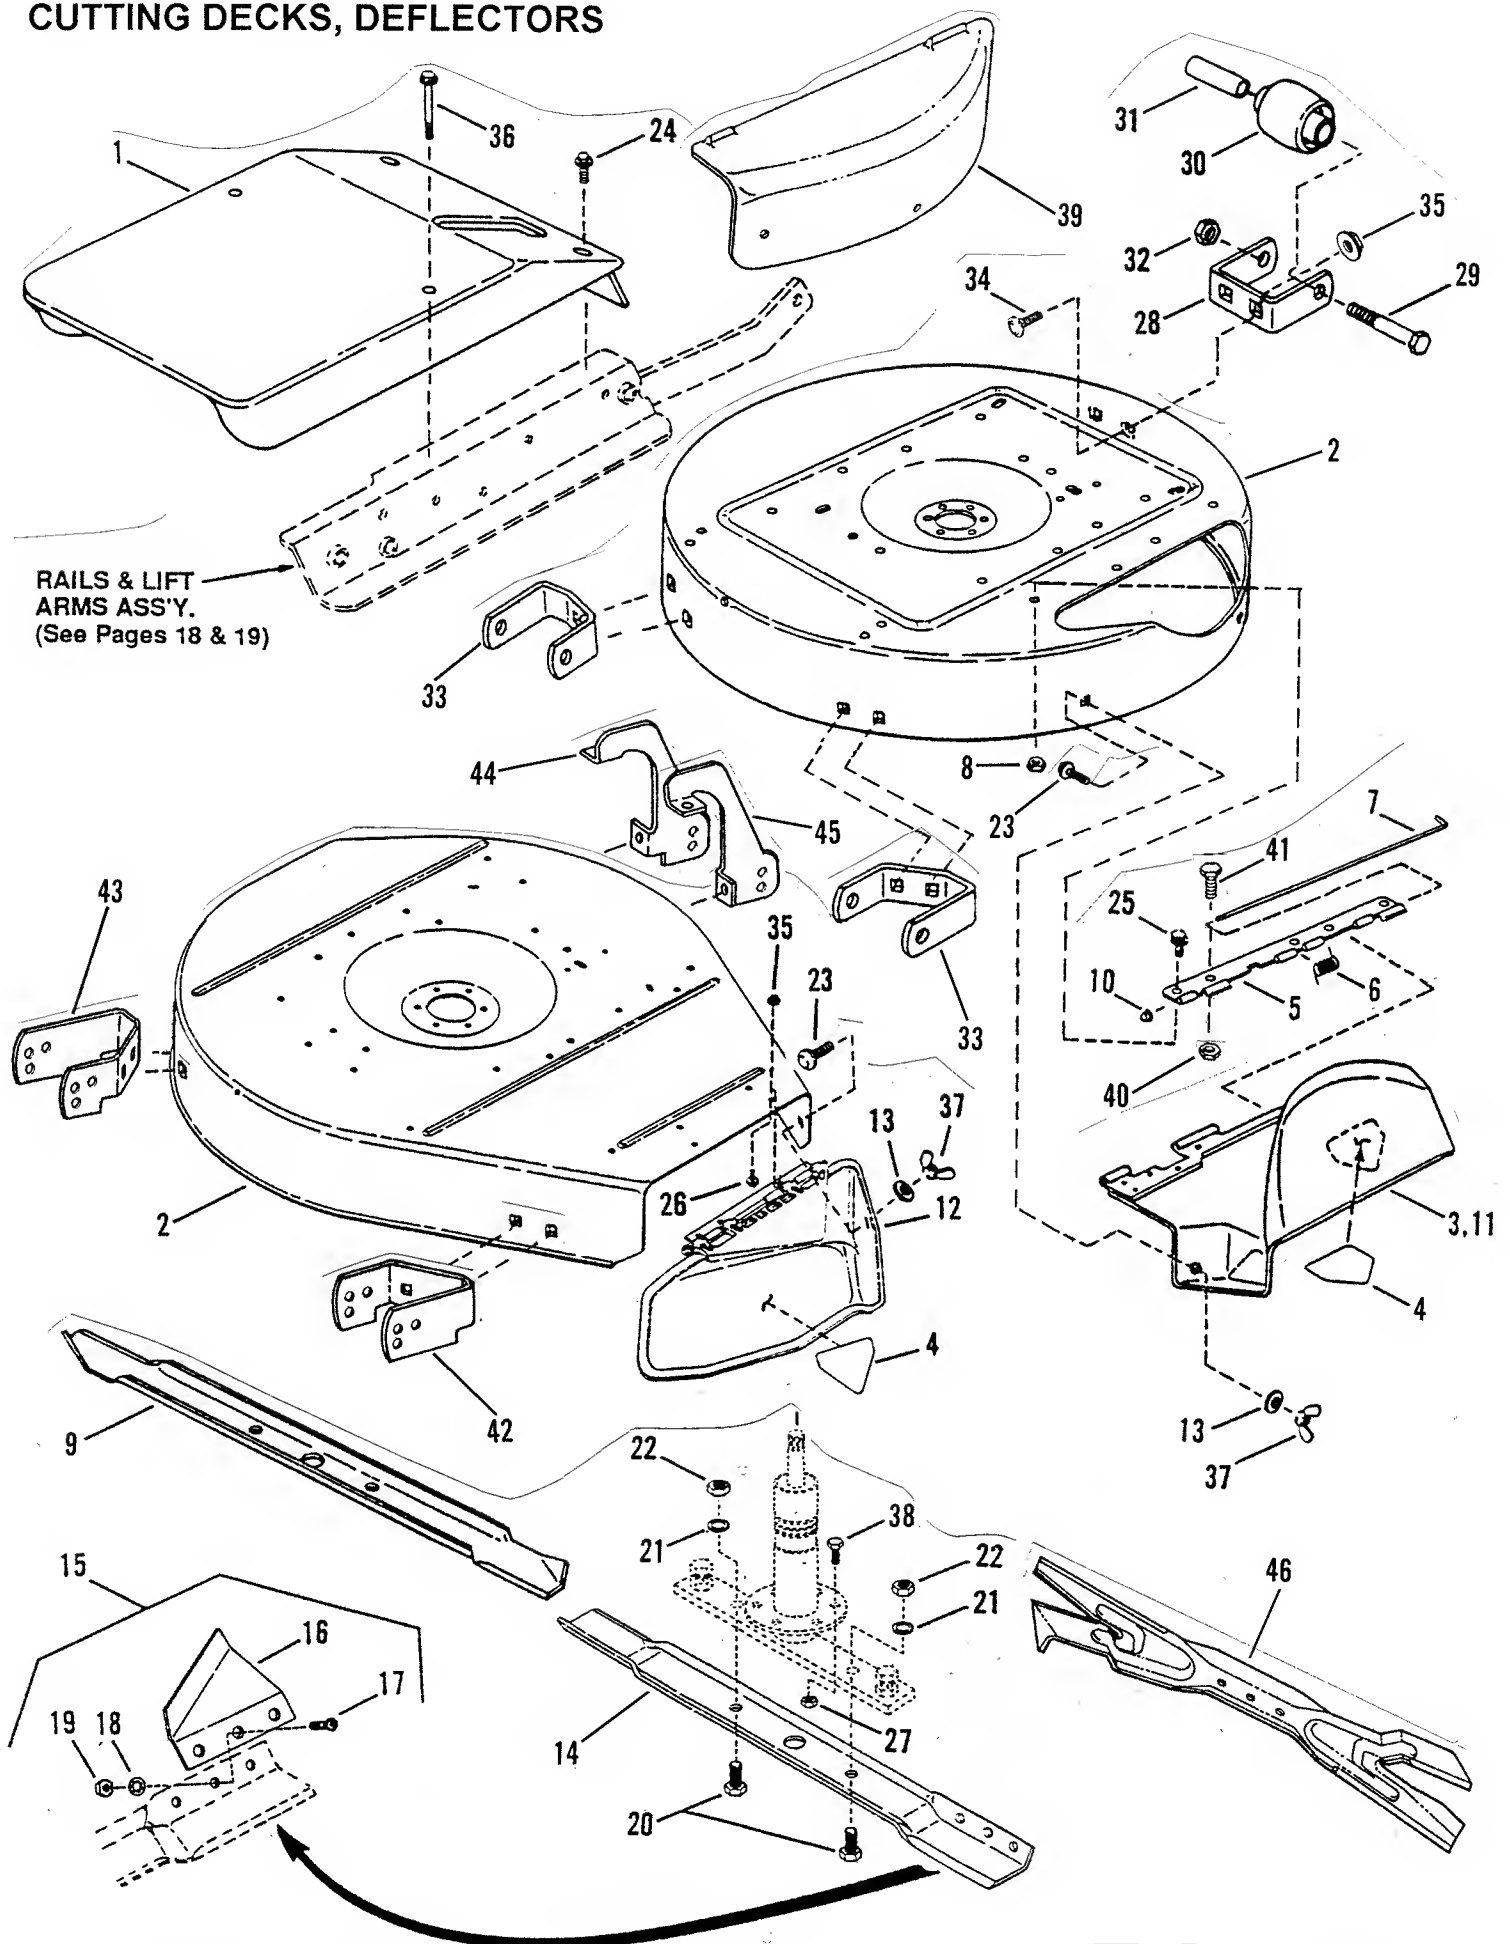




# CUTTING DECKS, DEFLECTORS

ITEM	PART NO.	DESCRIPTION
1	2-9989	COVER, Spindle
2	6-1221	25" DECK KIT
-	6-1809	28" DECK KIT
-	6-1810	30" DECK KIT
-	6-1225	33" DECK KIT
3	5-2555	DEFLECTOR, Discharge (28" & 33" Deck) (Includes Item 4)
4	2-6831	DECAL, Danger (Cut Finger)
5	3-3780	HINGE, Deflector
6	1-6341	SPRING, Hinge
7	2-6234	PIN, Hinge
8	9-1070	NUT, 5/16-18 Hex Flange Lock
9	1-6967	BLADE, 25" Mulcher
--	1-6980	BLADE, 28" Mulcher
--	1-6982	BLADE, 33" Mulcher
10	2-6483	NUT, Push (2)
11	5-1976	DEFLECTOR, Discharge (25" Deck) (Includes Item 4)
--	5-7624	ASSEMBLY, Discharge (25" Deck)(Includes Items 4 Thru 9 & 11)
12	5-2553	DEFLECTOR, Discharge (30" Decks)
13	9-1296	WASHER, 5/16 Flat (2)
14	1-9518	25" BLADE
--	1-9515	28" BLADE
--	1-8069	30" BLADE
--	1-9523	33" BLADE
15	6-0480	KIT, Air Lift (25", 33" Models) (Includes 16 Thru 19)
--	6-0735	KIT, Air Lift (30" Models) (Includes 16 Thru 19)
16	3-7723	AIR-LIFT (2) (25", 33" Models)
--	3-1724	AIR-LIFT (2) (30" Models)
17	9-0228	SCREW, 5/16-24 x 11/16" Machine (6)
18	9-0391	WASHER, 5/16-24 Internal Tooth Lock (6)
19	9-0223	NUT, 5/16-24 Hex (6)
20	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap (2)
21	9-0509	WASHER, 1/2 Internal Tooth Lock (2)
22	9-0559	NUT, 1/2-20 Hex Jam (2)
23	9-1508	BOLT, 5/16-18 x 3/4" Short Neck Carriage (2)
24	9-1016	SCREW, 1/4-20 x 5/8" Self-Tapping (4)
25	9-1510	SCREW, 5/16-18 x 1/2" Self-Tapping (3)
26	9-1525	BOLT, 5/16-18 x 1/2" Hex Flange Lock (2)
27	9-0613	NUT, 3/18-16 Hex Flange Lock (9)
28	3-3570	BRACKET, Gage Wheel (Front)
29	9-1532	SCREW, 38-24X3-3/4" Hex Head Cap (3)
30	1-9190	WHEEL, Gage (3)
31	1-5272	SPACER (3)
32	9-1518	NUT, 3/8-24 Hex Lock (3)
33	3-3571	BRACKET, Gage Wheel (Rear) (2)
34	9-0731	BOLT, 5/16-18 x 1/2" Short Nk Carr {(6)-for 28 & 33}, {(8)- for 30}
35	9-1070	NUT, 5/16-18 Hex Flange Lock {(8) for 28 & 33}, {(10) for 30}
36	9-1015	SCREW, 1/4-20 x 3-1/2" Self-Tapping (2)
37	9-0492	NUT, 5/16-18 Wing (2)
38	9-0612	BOLT, 3/8-16 3/4" Hex Flange Lock (3)
39	1-6968	COVER, 25" Mulcher
--	1-6983	COVER, 28" Mulcher
--	1-6984	COVER, 33" Mulcher
40	9-1070	NUT, 5/16-18 Hex Flange Lock Grade 5
41	9-0584	BOLT, Fogg Lock 1/4-20x1/2
42	3-4025	BRACKET, Anti Scalp, 30" Right Hand
43	3-4026	BRACKET, Anti Scalp, 30" Left Hand
44	3-4743	BRACKET, Anti Scalp, 30" Left Hand
45	3-4760	BRACKET, Anti Scalp 30", Right Hand
46	2-6453	BLADE, Ninja 28"
--	2-6565	BLADE, Ninja 30"
--	2-4741	BLADE, Ninja 33"
--	1-6967	BLADE, 25"


# RAILS, LIFT ARMS, CAM LIFT (25", 28", 30", 33" MODELS)

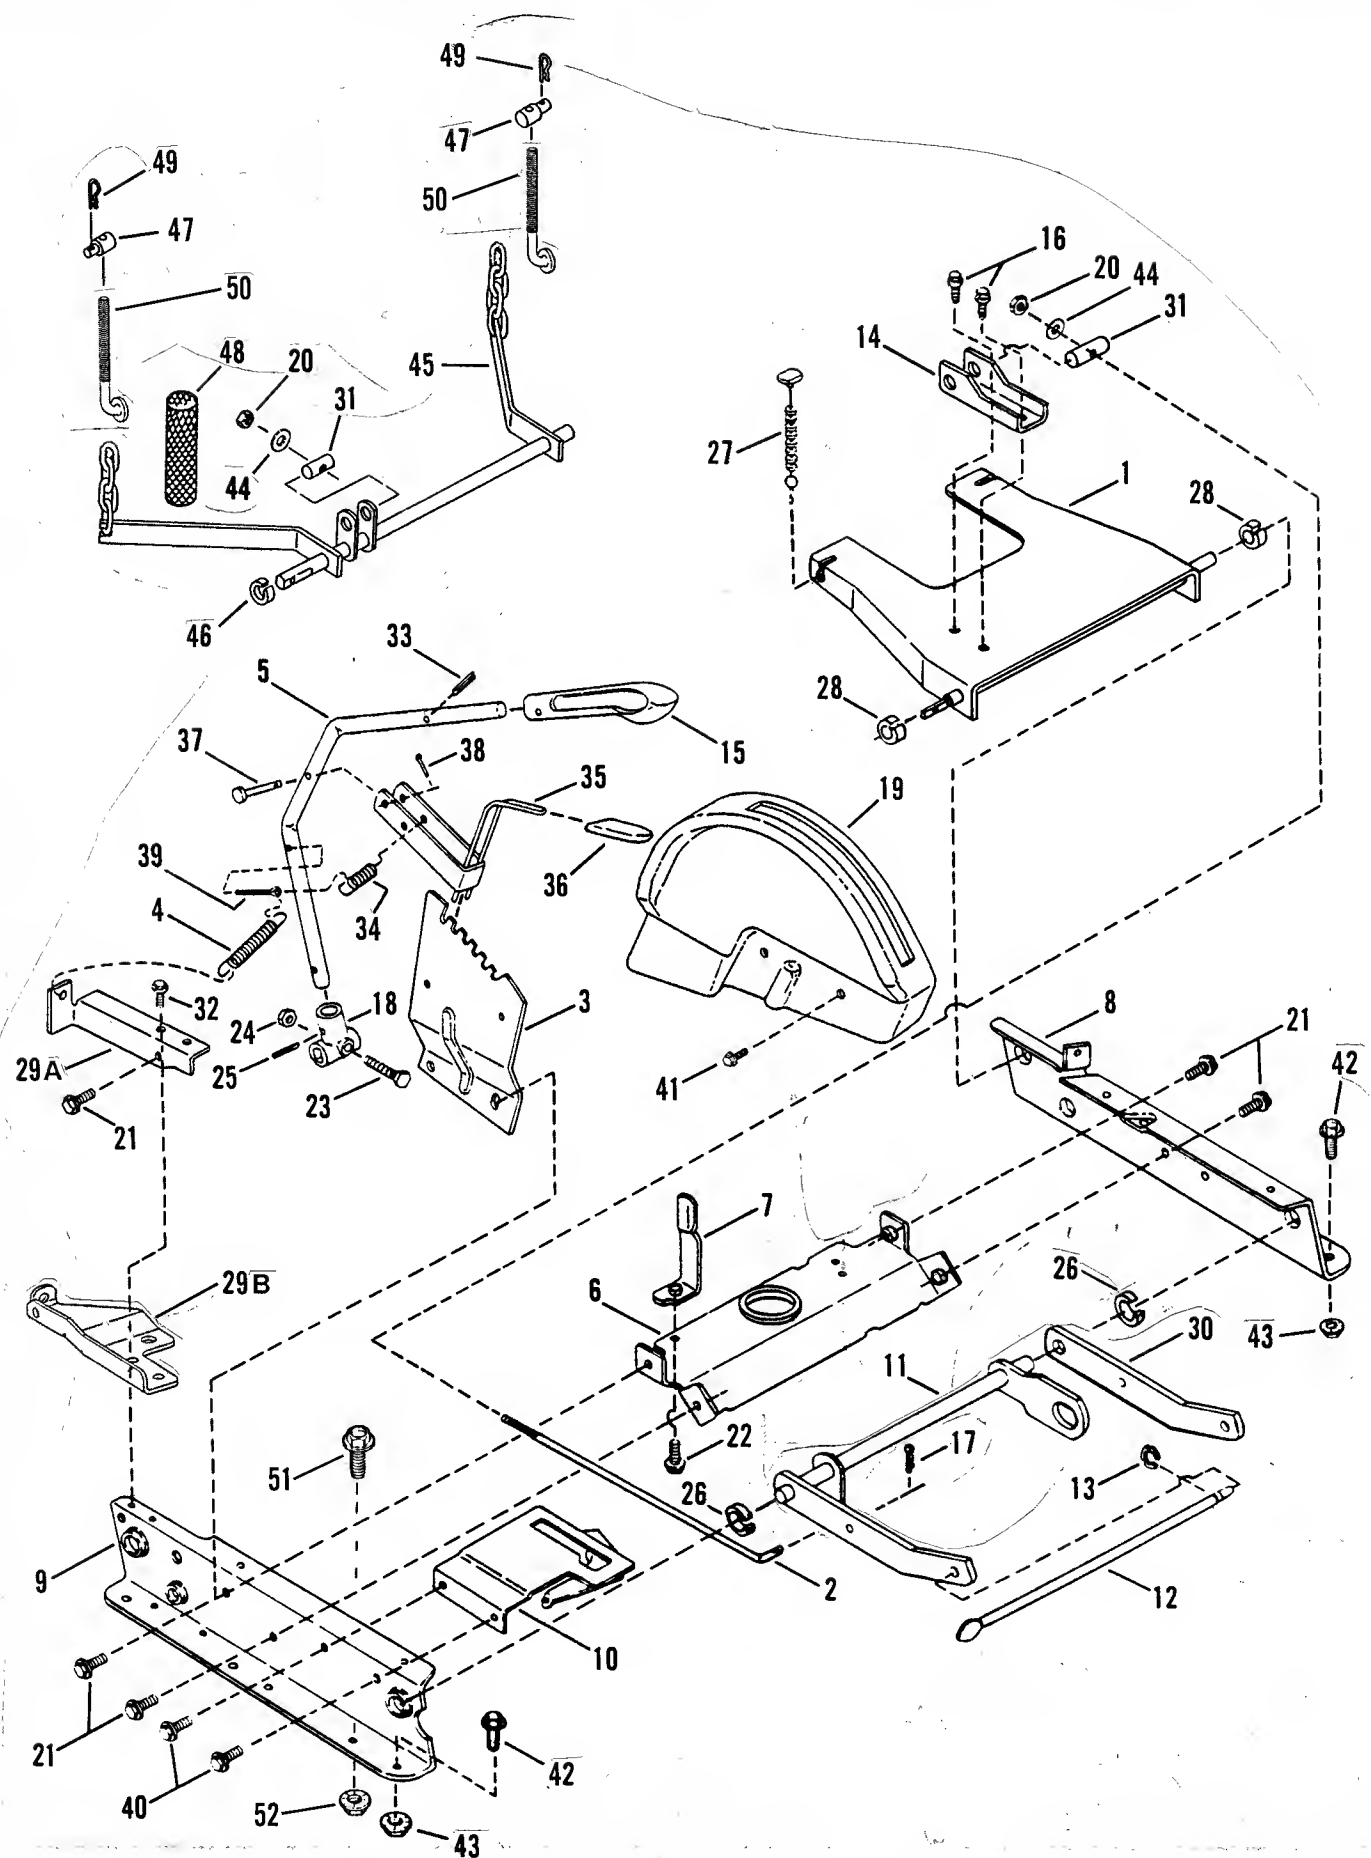

# RAILS, LIFT ARMS, CAM LIFT (25", 28", 30", 33" MODELS)


ITEM	PART NO.	DESCRIPTION
1	4-1389	ARM, Rear Lift (25" Models Only)
2	1-6122	ROD, Leveling
3	3-3765	QUADRANT, Lift Lever
4	2-4914	SPRING, Extension
5	2-4878	LEVER, Lift
6	3-1838	BRACE, Top
7	3-1855	GUIDE, Belt
8	3-4918	RAIL, Left Hand
9	3-4919	RAIL, Right Hand
10	5-1310	ASSEMBLY, Clutch Plate
11	4-0685	ARM, Front Lift, Adjustable
12	2-2717	ROD, Support (Front Lift Arm to Front End)
13	1-7847	RING, 7/16 Retaining
14	3-3008	ARM, Leveling
15	2-3658	GRIP, Height Adjustment Lever
16	9-1001	SCREW, 5/16-18 x 5/8" Self-Tapping (Torx) (2)
17	9-0365	PIN, 1/8 x 3/4" Cotter
18	2-5049	HUB, Deck Lift
19	2-6394	COVER, Height of Cut
20	9-0854	NUT, 3/8-24 Hex Nyloc
21	9-1198	SCREW, 3/8-16 x 5/8" Self-Tapping (6)
22	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping
23	9-1164	BOLT, 5/16-24 x 1-5/8" Tapered Axle
24	9-0480	NUT, 5/16-24 Hex Flange Lock
25	1-3550	PIN, 3/16 x 1" Roll
26	1-2067	RING, Red (2)
27	2-7429	CABLE, Rear Deck
28	2-2112	RING, White
29A	2-4762	BRACKET, Deck Lift (25" Models Only)
29B	3-4695	BRACKET, Lift Assist (28", 30", & 33" Models)
30	3-2997	ARM, Front Lift-Left (30" & 33" Models)
31	3-4213	PIVOT, Leveling
32	9-1084	SCREW, 1/4-20 x 3/8" Self-Tapping
33	9-0844	PIN, 3/16 x 3/4" Roll
34	2-6292	SPRING, Latch
35	4-1470	LATCH
36	2-6286	GRIP, Lift Latch
37	1-1021	PIN, 1/4 x 1-1/4" Clevis
38	9-0360	PIN, 1/16 x 3/4" Cotter
39	9-0753	PIN, 3/16 x 1 1/2" Cotter
40	9-0858	SCREW, 5/16-18 x 1/2" Self-Tapping
41	9-1016	SCREW, 1/4-20 x 5/8" Self-Tapping
42	9-0606	BOLT, 5/16-18 x 5/8" Hex Flange Lock
43	9-0585	NUT, 5/16-18 Hex Flange Lock
44	9-0122	WASHER, 3/8 Flat
45	4-1627	ARM, Rear Lift (28", 30" & 33" Models)
46	1-2068	RING Blue
47	2-8200	SWIVEL
48	2-8021	COVER, Chain
49	9-1503	PIN, 3/32 x 1-1/2" Hair
50	2-8728	HOOK, Chain (2)
51	9-0584	BOLT, 1/4-20 x 1/2 Hex Flange Lock
52	9-0583	NUT, 1/4-20 Hex Flange Lock

# BLADE STOP PEDALS

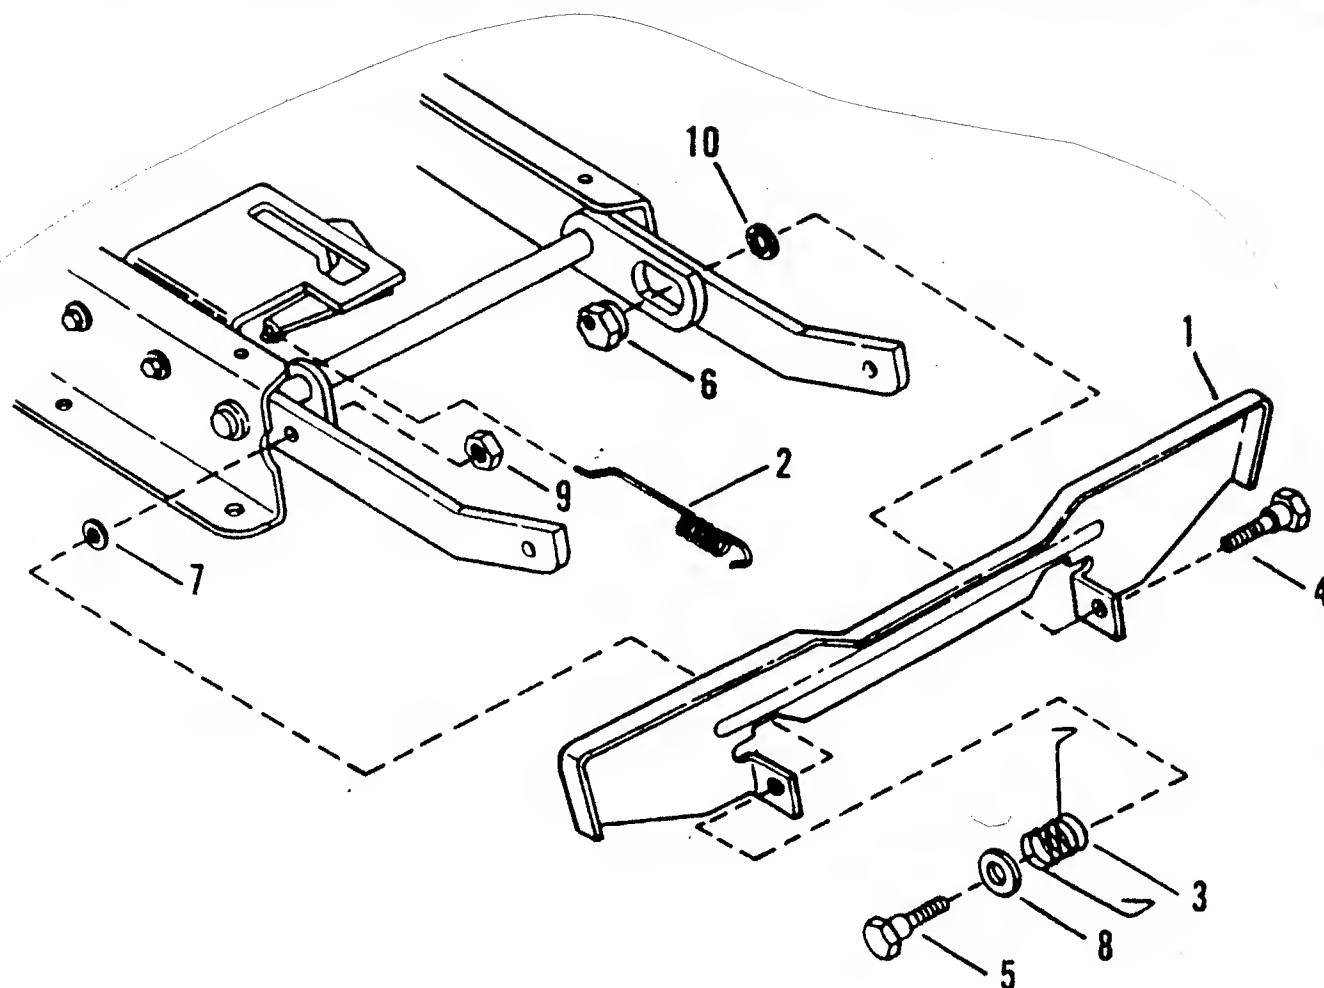


ITEM	PART NO.	DESCRIPTION
1	3-3601	PEDAL, Blade Stop Control
2	2-8192	SPRING, Latching
3	1-5448	SPRING, Pedal
4	1-5495	BOLT, 3/8-24 x 3/4" Shoulder
5	1-5446	BOLT, 3/8-24 x 9/16" Shoulder
6	1-5447	ECCENTRIC, Leveling
7	9-0122	WASHER, 3/8 Flat
8	9-0250	WASHER, 1/2 Flat (2)
9	9-0289	NUT, 3/8-24 Hex Lock
10	9-0390	WASHER, 3/8 Internal Tooth Lock

# **BELTS, BRAKES, INTERLOCK (25" MODELS)**

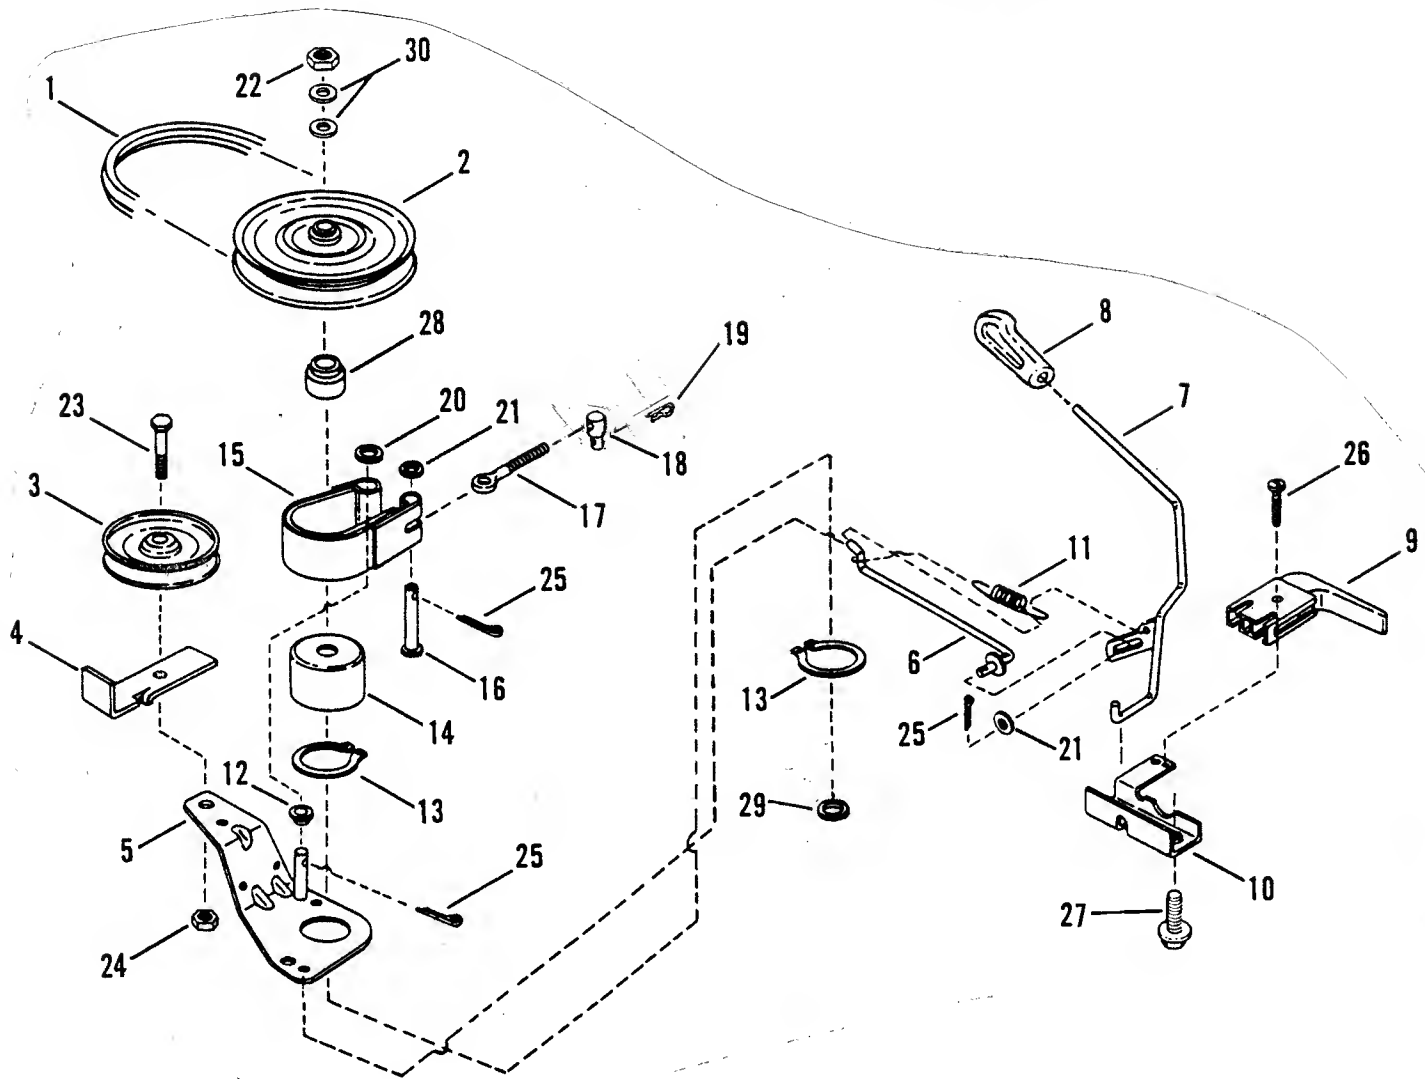


ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	2-2252	BELT, Drive	16	1-4304	PIN, 1/4 x 1-5/8" Clevis
2	1-8781	PULLEY, Spindle	17	2-9244	BOLT, 5/16-18 x 3" Eye
3	2-9624	PULLEY, Idler	18	2-8200	SWIVEL, Adjustable 1.6
4	3-2111	RESTRICTOR, Belt	19	1-5067	PIN, 3/32 x 1-1/2 Hair
5	4-7787	ARM, Idler	20	9-0122	WASHER, 3/8 Flat
6	1-2055	ROD, Idler	21	9-0055	WASHER, 1/4 Flat
7	4-1324	HANDLE, Blade Lever(On-Off)	22	1-0027	NUT, 3/4-16 Hex Jam
8	2-3657	GRIP, Handle	23	9-1517	SCREW, 3/8-24 x 1-3/4" Hex Cap
9	1-8524	SWITCH, Deck Interlock	24	9-1518	NUT, 3/8-24 Hex Lock
10	3-8021	MOUNT, Handle	25	9-0037	PIN, 3/32 x 3/4" Cotter (3)
11	1-4168	SPRING, Blade Handle	26	9-0299	SCREW, #10-32 x 1" Self-Tap
12	1-4314	SPACER	27	9-0362	SCREW, 1/4-20 x 5/8" Self-Tap
13	1-0740	RING, Retainer (2)	28	1-5290	HUB, Pulley
14	3-5378	DRUM, Brake	29	1-4407	WASHER, Spindle
15	3-4852	BAND, Brake	30	3-2027	WASHER, 49/64 x 1-1/2" Flat (2)

# BELTS, BRAKES, INTERLOCK (28", 30", 33" MODELS)

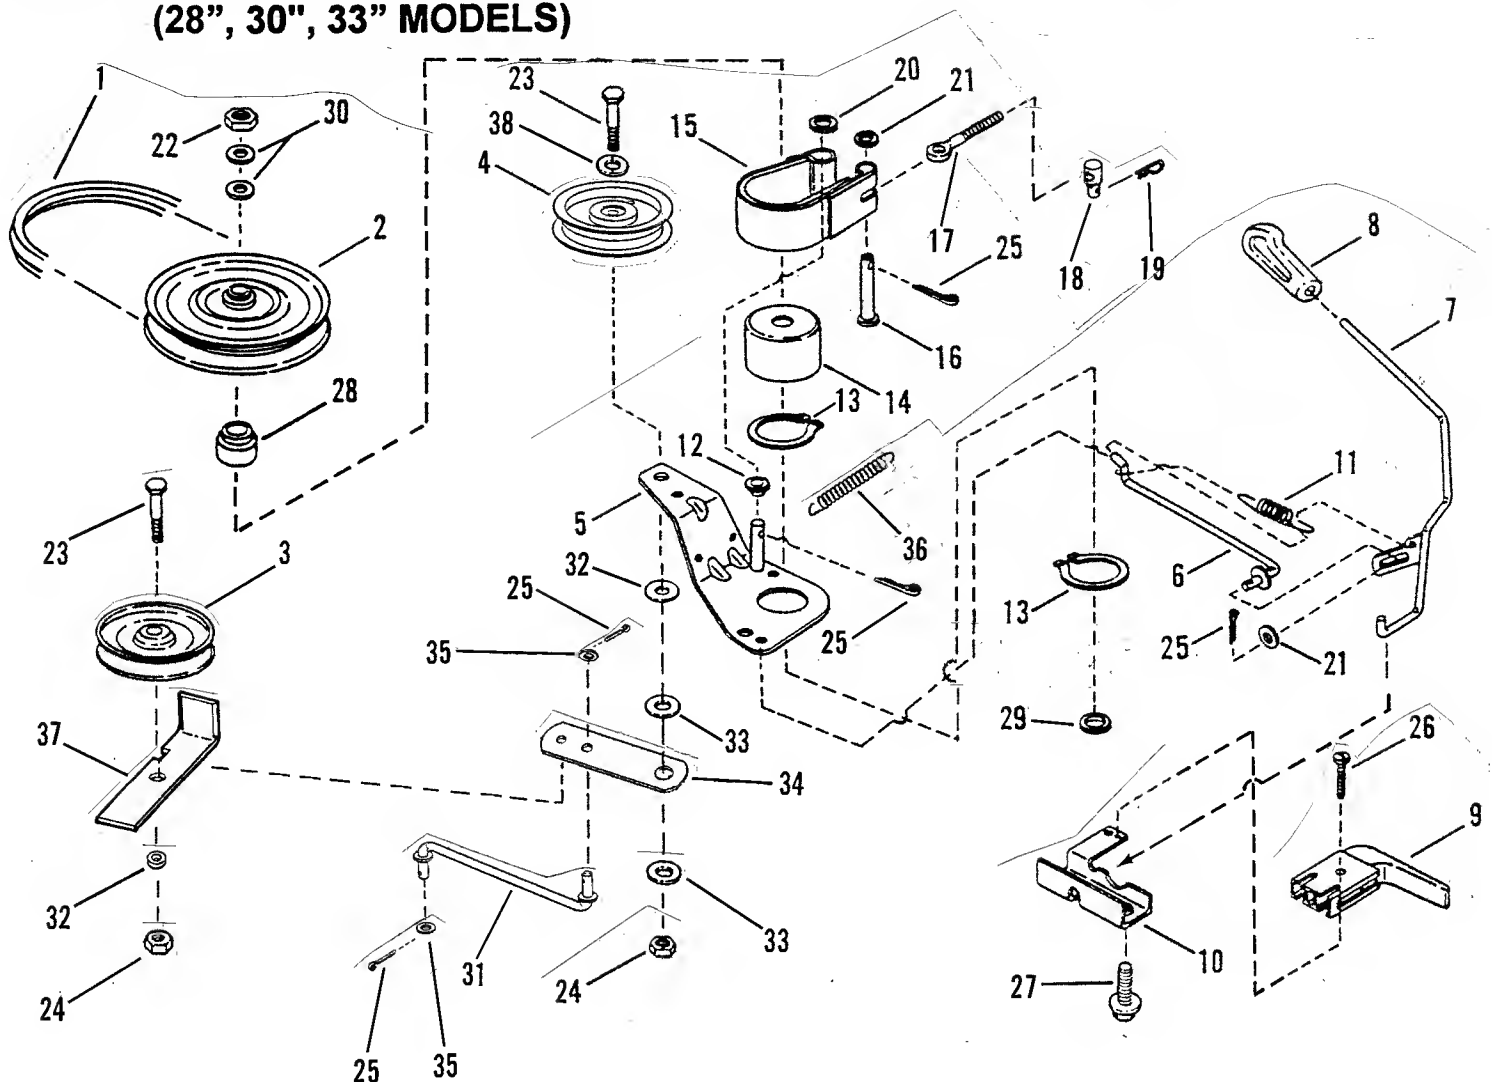

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	2-8619	BELT, Drive	20	9-0122	WASHER, 3/8 Flat
2	1-8781	PULLEY, Spindle	21	9-0055	WASHER, 1/4 Flat
3	2-9624	PULLEY, 4" Idler	22	1-0027	NUT, 3/4-16 Hex Jam
4	1-8574	IDLER, 4-1/8" Flat	23	2-7174	SCREW, 5/16-18 x 2" Hex Cap (2)
5	4-7787	ARM, Idler	24	9-1575	NUT, 5/16-18 Center Lock (2)
6	1-2055	ROD, Idler	25	9-0037	PIN, 3/32 x 3/4" Cotter (4)
7	4-1324	HANDLE, Blade Lever(On-Off)	26	9-0299	SCREW, #10-32 x 1" Self-Tap
8	2-3657	GRIP, Handle	27	9-0362	SCREW, 1/4-20 x 5/8" Self-Tap
9	1-8524	SWITCH, Deck Interlock	28	1-5290	HUB, Pulley
10	3-8021	MOUNT, Handle	29	1-4407	WASHER, Spindle
11	1-4168	SPRING, Blade Handle	30	3-2027	WASHER, 49/64 x 1-1/2" Flat (2)
12	1-4314	SPACER	31	2-8578	LINK
13	1-0740	RING, Retainer (2)	32	1-3849	SPACER, 21/64 x 5/8 x 5/32"
14	3-5378	DRUM, Brake	33	1-6314	WASHER, 21/64 x 1-1/4 x 3/32"
15	3-4852	BAND, Brake	34	3-5229	LINK, Idler
16	1-4304	PIN, 1/4 x 1-5/8" Clevis	35	9-1514	WASHER, 3/8 x 13/16 Flat (2)
17	2-9244	BOLT, 5/16-18 x 3" Eye	36	2-3666	SPRING
18	2-8200	SWIVEL	37	3-2111	RESTRICTOR
19	1-5067	HAIRPIN, 3/32 x 1-1/2"	38	9-1296	WASHER


## ① ASSEMBLY

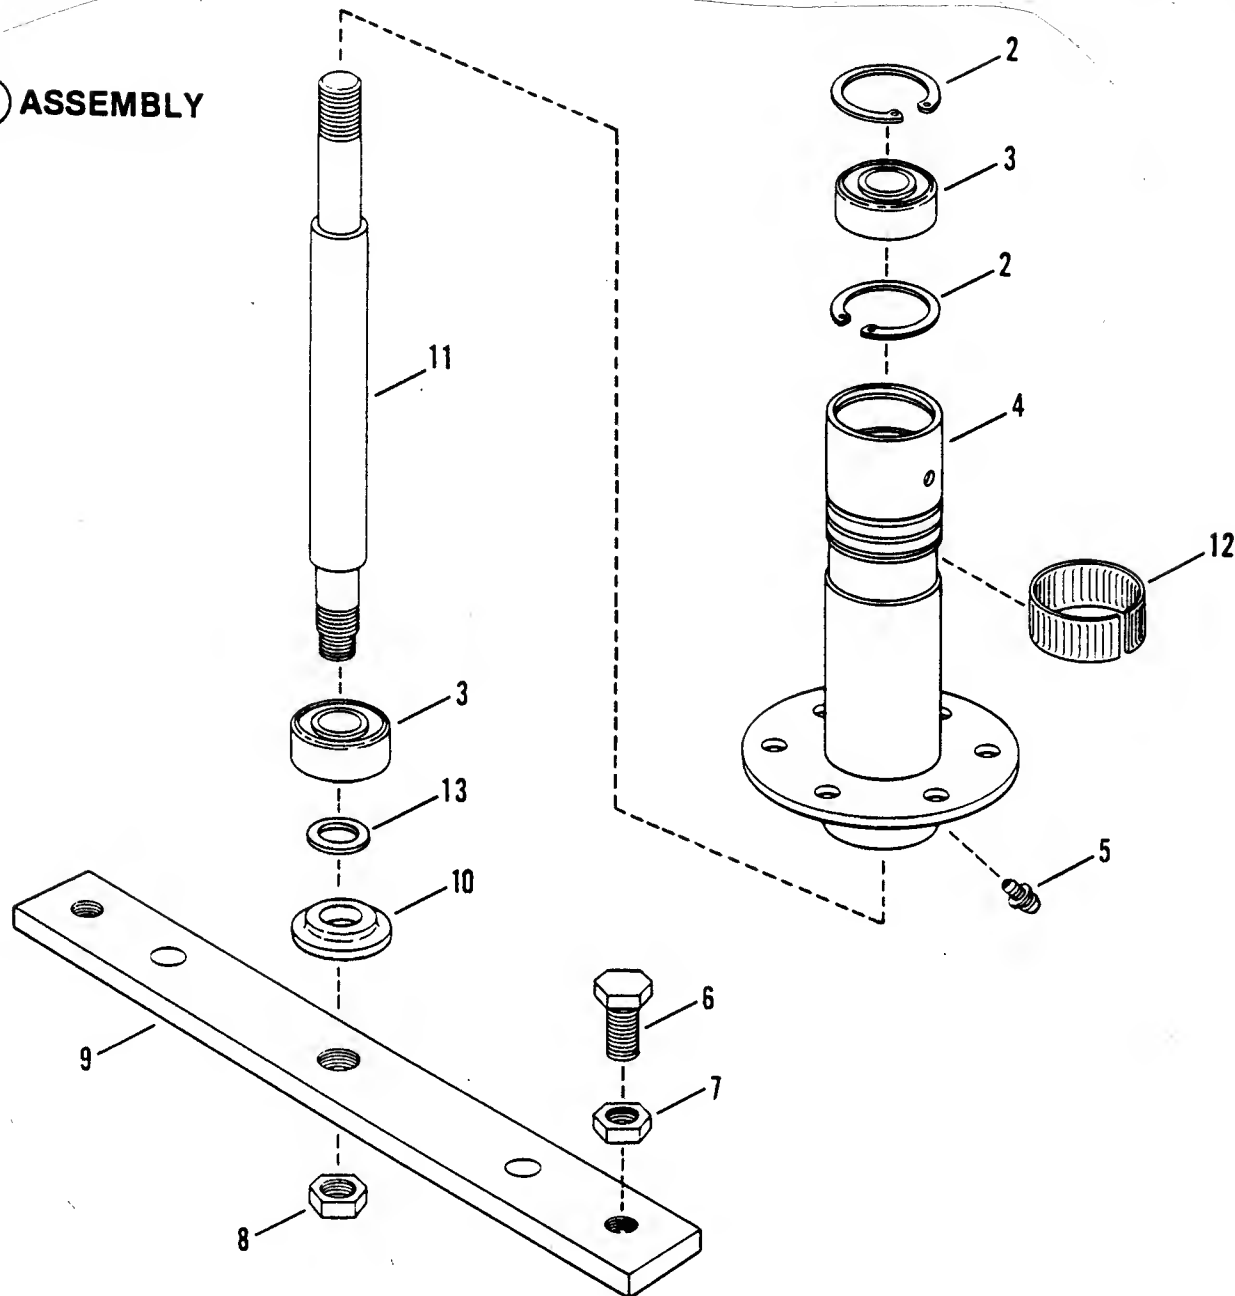

ITEM	PART NO.	DESCRIPTION
------	----------	-------------

1	5-9813	ASSEMBLY, Spindle Housing (Includes Items 2 Thru 11)
2	1-2491	RING, Retaining (2)
3	1-3313	BEARING, Spindle (2)
4	5-0696	HOUSING, Spindle (Includes Item 5)
5	1-0817	FITTING, Lube
6	9-0392	SCREW, 1/2-20 x 1" Hex Head Cap (2) (GR. 5)
7	9-0559	NUT, 1/2-20 Hex Jam (2)
8	9-0356	NUT, 5/8-18 Hex Lock
9	3-7751	HOLDER, Blade
10	1-4407	WASHER, Spindle
11	2-1742	SPINDLE
12	1-2670	RING, Tolerance
13	1-0121	WASHER, 3/4 Shim


## DRIVE DISC ASSEMBLY

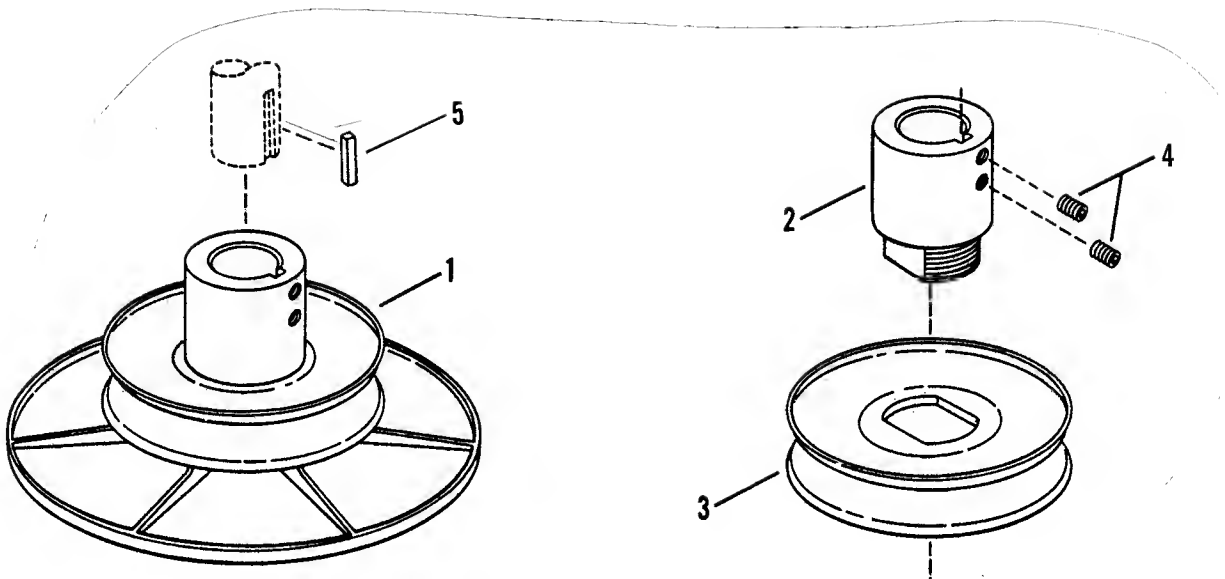

ITEM	PART NO.	DESCRIPTION
1	5-3708	ASSEMBLY, 4" O.D. Drive Disc (30" & 33" Models) (Includes Items 2 Thru 4)
-	5-3709	ASSEMBLY, 5" O.D. Drive Disc (25" & 28" Models) (Includes Items 2 Thru 4)
2	2-9112	HUB
3	2-8779	PULLEY, Drive (25" & 28" Models)
-	2-8796	PULLEY, Drive (30" & 33" Models)
4	9-0132	SCREW, 3/8-16 x 3/8" Set (2)
5	1-0210	KEY, 1/4" Square x 2"



# FUEL TANK & OPERATORS SEAT

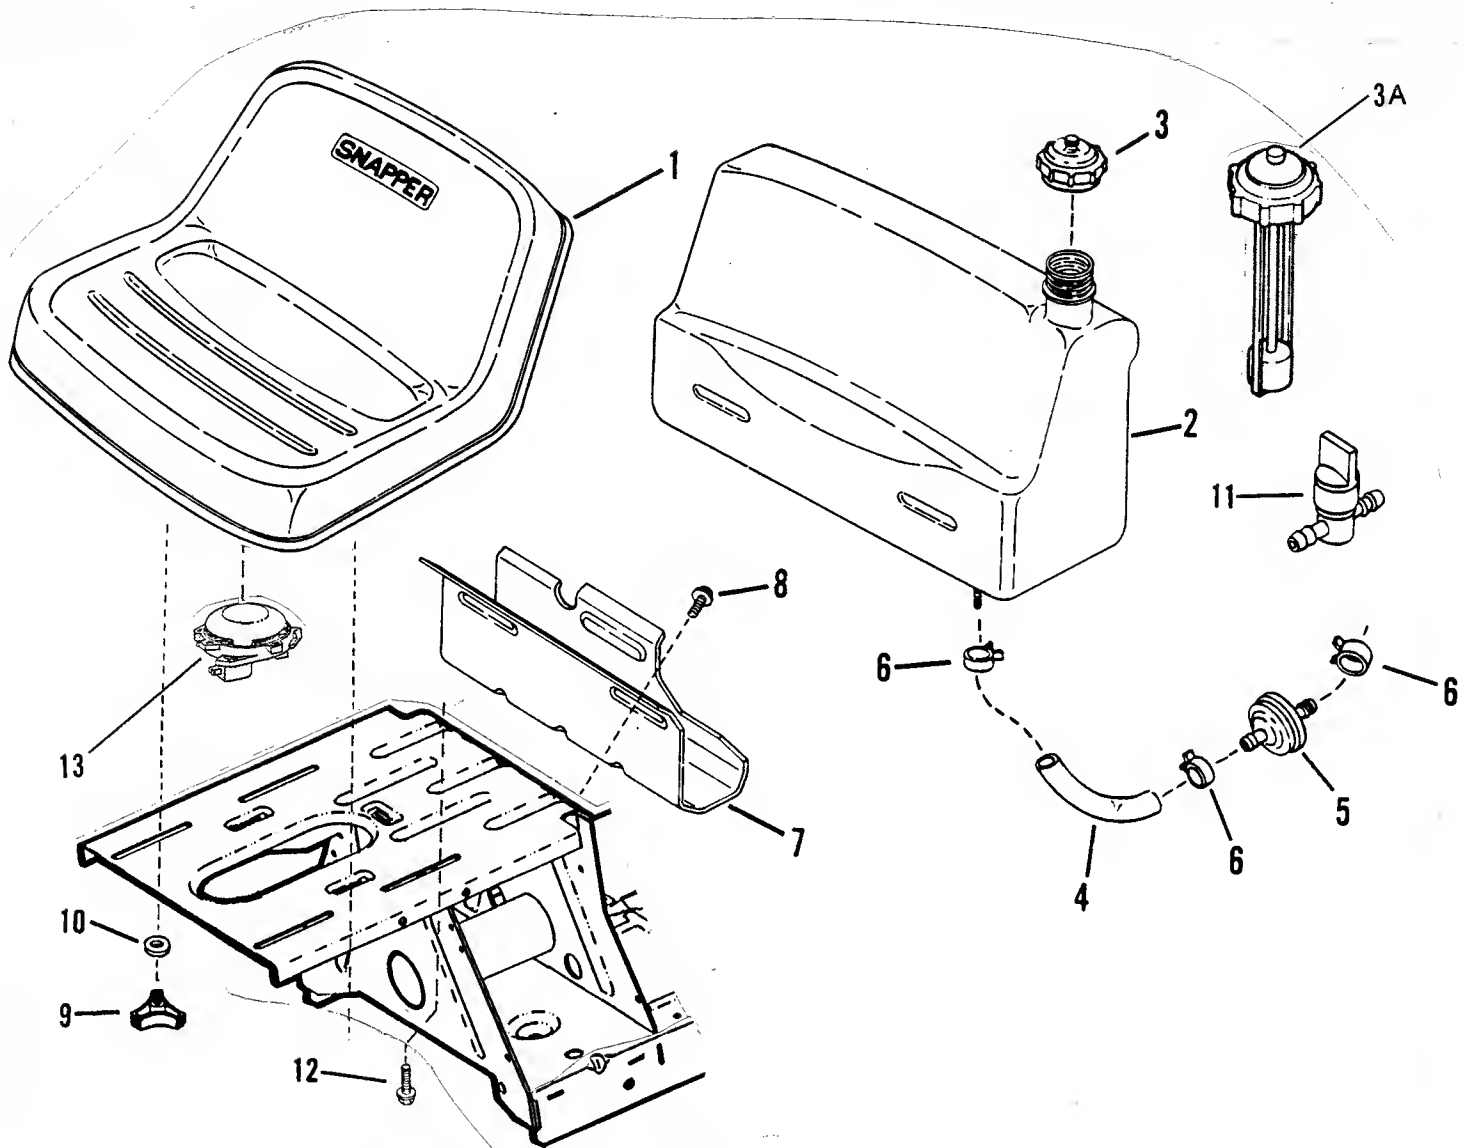


## ITEM PART NO. DESCRIPTION


1	2-9857	SEAT, Operator (Mid Back) (Euro)
-	2-8593	SEAT, Operator (Low Back) w/s
-	2-8650	SEAT, Operator (High Back)
-	2-2585	SEAT, Operator (Deluxe Back)
2	5-1905	ASSEMBLY, Fuel Tank (Includes Item 3)
-	5-2435	ASSEMBLY, Fuel Tank With Gauge (Includes Item 3A)
3	1-2515	CAP, Fuel Tank
3A	1-9377	CAP, Fuel Tank With Gauge
4	3-2015	HOSE, Fuel (7" Long)
-	3-2038	HOSE, Fuel (5" Long)
-	7-6272	HOSE, Fuel (8-1/2" Long)
-	1-2912	HOSE, Fuel (12-1/2" Long) (Kohler Only)
5	1-4359	FILTER, Fuel (In-Line)
6	1-2222	CLAMP, Fuel Line (4)
7	3-3377	BRACKET, Fuel Tank (Rear)
8	9-1542	SCREW, 5/16-18 x 5/8" Self-Tapping (2)
9	2-3191	KNOB, Seat Adjusting (2)
9A	2-8659	KNOB (2), Hinged Seat
10	1-3849	SPACER, 5/16 (2)
11	2-4507	VALVE, Fuel Shut-Off (Accessory)
12	9-1038	BOLT, 5/16-18 x 1/2" Hex Flange Lock (2)
13	2-9211	SWITCH, Seat,

## ENGINES & EXHAUST MUFFLER

ENG. H.P.	START TYPE	ENGINE MFGR.	MFGR. MODEL	MFGR. TYPE
8.0	ROPE	BRIGGS & STRATTON	195702	0142-01
8.0	ELECTRIC	BRIGGS & STRATTON	195707	0145-01
9.0	ELECTRIC	BRIGGS & STRATTON	28A707	0122-02
12.0	ELECTRIC	BRIGGS & STRATTON	283707	0136-01
14.0	ELECTRIC	BRIGGS & STRATTON	287707	0235-01
14.0	ELECTRIC	KOHLER	CV14ST	PS-1490

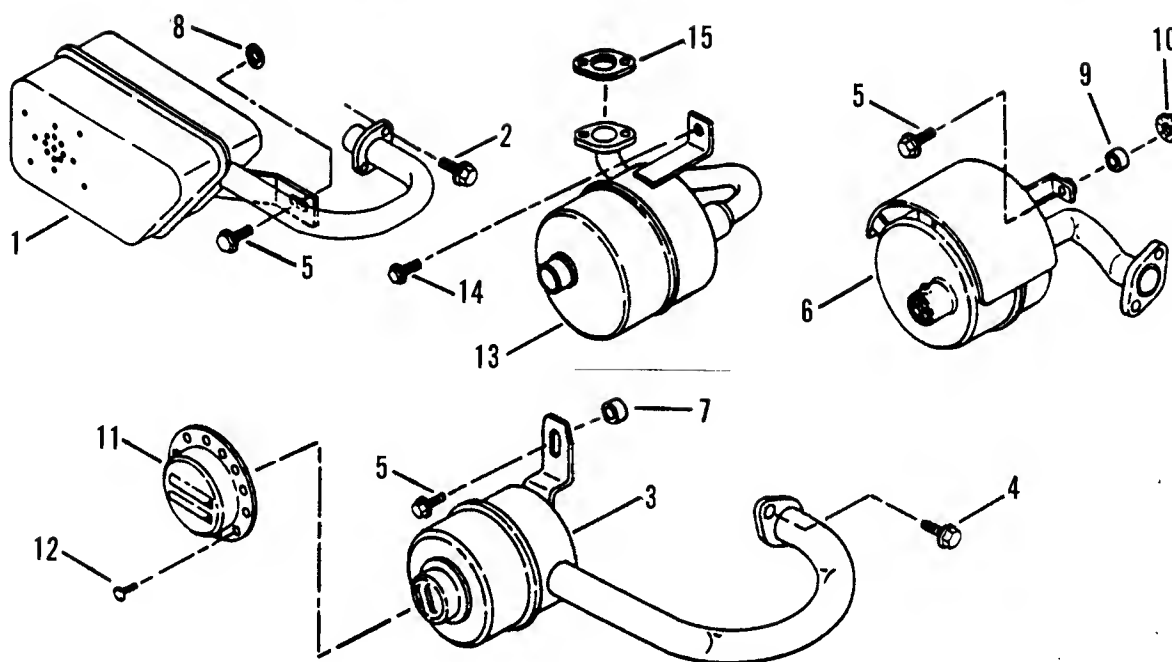


ITEM	PART NO.	DESCRIPTION
1	2-8358	MUFFLER (Briggs 8 HP Only)
2	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap, Grade 5 (2)
3	5-1996	MUFFLER (9 HP, 10 HP, 12 HP Briggs) (includes 11 & 12)
4	9-0206	SCREW, 5/16-18 x 3/4" Hex Head Cap, Grade 2 (2)
5	9-1495	SCREW, 1/4-20 x 3/4" Hex Head Cap, Grade 5 (8 & 12 HP Models)
--	9-1127	SCREW, 1/4-20 x 7/8" Machine (10 HP Models)
6	1-9358	MUFFLER (Kohler 14 HP Only)
7	2-1866	SPACER (10 HP Models Only)
8	9-1314	WASHER, 1/4" Internal Tooth Lock
9	1-3849	SPACER
10	9-1070	NUT, 5/16-18 Hex Flange Lock, Grade 5
11	1-9257	DEFLECTOR, Heat
12	2-3023	SCREW, #8-18 x 3/8 Hex Head Tapered
13	2-8674	MUFFLER (14 HP Briggs) (used on model 331415BE)
14	9-1738	SCREW, 5/16-18 x 3/4" Socket Head, Grade 8 (2)
15	1-5352	GASKET, Muffler

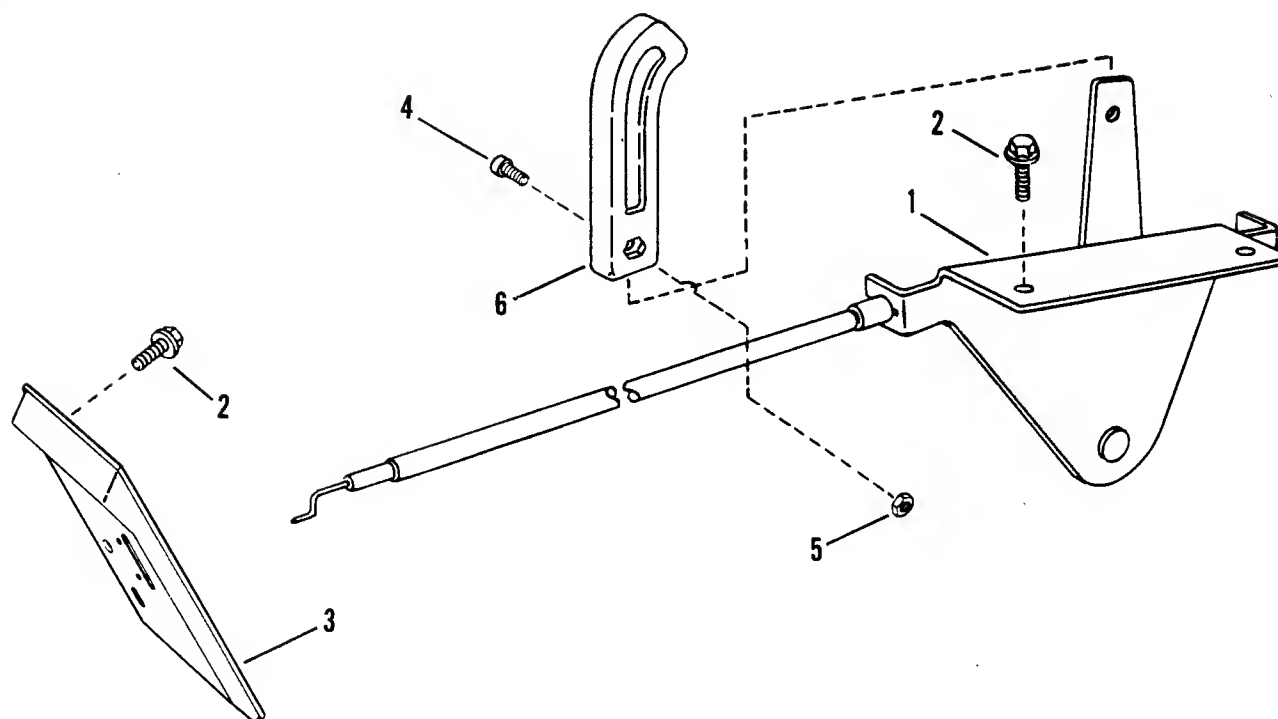

ITEM	PART NO.	DESCRIPTION
1	2-4155	CONTROL, Throttle
-	2-2483	CONTROL, Throttle (14 HP Kohler)
2	9-0913	SCREW, #10-24 x 1/2" Self-Tapping (Torx)(5)
3	2-3665	COVER, Dash Panel (Electric Start)
-	2-3680	COVER, Dash Panel (Manual Start)
4	9-1017	SCREW, #8-32 x 3/8" Cross Recess Filister (2)
5	9-1018	NUT, #8-32 Hex (2)
6	2-3655	KNOB, Throttle Control

# ELECTRICAL SYSTEMS

(For 8 HP Recoil Wiring Diagram)

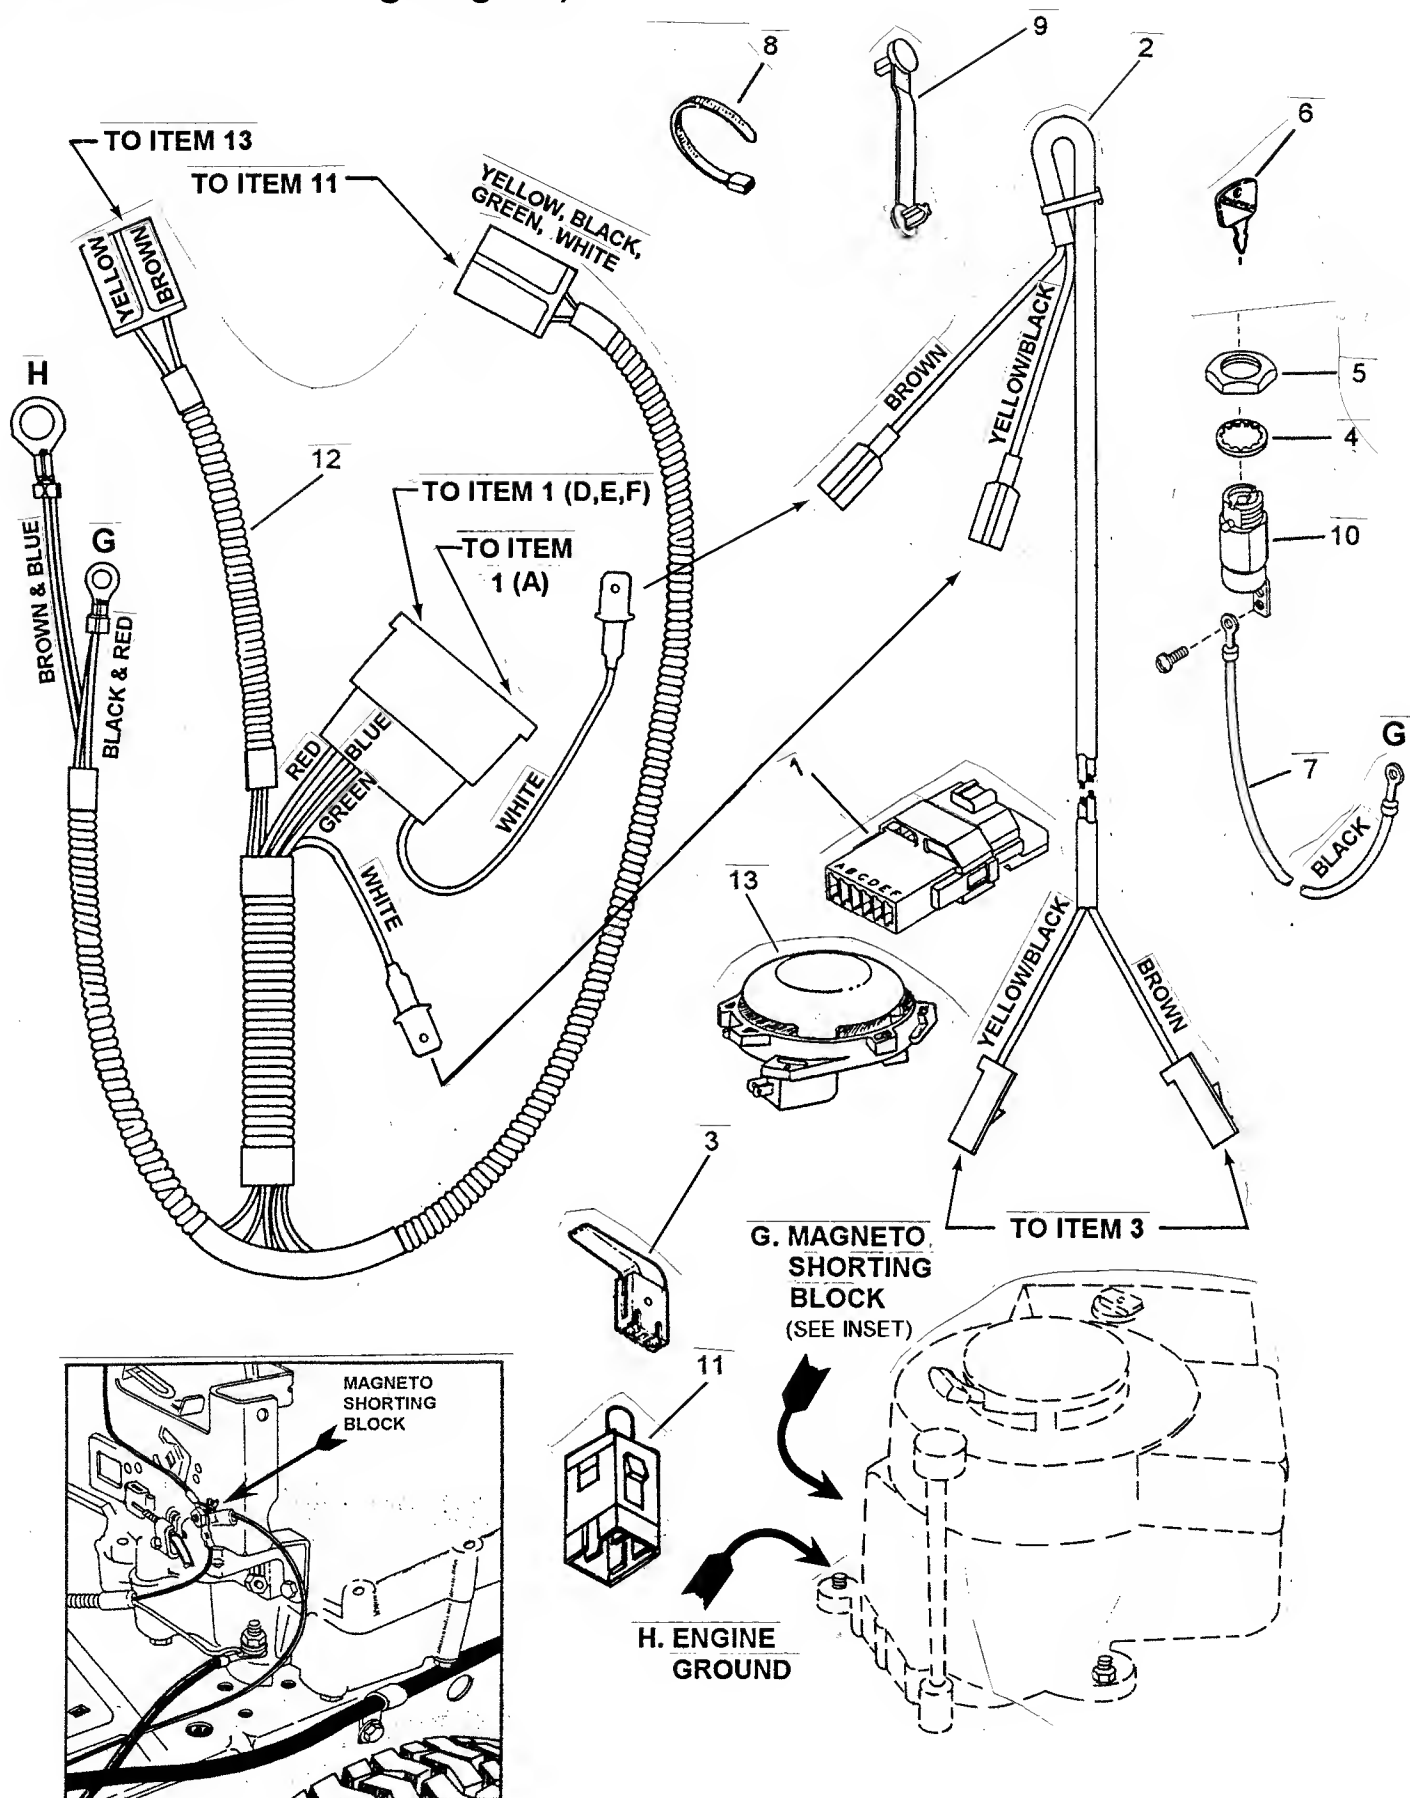


**ELECTRICAL SYSTEMS**  
**(For 8 HP Recoil Wiring Diagram)**

ITEM	PART NO.	DESCRIPTION
1	2-8606	INTERLOCK, Module
2	2-8386	HARNESS, Deck Interlock
3	1-8524	SWITCH, Deck Interlock
4	9-0880	WASHER, 5/8 Internal Tooth Lock
5	1-5438	NUT, 5/8-32 Hex
6	1-1138	KEY, Switch (2)
7	1-9299	WIRE, Ground (Recoil Start)
8	1-2080	TIE, 7" Long Cable (2)
9	1-4451	TIE, 2" Long Cable
10	1-1853	SWITCH, (Recoil Start)
11	2-2886	SWITCH, Traction Operator's Presence
12	2-8607	HARNESS, Operator's Presence Control
13	2-9725	SWITCH, Seat

# ELECTRICAL SYSTEMS

(For 8 HP Without Recoil Back Up)

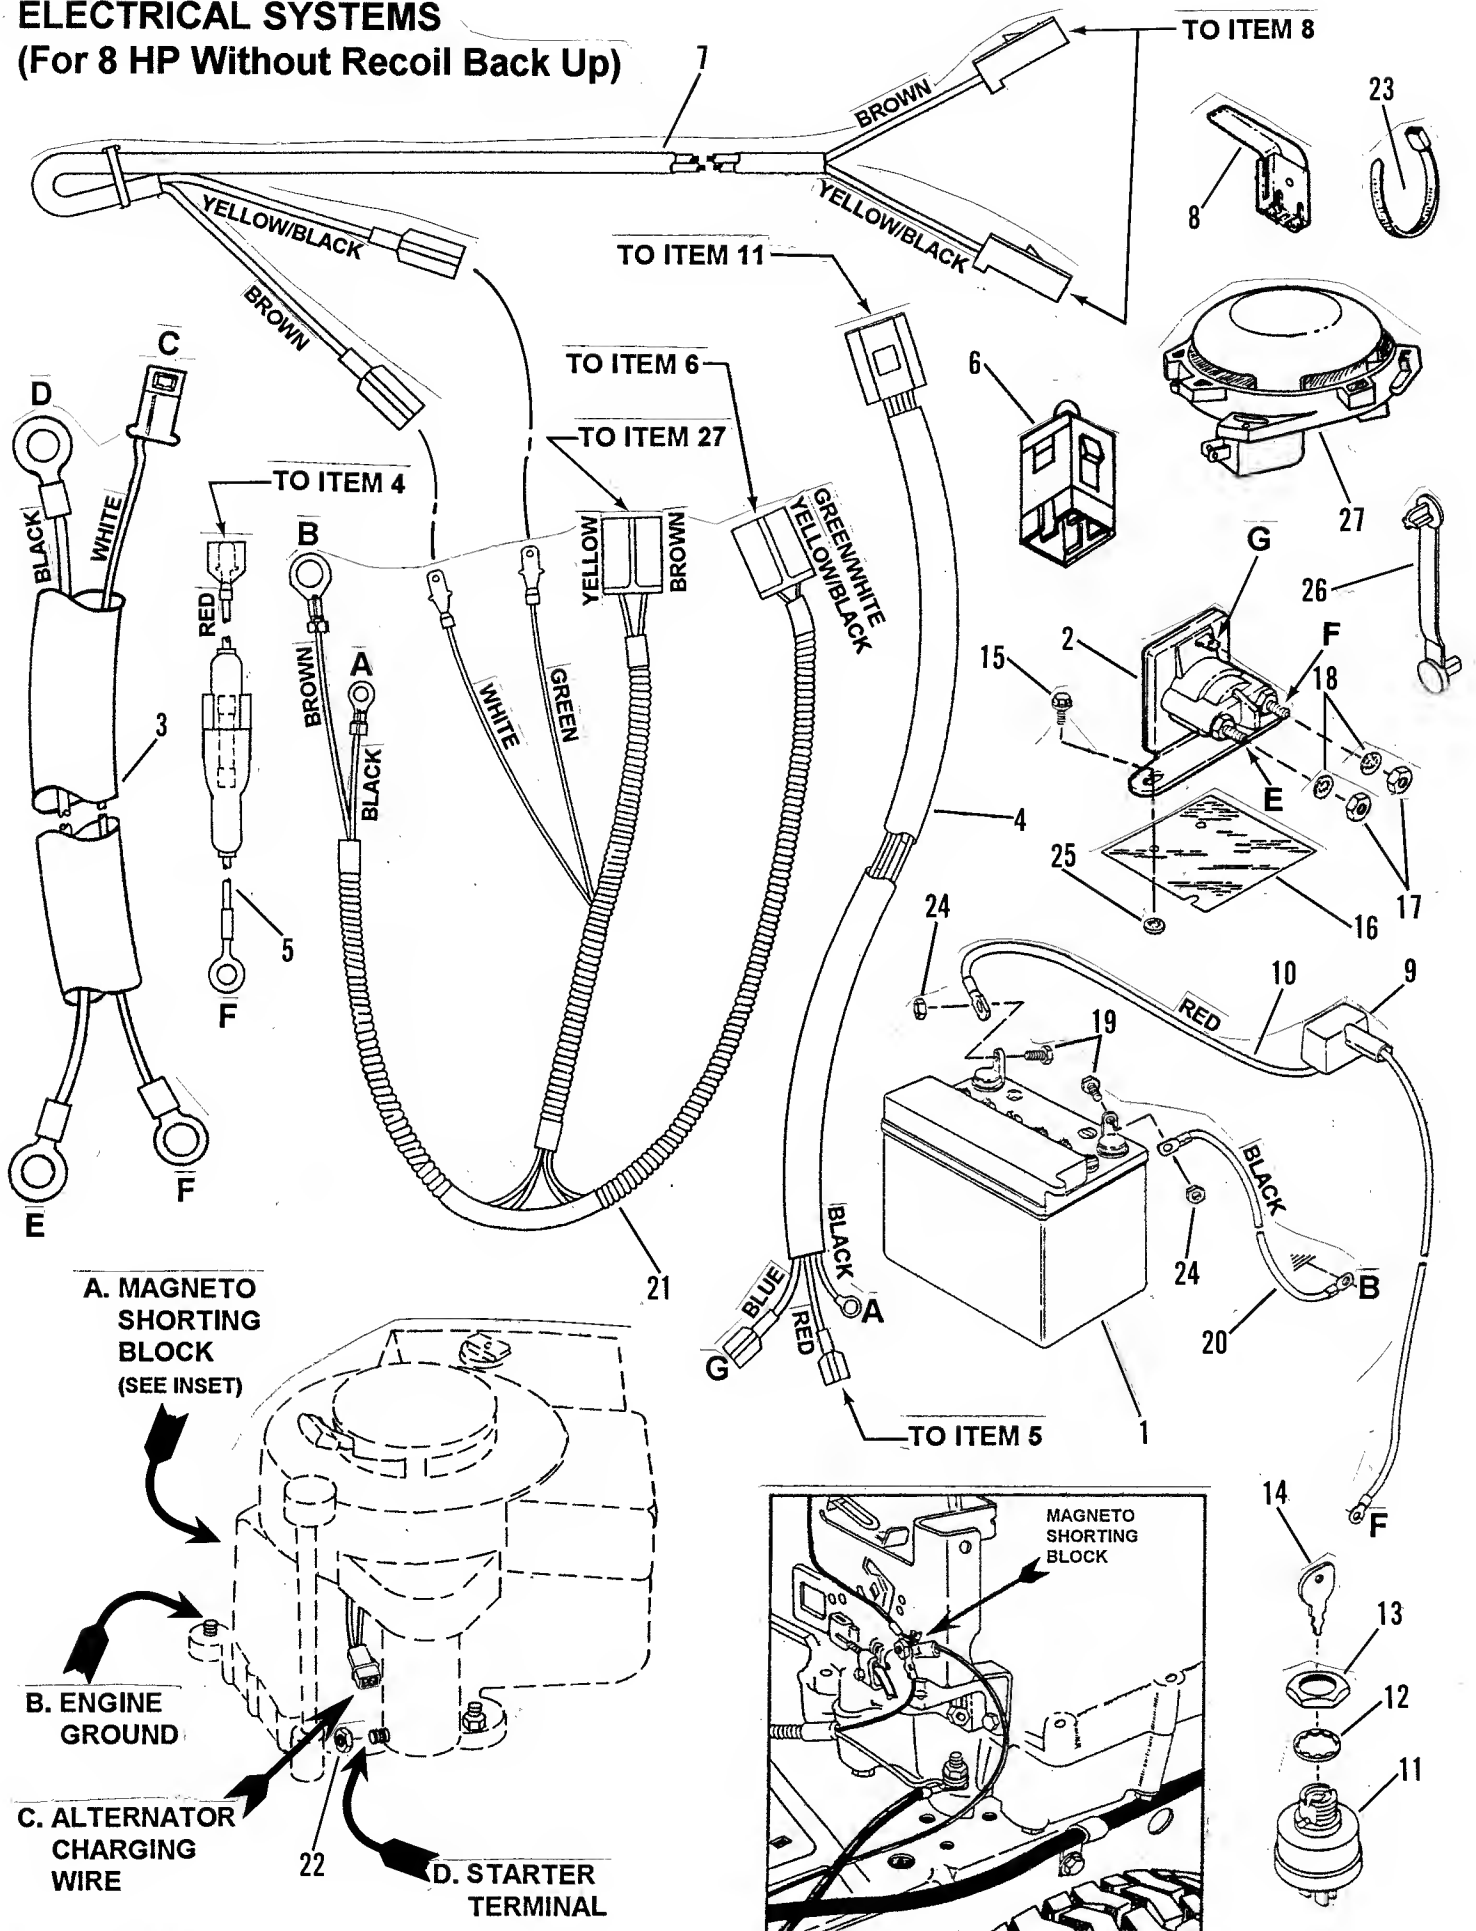


**ELECTRICAL SYSTEMS**  
**(For 8 HP Without Recoil Back Up)**

---

ITEM	PART NO.	DESCRIPTION
1	6-0753	KIT, 12V Dry Charge Battery
2	1-8817	SOLENOID
3	2-2788	HARNESS, Starter Wiring (Briggs)
4	1-9297	HARNESS, Ignition Wiring (Briggs)
5	1-6168	HOLDER, Fuse (Includes Fuse)
-	1-6169	FUSE (10 AMP)
6	2-2886	SWITCH, Traction Operator's Presence
7	2-8386	HARNESS, (Deck Interlock Wiring)
8	1-8524	SWITCH, Deck Interlock
9	1-2444	COVER, Battery Cable
10	1-9326	CABLE, Positive (Red)
11	1-8816	SWITCH, Ignition (Used With Electric Start)
12	9-0880	WASHER, 5/8 Internal Tooth Lock
13	1-5438	NUT, 5/8-32 Hex
14	1-1138	KEY, Switch (2)
15	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (3)
16	2-2887	PROTECTOR, Solenoid
17	9-0063	NUT, 1/4-20 Hex (4)
18	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
19	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
20	2-8027	CABLE, Negative
21	2-8843	HARNESS, Operator Presence Control Wire
22	9-1576	NUT, 1/4-20 Hex
23	1-2080	TIE, 7" Long Cable (2)
24	9-0372	NUT, 1/4-20 Hex Lock (2)
25	1-2485	RETAINER, 1/4 Bolt (2)
26	1-4451	TIE, 2" Long Cable
27	2-9211	SWITCH, Seat

## **ELECTRICAL SYSTEMS**

**(For 9, 12 & 13HP)**

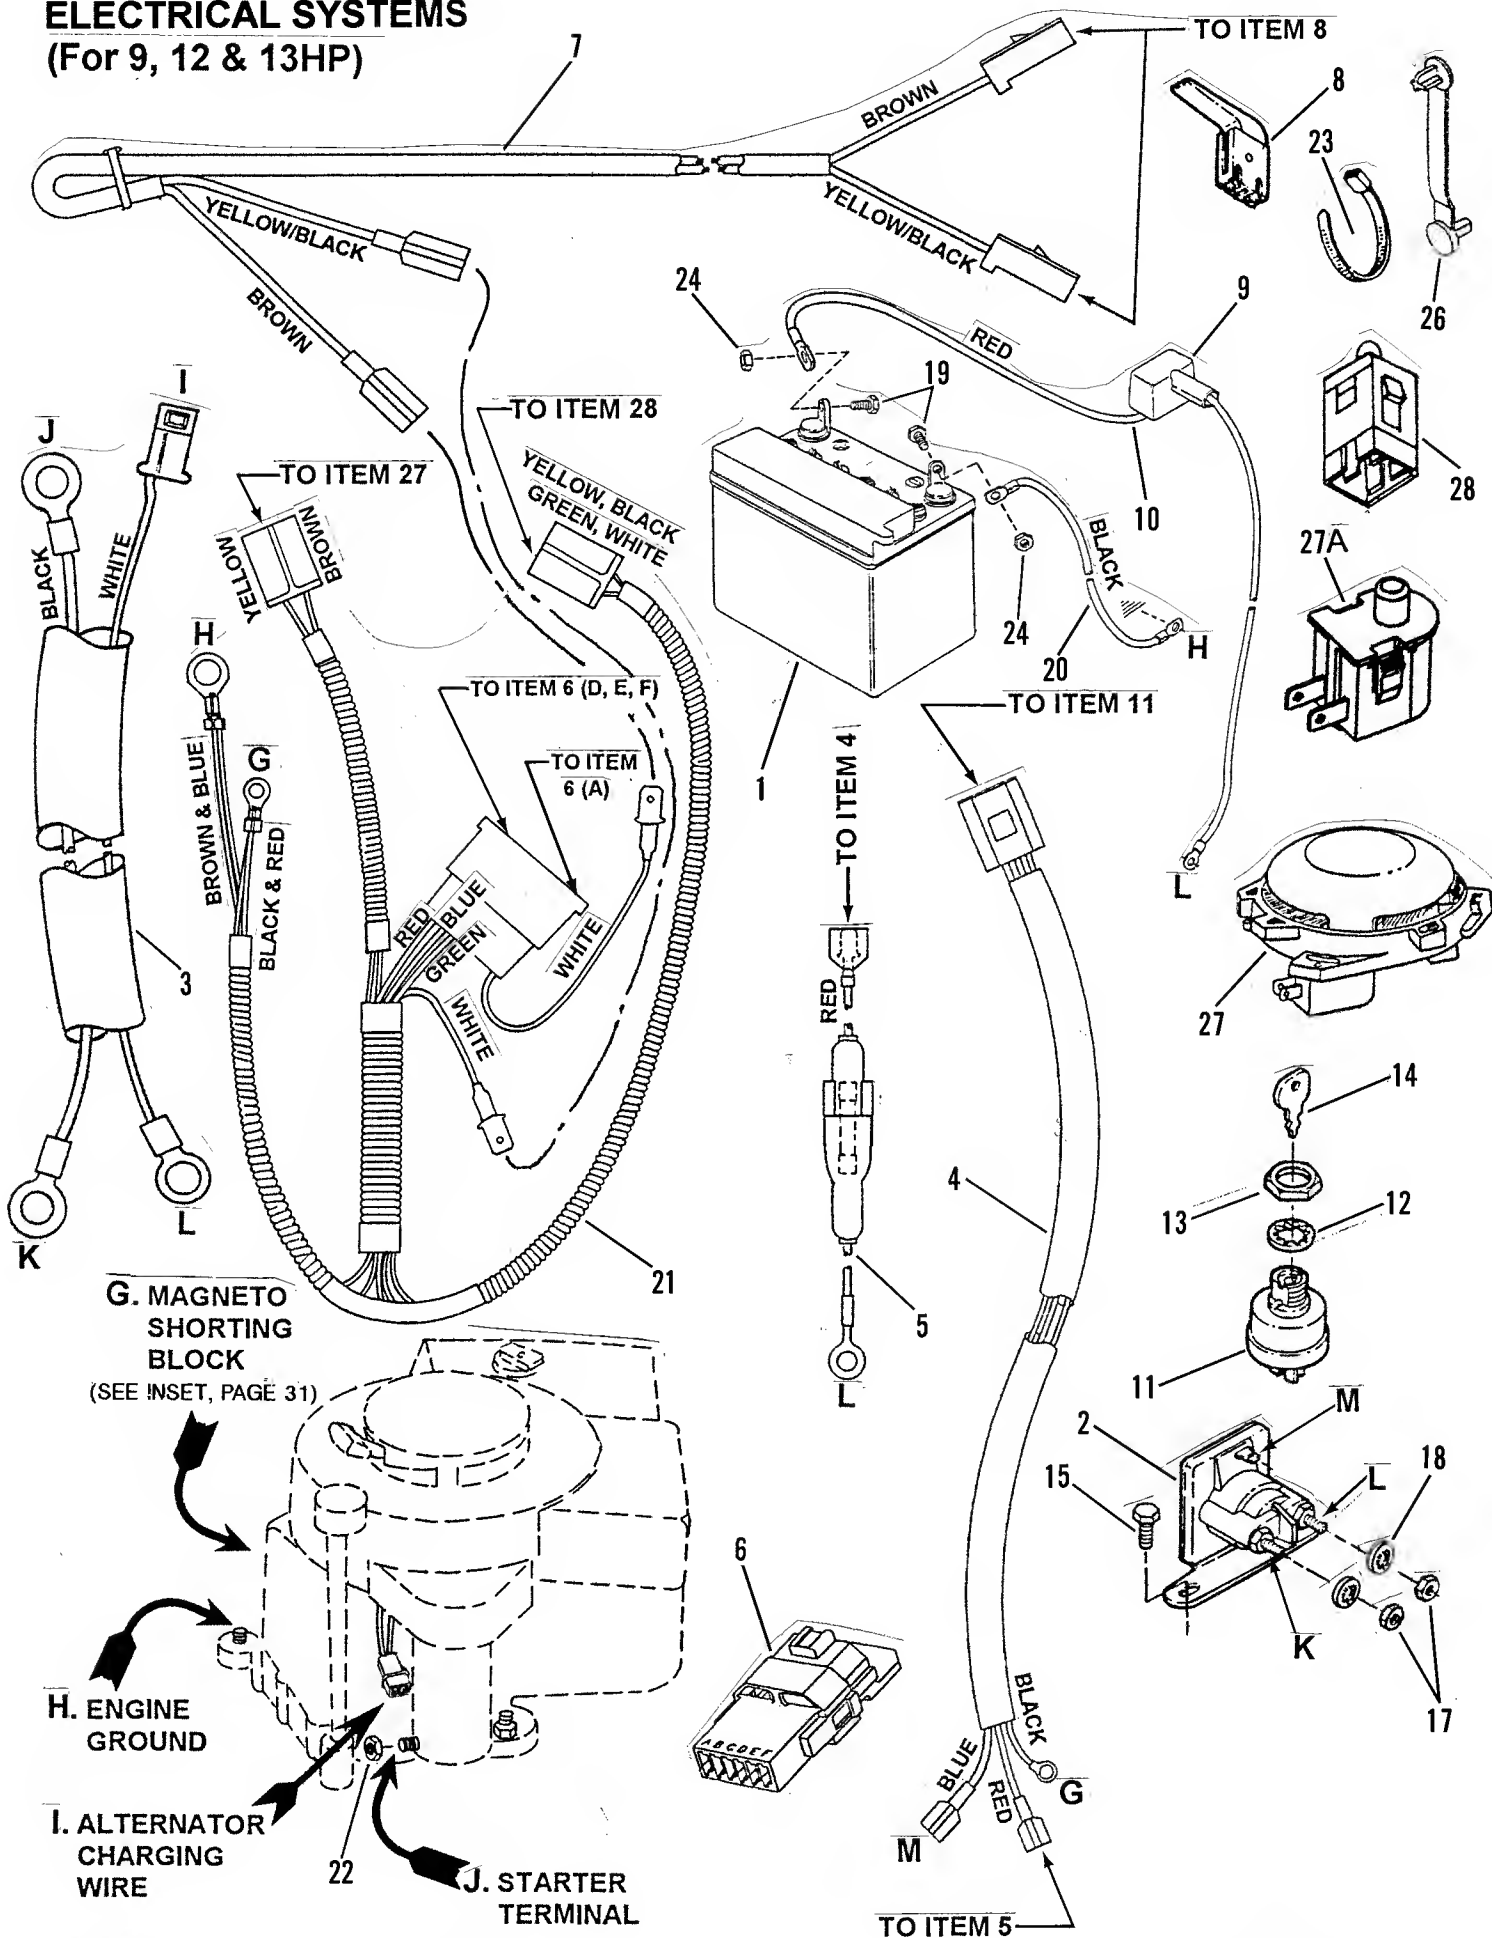





## ELECTRICAL SYSTEMS

(For 9, 12 & 13HP)

ITEM	PART NO.	DESCRIPTION
1	6-0753	KIT, 12V Dry Charge Battery
2	1-8817	SOLENOID
3	2-2788	HARNESS, Starter Wiring (Briggs)
4	1-9297	HARNESS, Ignition Wiring (Briggs)
5	1-6168	HOLDER, Fuse (Includes Fuse)
	1-6169	FUSE (10 AMP)
6	2-8606	INTERLOCK Module (Briggs)
7	2-8386	HARNESS, (Deck Interlock Wiring)
8	1-8524	SWITCH, Deck Interlock
9	1-2444	COVER, Battery Cable
10	1-9326	CABLE, Positive (Red)
11	1-8816	SWITCH, Ignition (Used With Electric Start)
12	9-0880	WASHER, 5/8 Internal Tooth Lock
13	1-5438	NUT, 5/8-32 Hex
14	1-1138	KEY, Switch (2)
15	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (3)
17	9-0063	NUT, 1/4-20 Hex (4)
18	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
19	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
20	2-8027	CABLE, Negative
21	2-8607	HARNESS, Operator Presence Control Wire
22	9-1576	NUT, 1/4-20 Hex
23	1-2080	TIE, 7" Long Cable (2)
24	9-0372	NUT, 1/4-20 Hex Lock (2)
26	1-4451	TIE, 2" Long Cable
27	2-9211	SWITCH, Seat (8 HP and 9 HP Engines)
27A	2-3354	SWITCH, Seat (12 HP and 14 HP Engines)
28	2-2886	SWITCH, Operator Presence Control Traction

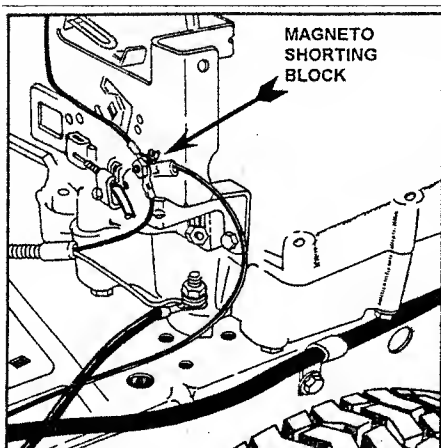


# ELECTRICAL SYSTEMS (For 14HP Briggs)

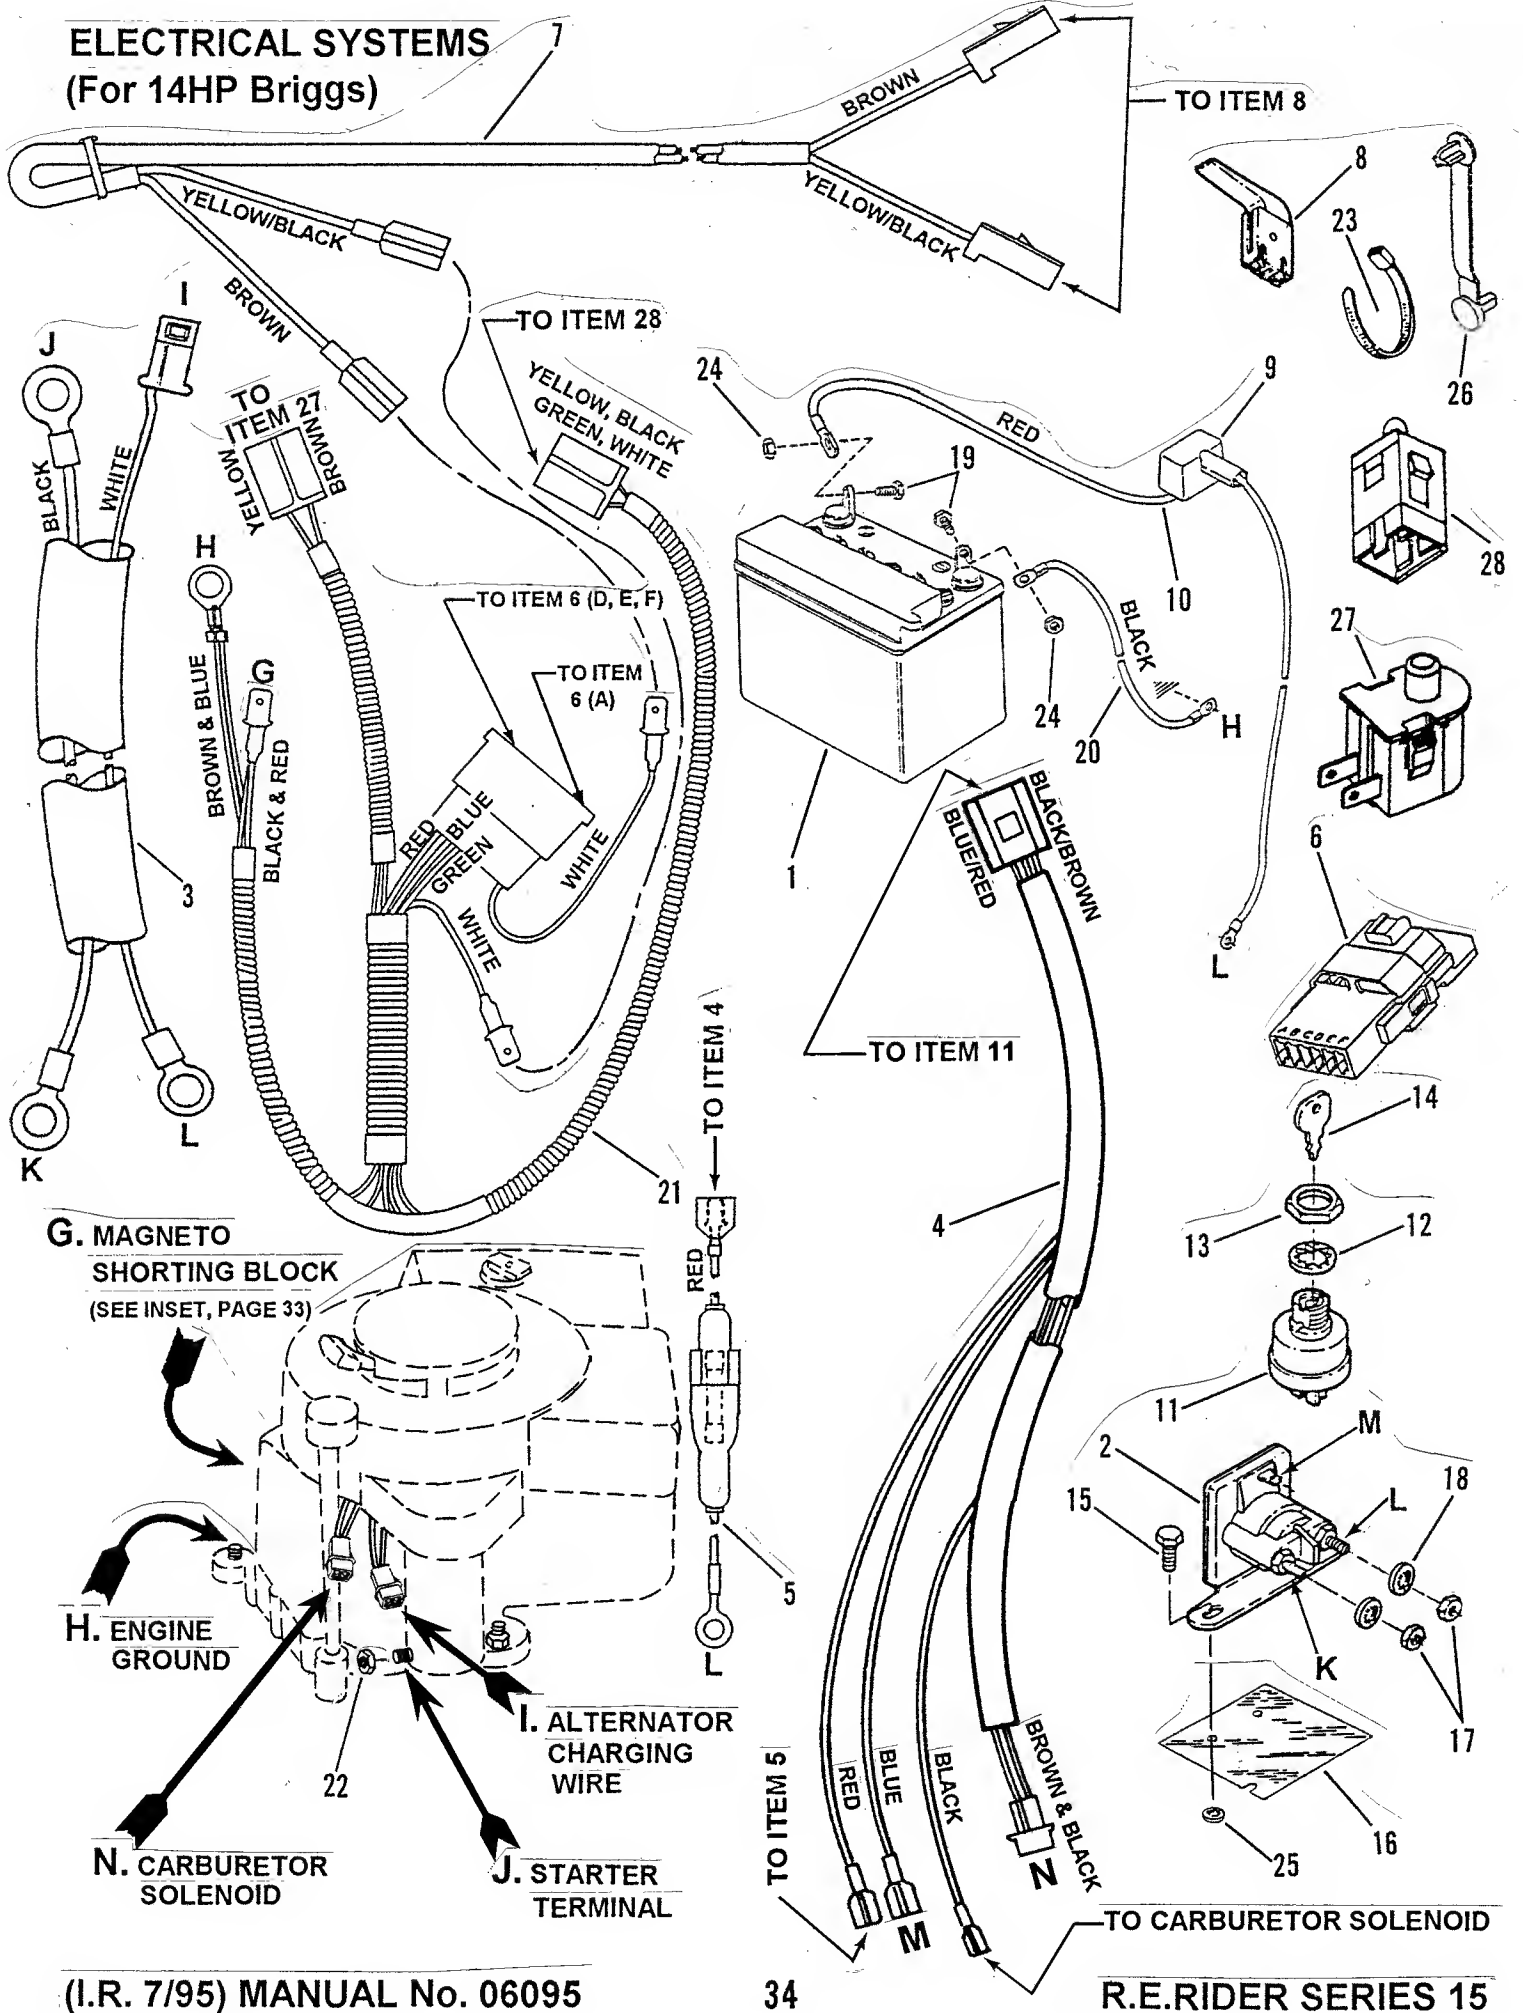

## ELECTRICAL SYSTEMS

(For 14HP Briggs)

ITEM	PART NO.	DESCRIPTION
1	6-0753	KIT, 12V Dry Charge Battery
2	1-8817	SOLENOID
3	2-2788	HARNESS, Starter Wiring (Briggs)
4	2-9194	HARNESS, Ignition Wiring (Briggs)
5	1-6168	HOLDER, Fuse (Includes Fuse)
	1-6169	FUSE (10 AMP)
6	2-8606	INTERLOCK Module (Briggs)
7	2-8386	HARNESS, (Deck Interlock Wiring)
8	1-8524	SWITCH, Deck Interlock
9	1-2444	COVER, Battery Cable
10	1-9326	CABLE, Positive (Red)
11	2-6343	SWITCH, Ignition (Used With Electric Start)
12	9-0880	WASHER, 5/8 Internal Tooth Lock
13	1-5438	NUT, 5/8-32 Hex
14	1-1138	KEY, Switch (2)
15	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (3)
16	2-2887	PROTECTOR, Solenoid
17	9-0063	NUT, 1/4-20 Hex (4)
18	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
19	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
20	2-8027	CABLE, Negative
21	2-8675	HARNESS, Operator Presence Control Wire
22	9-1576	NUT, 1/4-20 Hex
23	1-2080	TIE, 7" Long Cable (2)
24	9-0372	NUT, 1/4-20 Hex Lock (2)
25	1-2485	RETAINER, 1/4 Bolt (2)
26	1-4451	TIE, 2" Long Cable
27	2-3354	SWITCH, Seat
28	2-2886	SWITCH, Operator Presence Control Traction

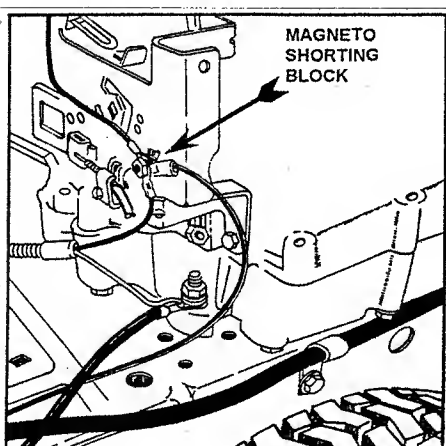

**(For 14 HP KOHLER)**

Diagram illustrating the wiring connections for a 14 HP Kohler engine, showing the battery, electronic control unit, starter terminal, and engine mounting plate. The diagram includes numerous numbered callouts (1-28) and color-coded wire labels (e.g., BROWN, YELLOW/BLACK, RED, BLACK, WHITE, BLUE, GREEN, BROWN & BLUE, BLACK & RED).

Key components and connections shown:

- Battery:** Connected to the engine mounting plate (1) and the electronic control unit (G).
- Electronic Control Unit (G):** Connected to the battery ground (I) and the engine ground (H).
- Starter Terminal (J):** Connected to the battery ground (I) and the engine mounting plate (1).
- Engine Mounting Plate (1):** The central component for the engine, connected to various wires and components.
- Wiring Connections:**
  - Item 1: Main engine wiring harness.
  - Item 2: Wire connecting to Item 5.
  - Item 3: Wire connecting to Item 4.
  - Item 4: Wire connecting to Item 5.
  - Item 5: Wire connecting to Item 6.
  - Item 6: Wire connecting to Item 7.
  - Item 7: Wire connecting to Item 8.
  - Item 8: Wire connecting to Item 9.
  - Item 9: Wire connecting to Item 10.
  - Item 10: Wire connecting to Item 11.
  - Item 11: Wire connecting to Item 12.
  - Item 12: Wire connecting to Item 13.
  - Item 13: Wire connecting to Item 14.
  - Item 14: Wire connecting to Item 15.
  - Item 15: Wire connecting to Item 16.
  - Item 16: Wire connecting to Item 17.
  - Item 17: Wire connecting to Item 18.
  - Item 18: Wire connecting to Item 19.
  - Item 19: Wire connecting to Item 20.
  - Item 20: Wire connecting to Item 21.
  - Item 21: Wire connecting to Item 22.
  - Item 22: Wire connecting to Item 23.
  - Item 23: Wire connecting to Item 24.
  - Item 24: Wire connecting to Item 25.
  - Item 25: Wire connecting to Item 26.
  - Item 26: Wire connecting to Item 27.
  - Item 27: Wire connecting to Item 28.


Additional labels and notes:

- H. ENGINE GROUND:** Indicated by a dashed line and arrow pointing to the engine ground connection.
- I. BATTERY GROUND:** Indicated by a dashed line and arrow pointing to the battery ground connection.
- TO ITEM 4:** Indicated by a dashed line and arrow pointing to the connection point for Item 4.
- TO ITEM 5:** Indicated by a dashed line and arrow pointing to the connection point for Item 5.
- TO ITEM 6 (D, E, F):** Indicated by a dashed line and arrow pointing to the connection point for Item 6.
- TO ITEM 6 (A):** Indicated by a dashed line and arrow pointing to the connection point for Item 6.
- TO ITEM 7:** Indicated by a dashed line and arrow pointing to the connection point for Item 7.
- TO ITEM 8:** Indicated by a dashed line and arrow pointing to the connection point for Item 8.
- TO ITEM 9:** Indicated by a dashed line and arrow pointing to the connection point for Item 9.
- TO ITEM 10:** Indicated by a dashed line and arrow pointing to the connection point for Item 10.
- TO ITEM 11:** Indicated by a dashed line and arrow pointing to the connection point for Item 11.
- TO ITEM 12:** Indicated by a dashed line and arrow pointing to the connection point for Item 12.
- TO ITEM 13:** Indicated by a dashed line and arrow pointing to the connection point for Item 13.
- TO ITEM 14:** Indicated by a dashed line and arrow pointing to the connection point for Item 14.
- TO ITEM 15:** Indicated by a dashed line and arrow pointing to the connection point for Item 15.
- TO ITEM 16:** Indicated by a dashed line and arrow pointing to the connection point for Item 16.
- TO ITEM 17:** Indicated by a dashed line and arrow pointing to the connection point for Item 17.
- TO ITEM 18:** Indicated by a dashed line and arrow pointing to the connection point for Item 18.
- TO ITEM 19:** Indicated by a dashed line and arrow pointing to the connection point for Item 19.
- TO ITEM 20:** Indicated by a dashed line and arrow pointing to the connection point for Item 20.
- TO ITEM 21:** Indicated by a dashed line and arrow pointing to the connection point for Item 21.
- TO ITEM 22:** Indicated by a dashed line and arrow pointing to the connection point for Item 22.
- TO ITEM 23:** Indicated by a dashed line and arrow pointing to the connection point for Item 23.
- TO ITEM 24:** Indicated by a dashed line and arrow pointing to the connection point for Item 24.
- TO ITEM 25:** Indicated by a dashed line and arrow pointing to the connection point for Item 25.
- TO ITEM 26:** Indicated by a dashed line and arrow pointing to the connection point for Item 26.
- TO ITEM 27:** Indicated by a dashed line and arrow pointing to the connection point for Item 27.
- TO ITEM 28:** Indicated by a dashed line and arrow pointing to the connection point for Item 28.

# ELECTRICAL SYSTEMS



## (For 14HP Kohler)

ITEM	PART NO.	DESCRIPTION
1	6-0753	KIT, 12V Dry Charge Battery
2	1-8817	SOLENOID
3	1-9321	HARNESS, Starter Wiring
4	1-9322	HARNESS, Ignition Wiring
5	1-6168	HOLDER, Fuse (Includes Fuse)
	1-6169	FUSE (10 AMP)
6	2-8677	INTERLOCK Module
7	2-8386	HARNESS, (Deck Interlock Wiring)
8	1-8524	SWITCH, Deck Interlock
9	1-2444	COVER, Battery Cable
10	1-9326	CABLE, Positive (Red)
11	1-8816	SWITCH, Ignition (Used With Electric Start)
12	9-0880	WASHER, 5/8 Internal Tooth Lock
13	1-5438	NUT, 5/8-32 Hex
14	1-1138	KEY, Switch (2)
15	9-0539	SCREW, 1/4-20 x 1/2" Self-Tapping (3)
16	2-2887	PROTECTOR, Solenoid
17	9-0063	NUT, 1/4-20 Hex (4)
18	9-0053	WASHER, 1/4 Internal Tooth Lock (2)
19	2-7172	SCREW, 1/4-20 x 5/8" Hex Head Cap (2)
20	2-8027	CABLE, Negative
21	2-8678	HARNESS, Operator Presence Control Wire
22	9-1576	NUT, 1/4-20 Hex
23	1-2080	TIE, 7" Long Cable (2)
24	9-0372	NUT, 1/4-20 Hex Lock (2)
25	1-2485	RETAINER, 1/4 Bolt (2)
26	1-4451	TIE, 2" Long Cable
27	2-3354	SWITCH, Seat
28	2-2886	SWITCH, Operator Presence Control Traction





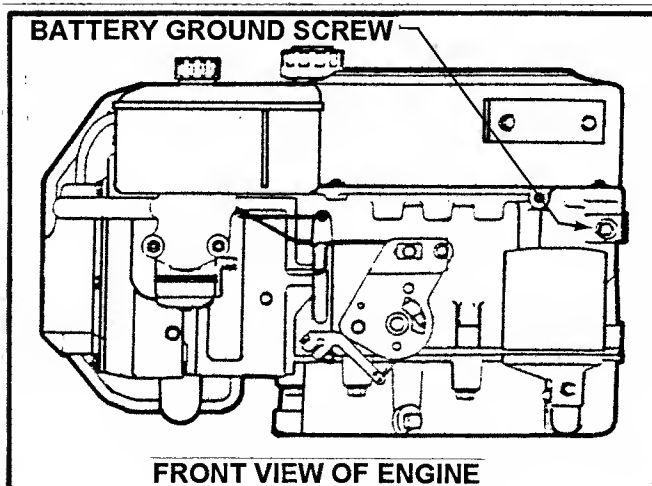


## SNAPPER REAR ENGINE RIDER ACCESSORIES

 PART NO.	DESCRIPTION OF KIT	MODELS USED ON
6-0517	Wheel Weight (8" Wheels)	All Rear Engine Riders
6-0601	Smooth Start Clutch	All Rear Engine Riders
6-0697	Dump Cart	All Rear Engine Riders
6-0737	Gauge Wheel	All 33" Deck Rear Engine Riders
6-0794	Gauge Wheel	All 41" & 42" Deck Rear Engine Riders
6-0941	Single Bag Catcher	All 25" Deck Rear Engine Riders
6-0942	Single Bag Catcher	All 26" & 30" Deck Rear Engine Riders
6-0943	Single Bag Catcher	All 28" & 33" Deck Rear Engine Riders
6-0944	Single Bag Catcher	All 41" & 42" Deck Rear Engine Riders
6-0945	Twin Bag Catcher	All 41" & 42" Deck Rear Engine Riders
6-0946	Twin Bag Catcher	All 28" & 33" Deck Rear Engine Riders
6-0947	Bag-N-Wagon	All 28" & 33" Deck Rear Engine Riders
6-0948	Thatcherizer	All Series 7 & Newer Riders
6-0964	Wagon Cover	All 28" & 33" Deck Rear Engine Riders
6-1190	Weight (Front)	All Series 7 & Newer Riders
6-0959	Dozer Blade (36" Blade)	All Rear Engine Riders
6-0357	Tire Chains (Tires-16 x 6.50-8)	All Rear Engine Riders
6-0358	Tire Chains (Tires-16 x 4.80-8)	All Rear Engine Riders
6-1049	Recycling (Cover)	All 25" Deck Rear Engine Riders
6-1253	Ninja Recycling (Cover)	All 28" Deck Rear Engine Riders
6-1254	Ninja Recycling (Cover)	All 30" Deck Rear Engine Riders
6-1255	Ninja Recycling (Cover)	All 33" Deck Rear Engine Riders
6-1220	Ninja Recycling (Cover)	All 41" & 42" Deck Rear Engine Riders

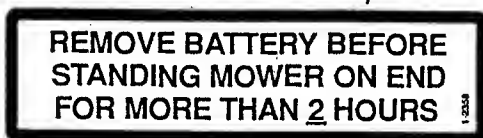

ITEM	PART NO.	DESCRIPTION
1	2-3992	DECAL, 25 Inch
2	2-3996	DECAL, 28 Inch
3	2-3997	DECAL, 30 Inch
4	2-2991	DECAL, 33 Inch
5	1-2358	DECAL, Battery
6	1-6974	SNAPPER, (Molded Logo)
7	3-4134	LOGO, Convertible (Silver) (25" & 3009 Models)
--	2-4068	LOGO, Convertible (Teal) (28" Models)
--	2-4067	LOGO, Convertible (Blue) (33" Models)
8	2-6419	DECAL, Height of Cut
9	2-3980	DECAL, Back-Up Recoil (30" & 33" Kohler Models)
10	2-3982	DECAL, OHV (30" & 33" Kohler Models)
11	2-9453	MEDALLION, Sam

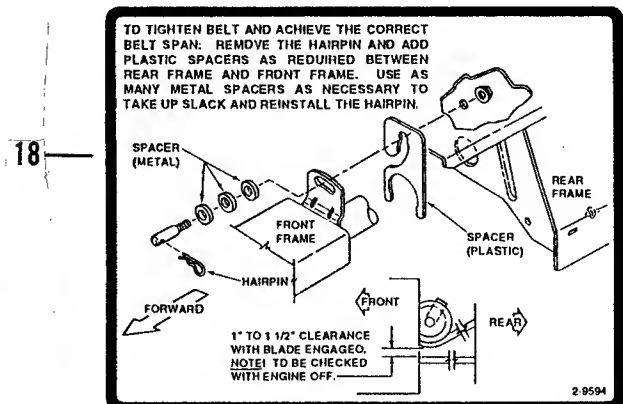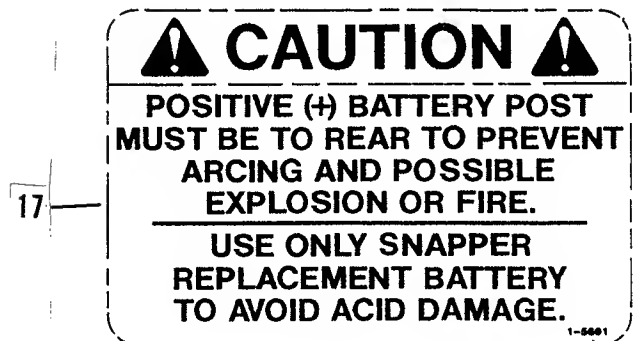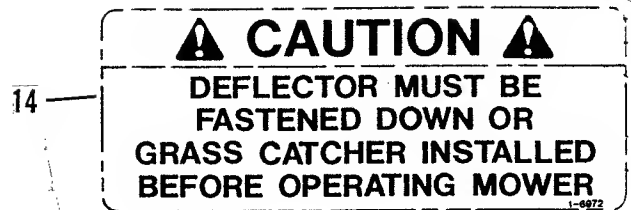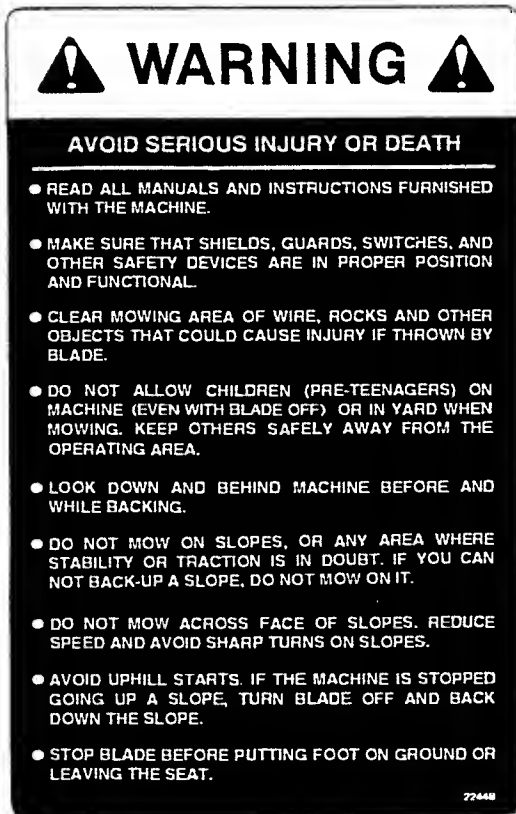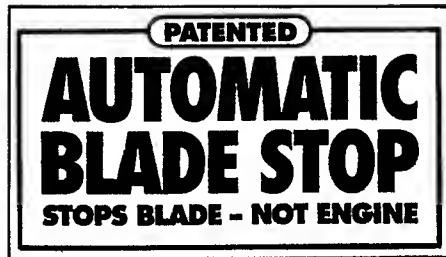





---

ITEM	PART NO.	DESCRIPTION
11	2-3983	DECAL, 14 HP (30" & 33" Kohler Models)
12	2-4072	DECAL, Auto Blade Stop (Point of Purchase Decal)
13	2-2448	DECAL, Safety Instruction Warning
14	1-6972	DECAL, Caution Deflector
15	1-6973	DECAL, Caution Rotating Blades
16	1-3010	DECAL, Danger
17	1-5691	DECAL, Caution Battery
18	2-9594	DECAL, Belt Adjustment (used on 25" models)
*	2-8097	DECAL, SR825
*	2-9669	DECAL, SR928
*	2-9670	DECAL, SR930)
*	2-7780	LOGO, SR1230 (Molded Logo)
*	2-7788	LOGO, SR1333 (Molded Logo)
*	2-7782	LOGO, SR1433 (Molded Logo)
*	2-4042	DECAL, Banner Stripe (Silver) (25" Models)
*	2-4043	DECAL, Banner Stripe (Teal) (28" Models)
*	2-4045	DECAL, Banner Stripe (Blue) (30" Models)
*	2-4001	DECAL, Bumper Stripe (Silver) (25" Models)
*	2-4002	DECAL, Bumper Stripe (Teal) (30" Models)
*	2-4004	DECAL, Bumper Stripe (Blue) (30" Kohler & 33" Models)
*	2-8100	DECAL, Bumper Stripe (Silver) (30" Models)
19	2-9113	DECAL, Caution Fuel
20	1-4000	BOOK, Safety
21	1-5534	BOOKLET, Snapper Versus Dirt
22	2-8603	OPERATOR'S Manual/Safety Instruction

**\*NOTE:** These items not shown. The description is the visual identification.

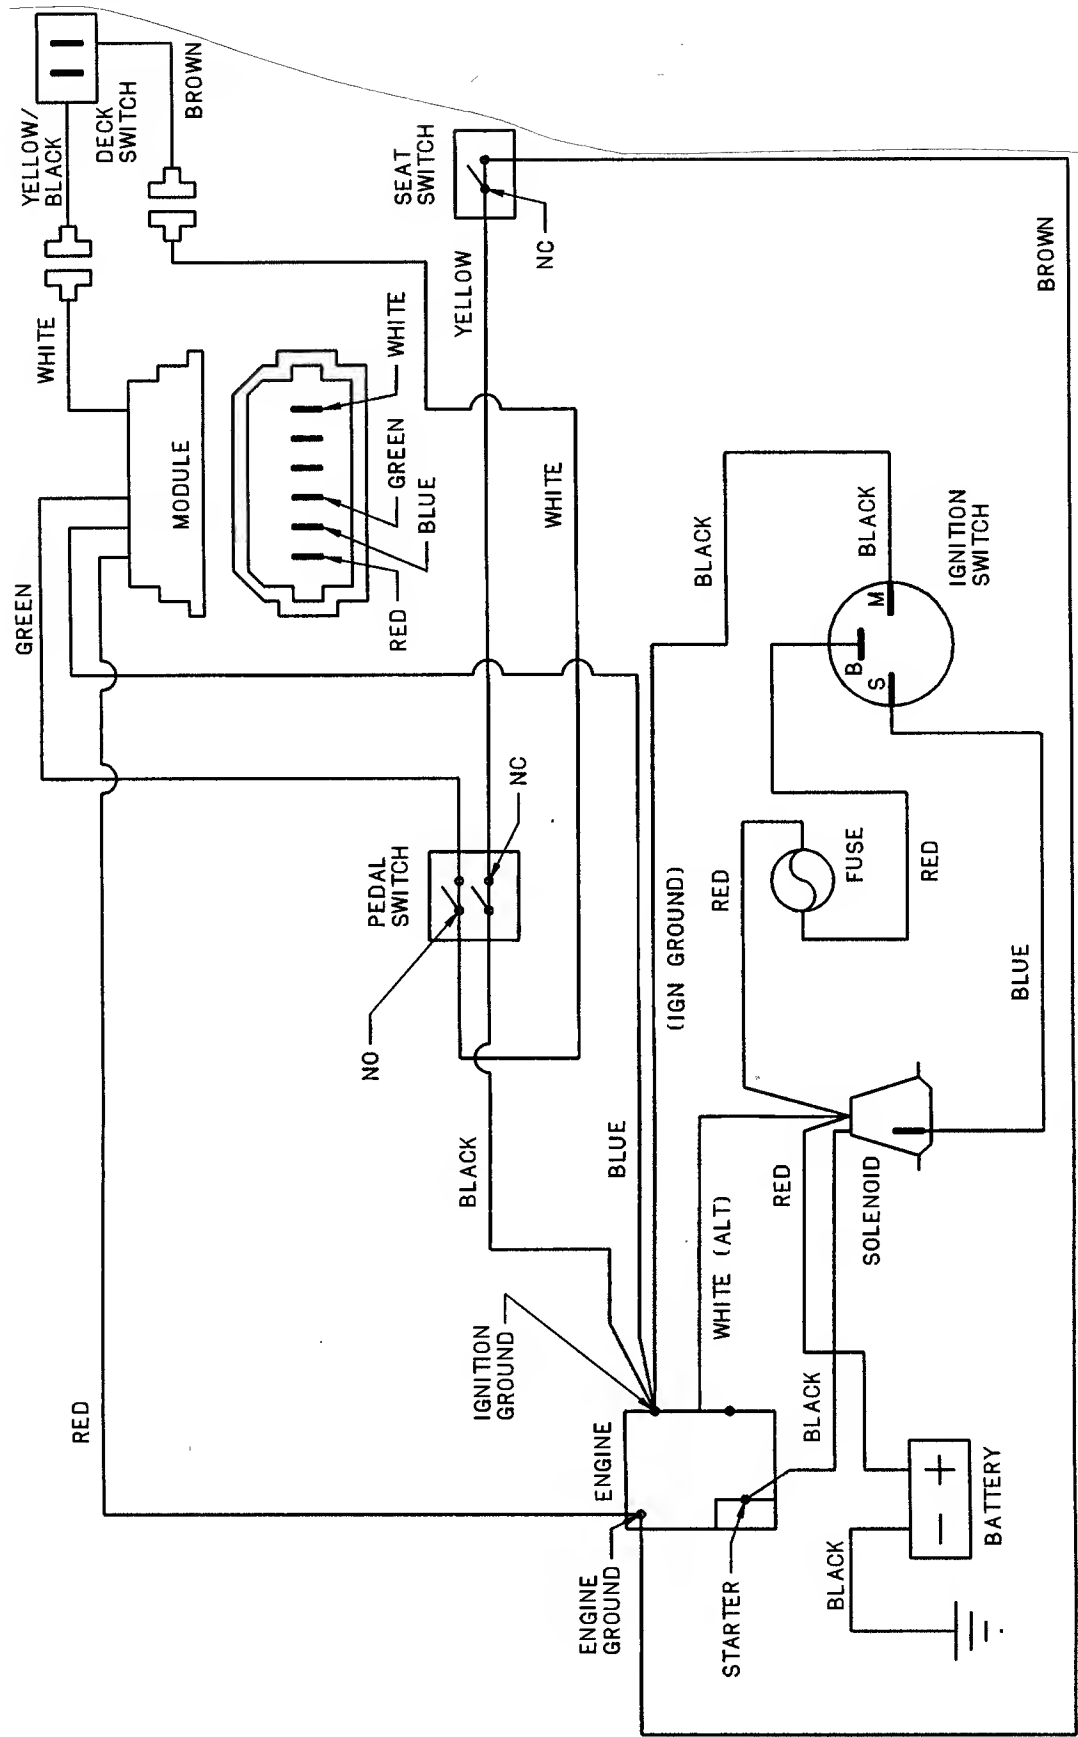


WIRING SCHEMATIC FOR 9, 10, 12 AND 16HP BRIGGS

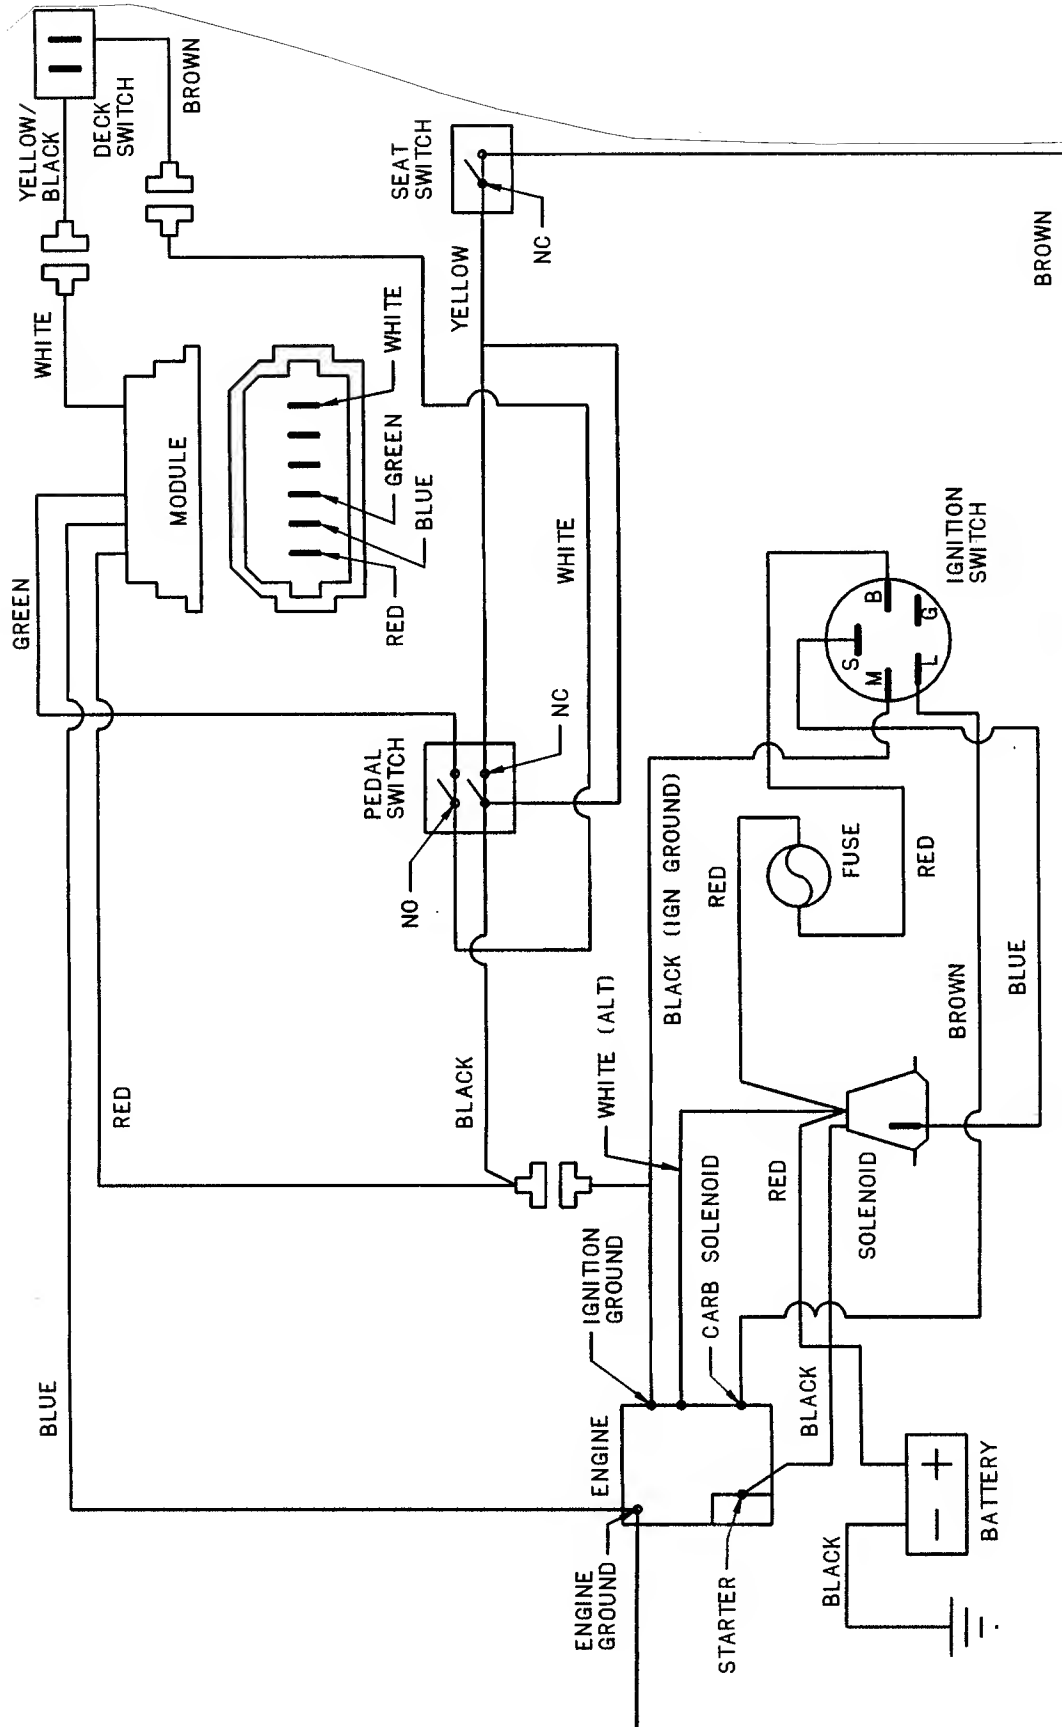


WIRING SCHEMATIC FOR 14HP BRIGGS

# WIRING SCHEMATICS

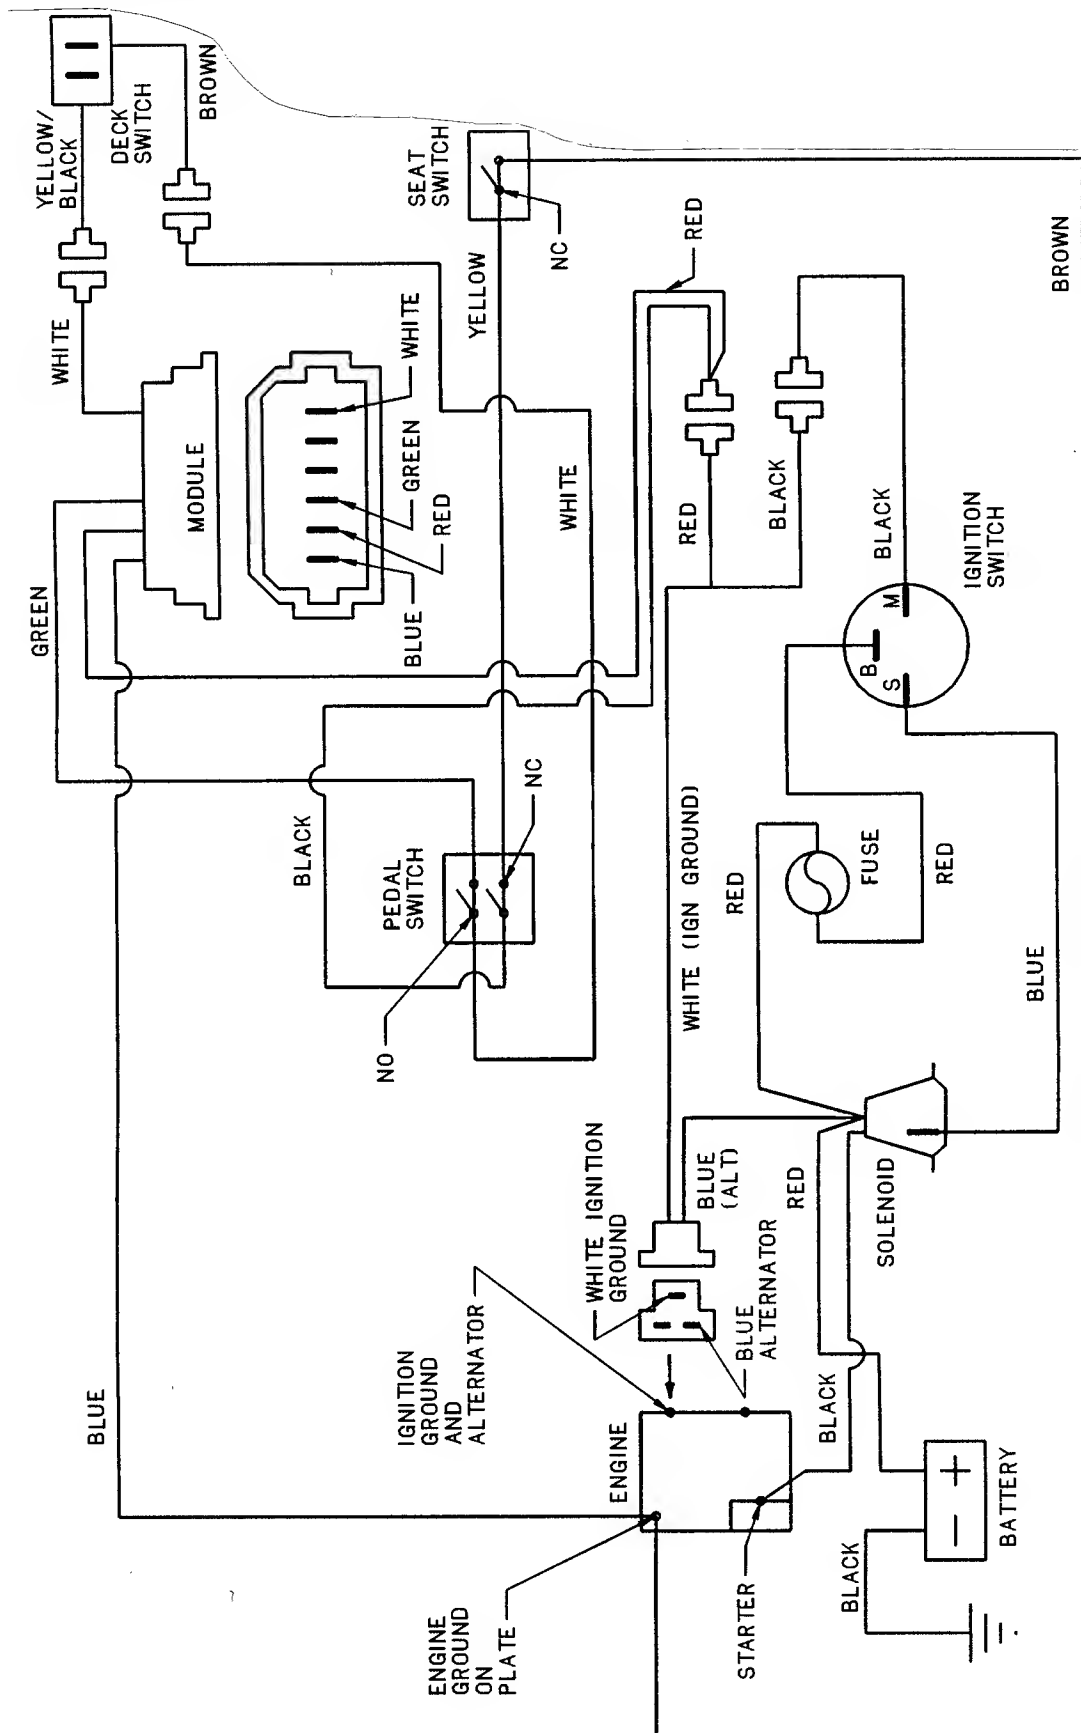

WIRING SCHEMATIC FOR 14HP KOHLER

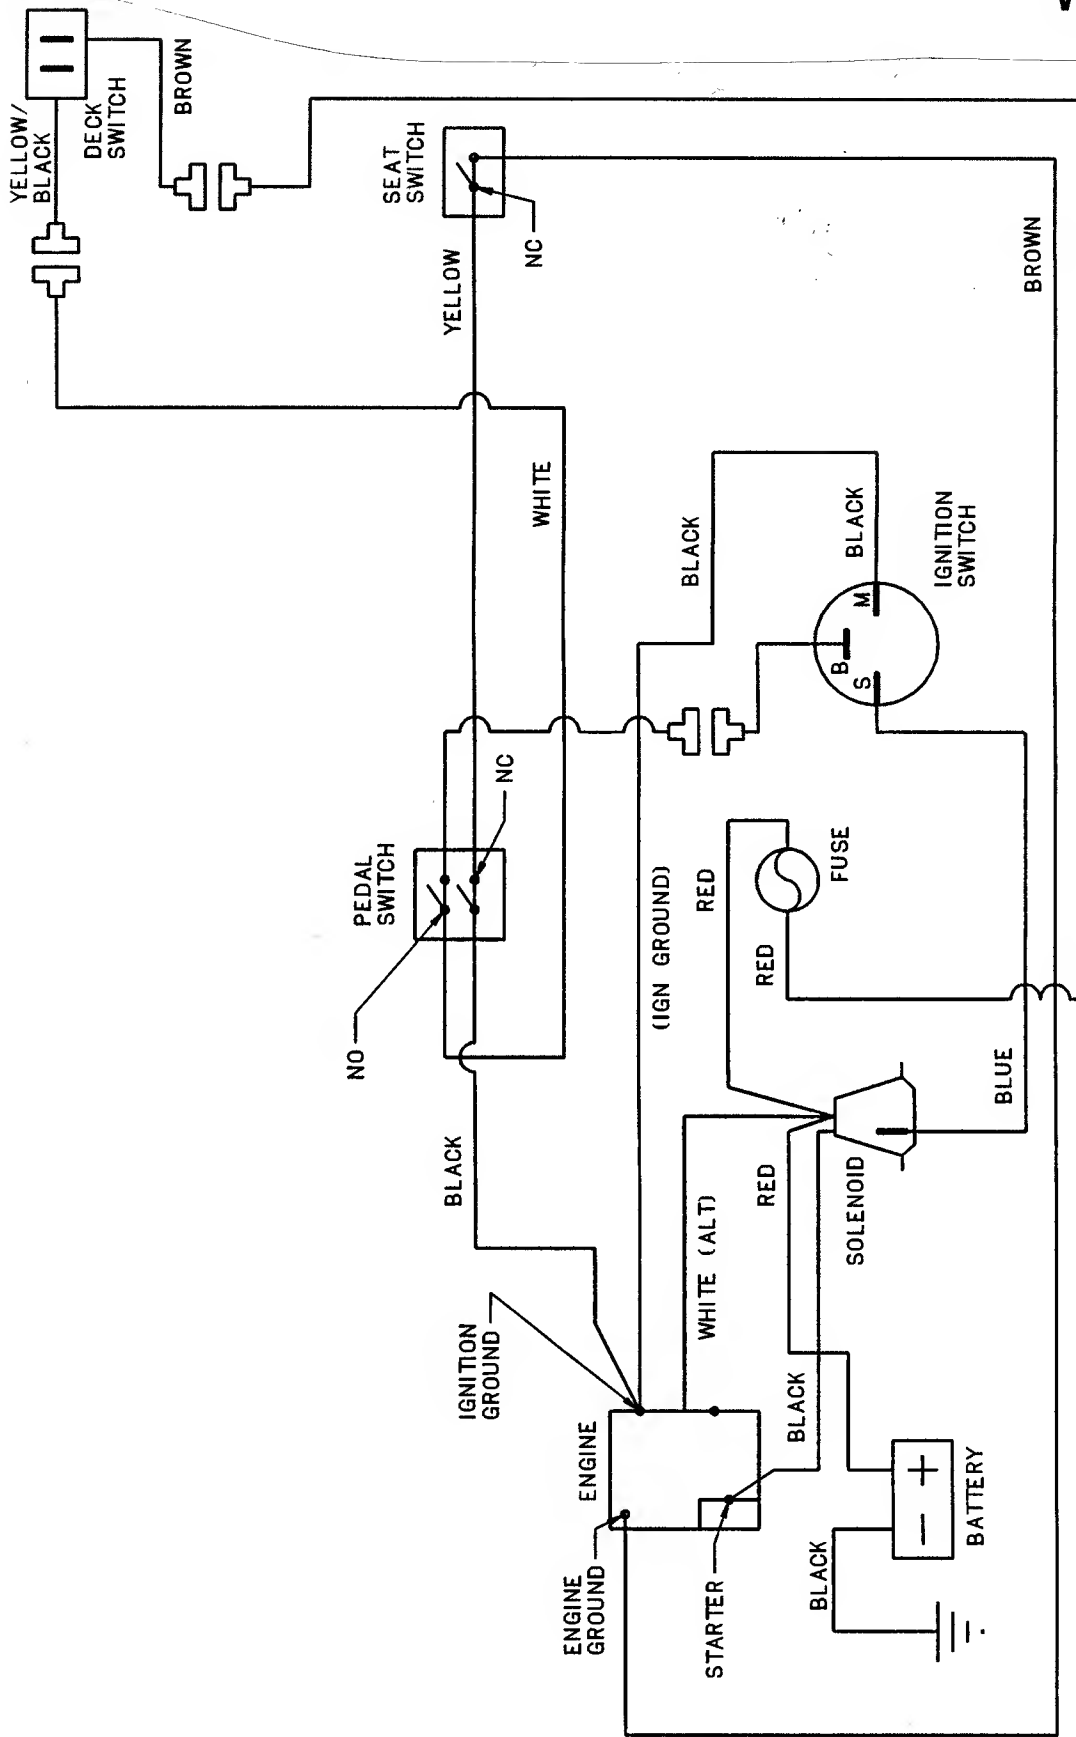

## WIRING SCHEMATIC FOR 8HP BRIGGS

**PARTS MANUAL FOR**

**SNAPPER®**

**REAR ENGINE RIDER**

**SERIES 15**

**MODELS**

**250815B**

**250815BE**

**280915BE**

**300915BE**

**301215BE**

**331415BVE**

**331414KVE**